TOSHIBA

FILE NO. 140-200324

SERVICE MANUAL

COLOR TELEVISION/ DVD VIDEO PLAYER

MD13N1C
MD13N1R

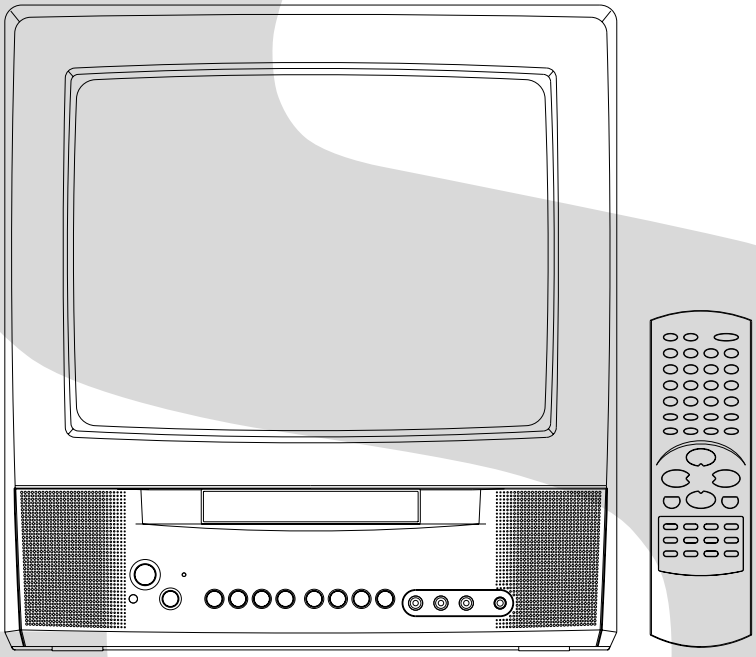

DOCUMENT CREATED IN JAPAN, Jun., 2003

CAUTION

THIS DIGITAL VIDEO PLAYER EMPLOYS A LASER SYSTEM.

TO ENSURE PROPER USE OF THIS PRODUCT, PLEASE READ THIS SERVICE MANUAL CAREFULLY AND RETAIN FOR FUTURE REFERENCE. SHOULD THE UNIT REQUIRE MAINTENANCE, CONTACT AN AUTHORIZED SERVICE LOCATION-SEE SERVICE PROCEDURE.

USE OF CONTROLS, ADJUSTMENTS OR THE PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

TO PREVENT DIRECT EXPOSURE TO LASER BEAM, DO NOT TRY TO OPEN THE ENCLOSURE. VISIBLE LASER RADIATION MAY BE PRESENT WHEN THE ENCLOSURE IS OPENED. DO NOT STARE INTO BEAM.

Location of the required Marking
The rating sheet and the safety caution are on the rear of the unit.

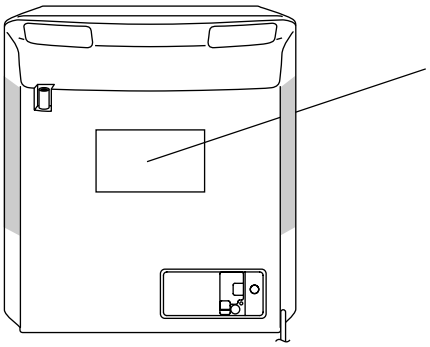

SERVICING NOTICES ON CHECKING

1. KEEP THE NOTICES

As for the places which need special attentions, they are indicated with the labels or seals on the cabinet, chassis and parts. Make sure to keep the indications and notices in the operation manual.

2. AVOID AN ELECTRIC SHOCK

There is a high voltage part inside. Avoid an electric shock while the electric current is flowing.

3. USE THE DESIGNATED PARTS

The parts in this equipment have the specific characters of incombustibility and withstand voltage for safety. Therefore, the part which is replaced should be used the part which has the same character.
Especially as to the important parts for safety which is indicated in the circuit diagram or the table of parts as a ⚠ mark, the designated parts must be used.

4. PUT PARTS AND WIRES IN THE ORIGINAL POSITION AFTER ASSEMBLING OR WIRING

There are parts which use the insulation material such as a tube or tape for safety, or which are assembled in the condition that these do not contact with the printed board. The inside wiring is designed not to get closer to the pyrogenic parts and high voltage parts. Therefore, put these parts in the original positions.

5. TAKE CARE TO DEAL WITH THE CATHODE-RAY TUBE

In the condition that an explosion-proof cathode-ray tube is set in this equipment, safety is secured against implosion. However, when removing it or serving from backward, it is dangerous to give a shock. Take enough care to deal with it.

6. AVOID AN X-RAY

Safety is secured against an X-ray by considering about the cathode-ray tube and the high voltage peripheral circuit, etc.
Therefore, when repairing the high voltage peripheral circuit, use the designated parts and make sure not modify the circuit.
Repairing except indicates causes rising of high voltage, and it emits an X-ray from the cathode-ray tube.

7. PERFORM A SAFETY CHECK AFTER SERVICING

Confirm that the screws, parts and wiring which were removed in order to service are put in the original positions, or whether there are the portions which are deteriorated around the serviced places serviced or not. Check the insulation between the antenna terminal or external metal and the AC cord plug blades. And be sure the safety of that.

(INSULATION CHECK PROCEDURE)

1. Unplug the plug from the AC outlet.
2. Remove the antenna terminal on TV and turn on the TV.
3. Insulation resistance between the cord plug terminals and the eternal exposure metal **[Note 2]** should be more than 1M ohm by using the 500V insulation resistance meter **[Note 1]**.
4. If the insulation resistance is less than 1M ohm, the inspection repair should be required.

[Note 1]

If you have not the 500V insulation resistance meter, use a Tester.

[Note 2]

External exposure metal: Antenna terminal
Earphone jack

HOW TO ORDER PARTS

Please include the following informations when you order parts. (Particularly the VERSION LETTER.)

1. MODEL NUMBER and VERSION LETTER
   The MODEL NUMBER can be found on the back of each product and the VERSION LETTER can be found at the end of the SERIAL NUMBER.
2. PART NO. and DESCRIPTION
   You can find it in your SERVICE MANUAL.

IMPORTANT SAFEGUARDS

1. **READ INSTRUCTIONS**
   All the safety and operating instructions should be read before the unit is operated.
2. **RETAIN INSTRUCTIONS**
   The safety and operating instructions should be retained for future reference.
3. **HEED WARNINGS**
   All warnings on the unit and in the operating instructions should be adhered to.
4. **FOLLOW INSTRUCTIONS**
   All operating and use instructions should be followed.
5. **CLEANING**
   Unplug this unit from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
6. **ATTACHMENTS**
   Do not use attachments not recommended by the unit's manufacturer as they may cause hazards.
7. **WATER AND MOISTURE**
   Do not use this unit near water. For example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
8. **ACCESSORIES**
   Do not place this unit on an unstable cart, stand, tripod, bracket, or table. The unit may fall, causing serious injury, and serious damage to the unit. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer.

PORTABLE CART WARNING
(symbol provided by RETAC)

S3126A

8A. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.

9. **VENTILATION**
   Slots and openings in the cabinet and in the back or bottom are provided for ventilation, to ensure reliable operation of the unit, and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the unit on a bed, sofa, rug, or other similar surface. This unit should never be placed near or over a radiator or heat source. This unit should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
10. **POWER SOURCES**
    This unit should be operated only from the type of power source indicated on the rating plate. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For units intended to operate from battery power, or other sources, refer to the operating instructions.
11. **GROUNDING OR POLARIZATION**
    This unit is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug. If your unit is equipped with a 3-wire grounding-type plug, a plug having a third (grounding) pin, this plug will only fit into a grounding-type power outlet. This too, is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.
12. **POWER-CORD PROTECTION**
    Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.
13. **LIGHTNING**
    To protect your unit from a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the unit due to lightning and power line surges.
14. **POWER LINES**
    An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits, as contact with them might be fatal.
15. **OVERLOADING**
    Do not overload wall outlets and extension cords, as this can result in a risk of fire or electric shock.
16. **OBJECT AND LIQUID ENTRY**
    Do not push objects through any openings in this unit, as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid into the unit.
17. **OUTDOOR ANTENNA GROUNDING**
    If an outside antenna or cable system is connected to the unit, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, ANSI/NFPA 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.
18. **SERVICING**
    Do not attempt to service this unit yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

19. DAMAGE REQUIRING SERVICE

Unplug this unit from the wall outlet and refer servicing to qualified service personnel under the following conditions:

a. When the power-supply cord or plug is damaged.
b. If liquid has been spilled, or objects have fallen into the unit.
c. If the unit has been exposed to rain or water.
d. If the unit does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the unit to its normal operation.
e. If the unit has been dropped or the cabinet has been damaged.
f. When the unit exhibits a distinct change in performance, this indicates a need for service.

20. REPLACEMENT PARTS

When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original parts.
Unauthorized substitutions may result in fire, electric shock or other hazards.

21. SAFETY CHECK

Upon completion of any service or repairs to this unit, ask the service technician to perform safety checks to determine that the unit is in proper operating condition.

22. WALL OR CEILING MOUNTING

The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

23. HEAT

The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

24. DISC TRAY

Keep your fingers well clear of the disc tray as it is closing. It may cause serious personal injury.

25. CONNECTING

When you connect the product to other equipment, turn off the power and unplug all of the equipment from the wall outlet. Failure to do so may cause an electric shock and serious personal injury. Read the owner's manual of the other equipment carefully and follow the instructions when making any connections.

26. SOUND VOLUME

Reduce the volume to the minimum level before you turn on the product. Otherwise, sudden high volume sound may cause hearing or speaker damage.

27. SOUND DISTORTION

Do not allow the product output distorted sound for a longtime. It may cause speaker overheating and fire.

28. HEADPHONES

When you use the headphones, keep the volume at a moderate level. If you use the headphones continuously with high volume sound, it may cause hearing damage.

29. LASER BEAM

Do not look into the opening of the disc tray or ventilation opening of the product to see the source of the laser beam. It may cause sight damage.

30. DISC

Do not use a cracked, deformed, or repaired disc. These discs are easily broken and may cause serious personal injury and product malfunction.

31. NOTE TO CATV SYSTEM INSTALLER

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

EXAMPLE OF ANTENNA GROUNDING AS PER THE NATIONAL ELECTRICAL CODE

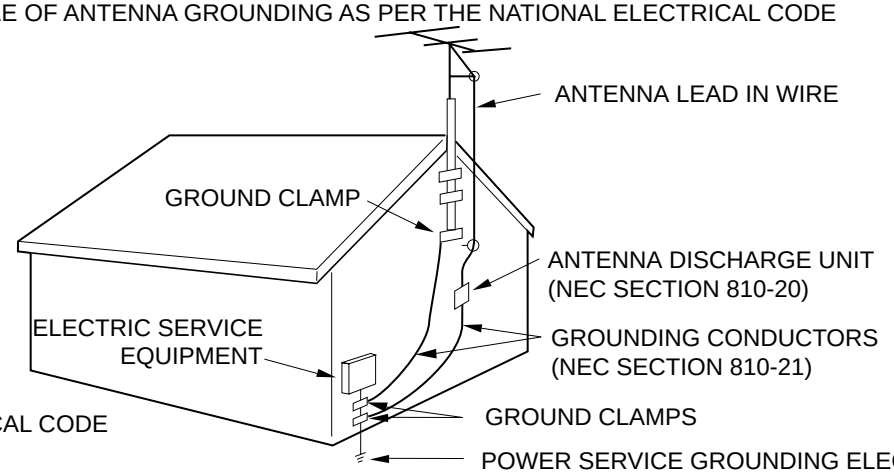

NEC-NATIONAL ELECTRICAL CODE

S2898A

DISC REMOVAL METHOD AT NO POWER SUPPLY

1. Remove the Back Cabinet and AV PCB/DVD Block. **(Refer to item 1 of the DISASSEMBLY INSTRUCTIONS.)**
2. Slide the Rack Loading (White) toward the arrow direction by using a minus driver to release the lock. **(Refer to Fig. 1)**
3. Draw the Tray.

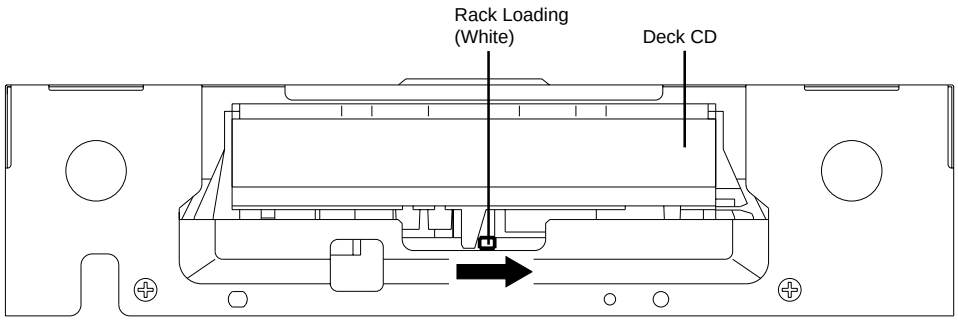

Fig. 1

PARENTAL CONTROL - RATING LEVEL

4 DIGIT PASSWORD CANCELLATION

If the stored 4 digit password in the Rating Level menu needs to be cancelled, please follow the steps below.

1. Turn Unit ON.
2. Press and hold the 'STOP' key on the front panel.
3. Simultaneously press and hold the '7' key on the remote control unit.
4. Hold both keys for more than 3 seconds.
5. The On Screen Display message 'PASSWORD CLEAR' will appear.
6. The 4 digit password has now been cleared.

NB: The above procedure will reset ALL of the player's settings to the default factory state.

TRAY LOCK

Tray cannot be opened by setting the Tray Lock, please follow the steps below.

1. Turn Unit ON.
2. Set the DVD to the Stop Mode.
3. Press and hold the '9' key on the remote control unit.
4. Simultaneously press and hold the 'STOP' key on the front panel.
5. Hold both keys for more than 3 seconds.
6. Press the OPEN/CLOSE key on the front panel to check the Tray Lock setting.

NB: No indications on the screen when the Tray Lock is setting.

To unlock the Tray Lock, please follow the steps below.

1. Turn Unit ON.
2. Set the DVD to the Stop Mode.
3. Set the VOLUME to minimum.
4. Press and hold the 'VOL. DOWN' button on the front panel.
5. Simultaneously press and hold the '4' key on the remote control unit.
6. Hold both keys for more than 1 second.
7. The On Screen Display message 'INITALIZE5 COMPLETE' will appear.
8. The Tray Lock has now been cleared.

NB: The above procedure will reset ALL of the player's settings to the default factory state.

TABLE OF CONTENTS

CAUTION A1-1
SERVICING NOTICE ON CHECKING A1-2
HOW TO ORDER PARTS A1-2
IMPORTANT SAFEGUARDS A1-3, A1-4
DISC REMOVAL METHOD AT NO POWER SUPPLY A1-5
PARENTAL CONTROL-RATING LEVEL A1-5
TRAY LOCK A1-5
TABLE OF CONTENTS A2-1
GENERAL SPECIFICATIONS ..... A3-1~A3-12
DISASSEMBLY INSTRUCTIONS
1.REMOVAL OF MECHANICAL PARTS AND P.C. BOARDS B1-1, B1-2
2.REMOVAL OF DVD DECK PARTS ..... B2-1~B2-4
3.REMOVAL OF ANODE CAP B3-1
4.REMOVAL AND INSTALLATION OF FLAT PACKAGE IC B4-1, B4-2
SERVICE MODE LIST C-1
CONFIRMATION OF USING HOURS C-1
WHEN REPLACING EEPROM(MEMORY) IC C-2
ELECTRICAL ADJUSTMENTS ..... D-1~D-6
BLOCK DIAGRAMS
DVD ST SOLUTION E-1, E-2
TV E-3, E-4
POWER E-5, E-6
PRINTED CIRCUIT BOARDS
DVD F-1, F-2
AV/CRT ..... F-3~F-6
SCHEMATIC DIAGRAMS
RF_AMP/DSP G-1, G-2
MOTOR DRIVE G-3, G-4
MPEG G-5, G-6
MEMORY G-7, G-8
AUDIO/VIDEO G-9, G-10
REGULATOR2 ..... G-11, G-12
REGULATOR G-13, G-14
MICON/TUNER G-15, G-16
VIF/SIF/CHROMA G-17, G-18
SOUND AMP G-19, G-20
IN/OUT G-21, G-22
STEREO G-23, G-24
DEFLECTION G-25, G-26
CRT G-27, G-28
POWER G-29, G-30
SW/RELAY/FG G-31, G-32
INTERCONNECTION DIAGRAM G-33, G-34
WAVEFORMS ..... H-1~H-3
MECHANICAL EXPLODED VIEW I1-1, I1-2
DVD DECK EXPLODED VIEW I2-1
MECHANICAL REPLACEMENT PARTS LIST J1-1
DVD DECK REPLACEMENT PARTS LIST J2-1
ELECTRICAL REPLACEMENT PARTS LIST ..... J3-1~J3-5

GENERAL SPECIFICATIONS
(MD13N1R)

G-1	**TV System**	CRT	CRT Size / Visual Size		13 inch / 335.4 mmV
			CRT Type		Normal
			Deflection		90 degree
			Magnetic Field BV/BH		+0.45G / 0.18G
		Color System			NTSC
		Speaker			2 Speaker
			Position		Front
			Size		1.5 x 2.7 inch
			Impedance		8 ohm
		Sound Output	Max		1.5W + 1.5W
			10%(Typical)		1.0W + 1.0W
G-2	**DVD System**	Color System			NTSC
		Disc			DVD, CD-DA, CD-R/RW, Video CD
		Disc Diameter			120 mm , 80 mm
		Deck	Disc Loading System		Front Loading
			Motor		2 Motors
		Pick up			1-Lens 2-Beams System
		Playback time(Max)	DVD 1-Layer		135min (4.7GB)
			DVD 2-Layer		245min (8.5GB)
			CD		74min
			Video CD		74min
		Search speed			Fwd 2-15 times / 4 step (DVD, Video CD)
					2-20 times / 4 step (CD)
				Actual	2-45 times (DVD, Video CD)
					4-40 times (CD)
					Rev 2-15 times / 4 step (DVD, Video CD)
					2-20 times / 4 step (CD)
				Actual	2-45 times (DVD, Video CD)
					4-40 times (CD)
		Slow speed			Fwd 1/8-1/2 times
				Actual	--
					Rev 1/8-1/2 times
				Actual	--
G-3	**Tuning System**	Broadcasting System			US System M
		Tuner and Receive CH	System		1Tuner
			Destination		US(w/CATV)
			Tuning System		F-Synth
			Input Impedance		VHF/UHF 75 Ohm
			CH Coverage		2~69, 4A, A-5~A-1, A~I, J~W, W+1~W+84
		Intermediate Frequency	Picture(FP)		45.75MHz
			Sound(FS)		41.25MHz
			FP-FS		4.50MHz
		Preset CH			No
		Stereo/Dual TV Sound			US-Stereo
		Tuner Sound Muting			Yes
G-4	**Signal**	Video Signal	Input Level		1 V p-p/75 ohm
			Output Level		--
			S/N Ratio (Weighted)		--
			Horizontal Resolution at DVD Mode		--
					--
		RGB Signal	Output Level		--
		Audio Signal	Input Level		-8.0dBm/50k ohm
			Output Level		--
			Digital Output Level		0.5 V p-p/75 ohm
			S/N Ratio at DVD (Weighted)		--
			Harmonic Distortion		--
			Frequency Response :	at DVD	--
				at Video CD	--
				at SVCD	--
				at CD	--
G-5	**Power**	Power Source	AC		120V, 60Hz
			DC		--
		Power Consumption		at AC	75W at 120V 60Hz
				at DC	--
			Stand by (at AC)		5W at 120V 60Hz
			Per Year		-- kWh/Year
		Protector	Power Fuse		Yes
G-6	**Regulation**		Safety		UL
			Radiation		FCC
			X-Radiation		DHHS
			Laser		DHHS

GENERAL SPECIFICATIONS
(MD13N1R)

G-7	**Temperature**			Operation	+5oC ~ +40oC
				Storage	-20oC ~ +60oC
G-8	**Operating Humidity**				Less than 80% RH
G-9	**On Screen Display**	Menu(TV)			Yes
			Menu Type		Icon
			Picture		Yes
				Brightness	Yes
				Contrast	Yes
				Color	Yes
				Tint	Yes
				Sharpness	Yes
			Sound		No
				Bass	No
				Treble	No
				Balance	No
			CH		Yes
				TV/CATV	Yes
				Add/Delete	Yes
				Auto CH Memory	Yes
			Option		Yes
				V-Chip	Yes
				Language	Yes
		Open			Yes
		Close			Yes
		Clock			No
		Clock Set			No
		On/Off Timer			No
		Sleep Timer			Yes
		CH / AV(LINE) / DVD			Yes
		Stereo/Audio Output			Yes
				Bilingual	No
				SAP	Yes
		Caption / Text			Yes
		Auto Search/Position			No
		Game			Yes
		Volume			Yes
		Mute			Yes

GENERAL SPECIFICATIONS
(MD13N1R)

G-10	**On Screen Display**	Menu (DVD)				Yes
			Menu Type			Character
			Language			Yes
				OSD Language		Yes
				Menu		Yes
				SubTitle		Yes
				Audio		Yes
			Picture			Yes
				TV Screen Size		Yes
				OSD Display On/Off		Yes
			Sound			Yes
				DRC (Dynamic Range Control)		Yes
				dts Decode		No
				Output(5.1ch/ 2ch)		No
				Surround On/Off		No
				Center On/Off		No
				Sub Woofer On/Off		No
			Parental			Yes
				Password Lock/ Un Lock		Yes
				Rating Level		Yes
			Open			Yes
			Close			Yes
			No disc			Yes
			Reading			Yes
			Play			Yes
			Still/Pause			Yes
			Stop			Yes
			Prohibit Mark			Yes
			Step			Yes
			Skip(>>|)			Yes
			Skip(|<<)			Yes
			Random			Yes (CD)
			Repeat			Yes
			Slow+ ##			Yes
			Slow- ##			Yes
			Search+ ##			Yes
			Search- ##			Yes
			Jump			Yes
			Resume			Yes
			Title No.			Yes
			Chapter No.			Yes
			Track No.			Yes
			Time			Yes
			Sub Title No.			Yes
			Angle No.			Yes
			Vocal On/Off			No
			Audio No.			Yes
			Audio Stereo L/R			Yes (Video CD)
			Zoom			Yes
			Marker No.			No
			Program Play Back			Yes (CD)
			Surround On/Off			No
			Screen Saver			No
			MP3		Folder Name	No
					File Name	No
					File No	No
					Time	No
					Track No	No
G-11	**OSD Language**	(TV)				English, French, Spanish
		(DVD)				English, French, Spanish

GENERAL SPECIFICATIONS
(MD13N1R)

G-12	**Remote Control**	Unit		RC-GD
		Glow in Dark Remocon		Yes
		Format		NEC
		Custom Code		71-8E h
		Power Source	Voltage(D.C)	3V
			UM size x pcs	UM-4 x 2 pcs
		Total Keys		45 Key
		Keys	Power	Yes
			1	Yes
			2	Yes
			3	Yes
			4	Yes
			5	Yes
			6	Yes
			7	Yes
			8	Yes
			9	Yes
			0	Yes
			Play	Yes
			Stop	Yes
			Search+	Yes
			Search-	Yes
			Skip+	Yes
			Skip-	Yes
			Slow+	Yes
			Slow-	Yes
			Pause	Yes
			Call	Yes
			TV/DVD	Yes
			Cancel	Yes
			Audio Select	Yes
			Angle	Yes
			Subtitle	Yes
			Top Menu	Yes
			Set up/ Menu	Yes
			DVD Menu	Yes
			Return	Yes
			Up/ Set+/ CH Up	Yes
			Down/ Set-/ CH Down	Yes
			Left/Select-/Vol Down	Yes
			Right/Select+/Vol Up	Yes
			Select/ Enter	Yes
			Play Mode	Yes
			Closed Caption	Yes
			Input Select	Yes
			Repeat A-B	Yes
			Zoom/ Quick View	Yes
			Mute	Yes
			Open/Close	Yes
			Sleep	Yes
			Jump	Yes
			Game	Yes

GENERAL SPECIFICATIONS
(MD13N1R)

G-13	**Features**	CATV		Yes
		Auto Shut Off		Yes
		Auto Clock		No
		Just Clock		No
		Auto CH Memory		Yes
		V-Chip	USA V-chip	Yes
			CANADA V-chip	No
		Auto Search		No
		SAP		Yes
		Game Position		Yes
		FM Transmitter		No
		Energy Star		No
		Closed Caption		Yes
		Comb Filter		No
		Protect of FBT Leak Circuit		Yes
		Choke Coil		No
		Power On Memory		No
		Parental Lock (DVD Only)		Yes
		Tray Lock		Yes
		Video CD Playback		Yes
		SVCD Playback		No
			Overlay Graphics And Text	No
			Command List	No
			Entry Point Jump	No
		MP3 Playback		No
		Digital Out	(Dolby Digital)	Yes
			(MPEG)	Yes
			(PCM)	Yes
			(DTS)	Yes
		Down Mix Out	(Dolby Digital)	Yes
			(DTS)	No
		Surround (Tru Surround)		No
		Screen Saver		No
		Audio DAC		192kHz / 24bit
G-14	**Accessories**	Owner's Manual	Language	English
			w/Guarantee Card	Yes
			Buyer Model No.	MD13N1R
		Remote Control Unit		Yes
		Battery		Yes
			UM size x pcs	UM-4 x 2 pcs
			OEM Brand	No
		Rod Antenna		No
			Poles	No
			Terminal	--
		Loop Antenna		No
			Terminal	--
		U/V Mixer		No
		300 ohm to 75 ohm Antenna Adapter		Yes
		Antenna Change Plug		No
		Guarantee Card		No
		Registration Card		Yes
		Warranty Card		No
		ESP Card		No
		Service Station List		No
		DC Car Cord (Center+)		No
		Columbia Offer Sheet		No
		Sheet Information (Return)		Yes[From '03 JUN O/R]

GENERAL SPECIFICATIONS
(MD13N1R)

G-15	**Interface**	Switch	Front	Power (Tact)	Yes
				Channel Up	Yes
				Channel Down	Yes
				Volume Up	Yes
				Volume Down	Yes
				Play	Yes
				Open/Close	Yes
				Skip(>>|)	Yes
				Skip(|<<)	Yes
				Still/Pause	No
				Stop	Yes
				Main Power SW	No
			Rear	Main Power SW	No
		Indicator		Power	Yes (Red)
				Stand-by	No
				On Timer	No
		Terminals	Front	Video Input	RCA x 1
				Audio Input	RCA x 2(Stereo)
				Other Terminal	Head Phone
			Rear	Video Input	No
				Audio Input	No
				Video Output	No
				Audio Output	No
				Digital Audio Output	Coaxial (DVD Only)
				Diversity	No
				DC Jack 12V(Center +)	No
				VHF/UHF Antenna Input	F Type
G-16	**Set Size**			Approx. W x D x H (mm)	362x365x382
G-17	**Weight**			Net (Approx.)	11.0kg (24.3lbs)
				Gross (Approx.)	12.5kg (27.6lbs)
G-18	**Carton**		Master Carton		No
				Content	--- Sets
				Material	--- / ---
				Dimensions W x D x H(mm)	---
				Description of Origin	---
			Gift Box		Yes
				Material	Double/White
				W/Color Photo Label	No
				Dimensions W x D x H(mm)	423x447x443
				Design	As Per Buyer 's
				Description of Origin	Yes
				Buyer Model No.	MD13N1
			Drop Test	Natural Dropping At	1 Corner / 3 Edges / 6 Surfaces
				Height (cm)	62
			Container Stuffing (40' container)		700 Sets
G-19	**Material**		Cabinet	Front	PS 94V0 DECABROM
				Rear	PS 94V0 DECABROM
				Jack Panel	-
			PCB	Non-Halogen Demand	No
				Eyelet Demand	Yes
G-20	**Environment**		Pb Free	Lead-free Solder	No
				Other	No
			Cd Free		No

GENERAL SPECIFICATIONS
(MD13N1C)

G-1	**TV System**	CRT	CRT Size / Visual Size	13 inch / 335.4 mmV
			CRT Type	Normal
			Deflection	90 degree
			Magnetic Field BV/BH	+0.45G / 0.18G
		Color System		NTSC
		Speaker		2 Speaker
			Position	Front
			Size	1.5 x 2.7 inch
			Impedance	8 ohm
		Sound Output	Max	1.5W + 1.5W
			10%(Typical)	1.0W + 1.0W
G-2	**DVD System**	Color System		NTSC
		Disc		DVD, CD-DA, CD-R/RW, Video CD
		Disc Diameter		120 mm , 80 mm
		Deck	Disc Loading System	Front Loading
			Motor	2 Motors
		Pick up		1-Lens 2-Beams System
		Playback time(Max)	DVD 1-Layer	135min (4.7GB)
			DVD 2-Layer	245min (8.5GB)
			CD	74min
			Video CD	74min
		Search speed		Fwd 2-15 times / 4 step (DVD, Video CD)
				2-20 times / 4 step (CD)
			Actual	2-45 times (DVD, Video CD)
				4-40 times (CD)
				Rev 2-15 times / 4 step (DVD, Video CD)
				2-20 times / 4 step (CD)
			Actual	2-45 times (DVD, Video CD)
				4-40 times (CD)
		Slow speed		Fwd 1/8-1/2 times
			Actual	--
				Rev 1/8-1/2 times
			Actual	--
G-3	**Tuning System**	Broadcasting System		US System M
		Tuner and Receive CH	System	1Tuner
			Destination	US(w/CATV)
			Tuning System	F-Synth
			Input Impedance	VHF/UHF 75 Ohm
			CH Coverage	2~69, 4A, A-5~A-1, A~I, J~W, W+1~W+84
		Intermediate Frequency	Picture(FP)	45.75MHz
			Sound(FS)	41.25MHz
			FP-FS	4.50MHz
		Preset CH		No
		Stereo/Dual TV Sound		US-Stereo
		Tuner Sound Muting		Yes
G-4	**Signal**	Video Signal	Input Level	1 V p-p/75 ohm
			Output Level	--
			S/N Ratio (Weighted)	--
			Horizontal Resolution at DVD Mode	--
				--
		RGB Signal	Output Level	--
		Audio Signal	Input Level	-8.0dBm/50k ohm
			Output Level	--
			Digital Output Level	0.5 V p-p/75 ohm
			S/N Ratio at DVD (Weighted)	--
			Harmonic Distortion	--
			Frequency Response : at DVD	--
			at Video CD	--
			at SVCD	--
			at CD	--
G-5	**Power**	Power Source	AC	120V, 60Hz
			DC	--
		Power Consumption	at AC	75W at 120V 60Hz
			at DC	--
			Stand by (at AC)	5W at 120V 60Hz
			Per Year	-- kWh/Year
		Protector	Power Fuse	Yes
G-6	**Regulation**		Safety	CSA
			Radiation	IC
			X-Radiation	HWC
			Laser	DHHS

GENERAL SPECIFICATIONS
(MD13N1C)

G-7	**Temperature**			Operation	+5oC ~ +40oC
				Storage	-20oC ~ +60oC
G-8	**Operating Humidity**				Less than 80% RH
G-9	**On Screen Display**	Menu(TV)			Yes
			Menu Type		Icon
			Picture		Yes
				Brightness	Yes
				Contrast	Yes
				Color	Yes
				Tint	Yes
				Sharpness	Yes
			Sound		No
				Bass	No
				Treble	No
				Balance	No
			CH		Yes
				TV/CATV	Yes
				Add/Delete	Yes
				Auto CH Memory	Yes
			Option		Yes
				V-Chip	No
				Language	Yes
		Open			Yes
		Close			Yes
		Clock			No
		Clock Set			No
		On/Off Timer			No
		Sleep Timer			Yes
		CH / AV(LINE) / DVD			Yes
		Stereo/Audio Output			Yes
				Bilingual	No
				SAP	Yes
		Caption / Text			Yes
		Auto Search/Position			No
		Game			Yes
		Volume			Yes
		Mute			Yes

GENERAL SPECIFICATIONS
(MD13N1C)

G-10	**On Screen Display**	Menu (DVD)				Yes
			Menu Type			Character
			Language			Yes
				OSD Language		Yes
				Menu		Yes
				SubTitle		Yes
				Audio		Yes
			Picture			Yes
				TV Screen Size		Yes
				OSD Display On/Off		Yes
			Sound			Yes
				DRC (Dynamic Range Control)		Yes
				dts Decode		No
				Output(5.1ch/ 2ch)		No
				Surround On/Off		No
				Center On/Off		No
				Sub Woofer On/Off		No
			Parental			Yes
				Password Lock/ Un Lock		Yes
				Rating Level		Yes
			Open			Yes
			Close			Yes
			No disc			Yes
			Reading			Yes
			Play			Yes
			Still/Pause			Yes
			Stop			Yes
			Prohibit Mark			Yes
			Step			Yes
			Skip(>>|)			Yes
			Skip(|<<)			Yes
			Random			Yes (CD)
			Repeat			Yes
			Slow+ ##			Yes
			Slow- ##			Yes
			Search+ ##			Yes
			Search- ##			Yes
			Jump			Yes
			Resume			Yes
			Title No.			Yes
			Chapter No.			Yes
			Track No.			Yes
			Time			Yes
			Sub Title No.			Yes
			Angle No.			Yes
			Vocal On/Off			No
			Audio No.			Yes
			Audio Stereo L/R			Yes (Video CD)
			Zoom			Yes
			Marker No.			No
			Program Play Back			Yes (CD)
			Surround On/Off			No
			Screen Saver			No
			MP3		Folder Name	No
					File Name	No
					File No	No
					Time	No
					Track No	No
G-11	**OSD Language**	(TV)				English, French, Spanish
		(DVD)				English, French, Spanish

GENERAL SPECIFICATIONS
(MD13N1C)

G-12	**Remote Control**	Unit		RC-GD
		Glow in Dark Remocon		Yes
		Format		NEC
		Custom Code		71-8E h
		Power Source	Voltage(D.C)	3V
			UM size x pcs	UM-4 x 2 pcs
		Total Keys		45 Key
		Keys	Power	Yes
			1	Yes
			2	Yes
			3	Yes
			4	Yes
			5	Yes
			6	Yes
			7	Yes
			8	Yes
			9	Yes
			0	Yes
			Play	Yes
			Stop	Yes
			Search+	Yes
			Search-	Yes
			Skip+	Yes
			Skip-	Yes
			Slow+	Yes
			Slow-	Yes
			Pause	Yes
			Call	Yes
			TV/DVD	Yes
			Cancel	Yes
			Audio Select	Yes
			Angle	Yes
			Subtitle	Yes
			Top Menu	Yes
			Set up/ Menu	Yes
			DVD Menu	Yes
			Return	Yes
			Up/ Set+/ CH Up	Yes
			Down/ Set-/ CH Down	Yes
			Left/Select-/Vol Down	Yes
			Right/Select+/Vol Up	Yes
			Select/ Enter	Yes
			Play Mode	Yes
			Closed Caption	Yes
			Input Select	Yes
			Repeat A-B	Yes
			Zoom/ Quick View	Yes
			Mute	Yes
			Open/Close	Yes
			Sleep	Yes
			Jump	Yes
			Game	Yes

GENERAL SPECIFICATIONS
(MD13N1C)

G-13	**Features**	CATV		Yes
		Auto Shut Off		Yes
		Auto Clock		No
		Just Clock		No
		Auto CH Memory		Yes
		V-Chip	USA V-chip	No
			CANADA V-chip	No
		Auto Search		No
		SAP		Yes
		Game Position		Yes
		FM Transmitter		No
		Energy Star		No
		Closed Caption		Yes
		Comb Filter		No
		Protect of FBT Leak Circuit		Yes
		Choke Coil		No
		Power On Memory		No
		Parental Lock (DVD Only)		Yes
		Tray Lock		Yes
		Video CD Playback		Yes
		SVCD Playback		No
			Overlay Graphics And Text	No
			Command List	No
			Entry Point Jump	No
		MP3 Playback		No
		Digital Out	(Dolby Digital)	Yes
			(MPEG)	Yes
			(PCM)	Yes
			(DTS)	Yes
		Down Mix Out	(Dolby Digital)	Yes
			(DTS)	No
		Surround (Tru Surround)		No
		Screen Saver		No
		Audio DAC		192kHz / 24bit
G-14	**Accessories**	Owner's Manual	Language	English / French
			w/Guarantee Card	Yes
		Remote Control Unit		Yes
		Battery		Yes
			UM size x pcs	UM-4 x 2 pcs
			OEM Brand	No
		Rod Antenna		No
			Poles	No
			Terminal	--
		Loop Antenna		No
			Terminal	--
		U/V Mixer		No
		300 ohm to 75 ohm Antenna Adapter		Yes
		Antenna Change Plug		No
		Guarantee Card		No
		Registration Card		Yes
		Warranty Card		No
		ESP Card		No
		Service Station List		Yes
		DC Car Cord (Center+)		No
		Columbia Offer Sheet		No

GENERAL SPECIFICATIONS
(MD13N1C)

G-15	**Interface**	Switch	Front	Power (Tact)	Yes
				Channel Up	Yes
				Channel Down	Yes
				Volume Up	Yes
				Volume Down	Yes
				Play	Yes
				Open/Close	Yes
				Skip(>>|)	Yes
				Skip(|<<)	Yes
				Still/Pause	No
				Stop	Yes
				Main Power SW	No
			Rear	Main Power SW	No
		Indicator		Power	Yes (Red)
				Stand-by	No
				On Timer	No
		Terminals	Front	Video Input	RCA x 1
				Audio Input	RCA x 2(Stereo)
				Other Terminal	Head Phone
			Rear	Video Input	No
				Audio Input	No
				Video Output	No
				Audio Output	No
				Digital Audio Output	Coaxial (DVD Only)
				Diversity	No
				DC Jack 12V(Center +)	No
				VHF/UHF Antenna Input	F Type
G-16	**Set Size**			Approx. W x D x H (mm)	362x365x382
G-17	**Weight**			Net (Approx.)	11.0kg (24.3lbs)
				Gross (Approx.)	12.5kg (27.6lbs)
G-18	**Carton**		Master Carton		No
				Content	--- Sets
				Material	--- / ---
				Dimensions W x D x H(mm)	---
				Description of Origin	---
			Gift Box		Yes
				Material	Double/White
				W/Color Photo Label	No
				Dimensions W x D x H(mm)	423x447x443
				Design	As Per Buyer 's
				Description of Origin	Yes
			Drop Test	Natural Dropping At	1 Corner / 3 Edges / 6 Surfaces
				Height (cm)	62
			Container Stuffing (40' container)		700 Sets
G-19	**Material**		Cabinet	Front	PS 94V0 DECABROM
				Rear	PS 94V0 DECABROM
				Jack Panel	-
			PCB	Non-Halogen Demand	No
				Eyelet Demand	Yes
G-20	**Environment**		Pb Free	Lead-free Solder	No
				Other	No
			Cd Free		No

DISASSEMBLY INSTRUCTIONS

1. REMOVAL OF MECHANICAL PARTS AND P.C. BOARDS

1-1: BACK CABINET (Refer to Fig. 1-1)

1. Remove the 4 screws ①.
2. Remove the screw ② which are used for holding the Back Cabinet.
3. Remove the AC cord from the AC cord hook ③.
4. Remove the Back Cabinet in the direction of arrow.

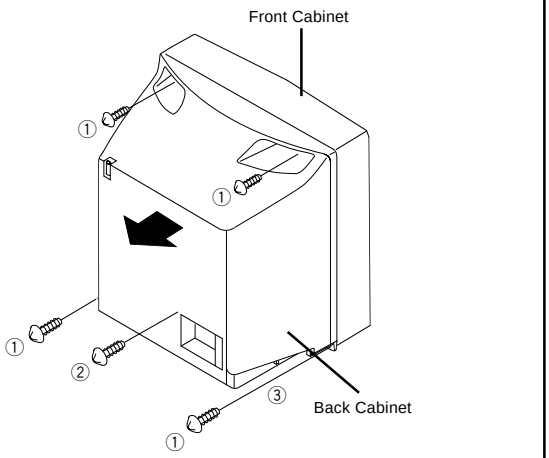

Fig. 1-1

1-2: CRT PCB (Refer to Fig. 1-2)

CAUTION: BEFORE REMOVING THE ANODE CAP, DISCHARGE ELECTRICITY BECAUSE IT CONTAINS HIGH VOLTAGE. BEFORE ATTEMPTING TO REMOVE OR REPAIR ANY PCB, UNPLUG THE POWER CORD FROM THE AC SOURCE.

1. Remove the Anode Cap. (Refer to REMOVAL OF ANODE CAP)
2. Disconnect the following connector: (CP801).
3. Remove the CRT PCB in the direction of arrow.

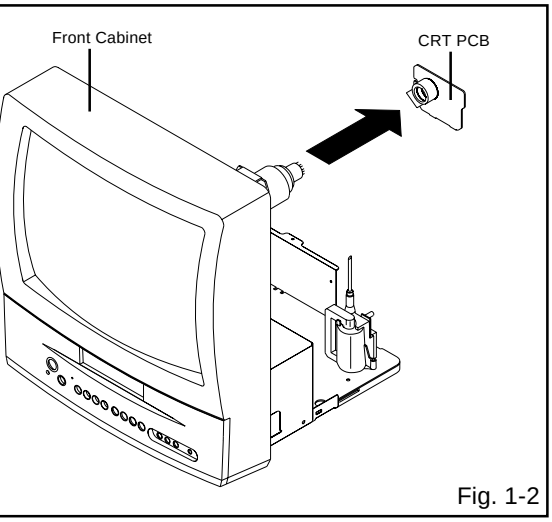

Fig. 1-2

1-3: AV PCB/DVD BLOCK (Refer to Fig. 1-3)

1. Remove the 2 screws ①.
2. Disconnect the following connectors: (CP301, CP302, CP401 and CP3800).
3. Remove the AV PCB/DVD Block in the direction of arrow.

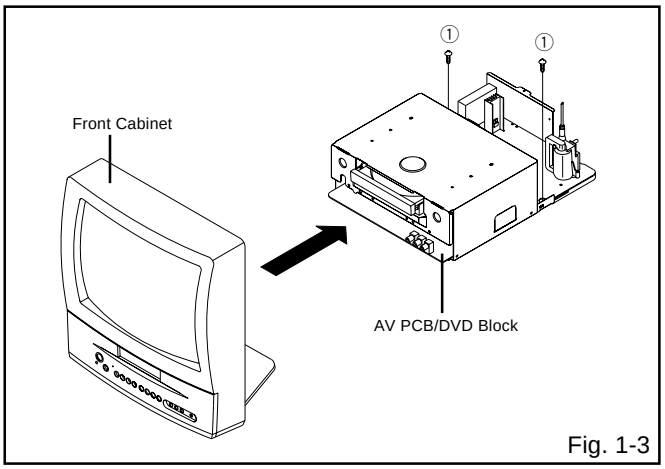

Fig. 1-3

1-4: DVD BLOCK (Refer to Fig. 1-4)

1. Remove the 11 screws ①.
2. Remove the Top Shield in the direction of arrow (A).
3. Disconnect the following connectors: (CP8001 and CP8002).
4. Remove the 4 screws ②.
5. Remove the DVD Block in the direction of arrow (B).
6. Remove the screw ③.
7. Remove the Jack Shield.
8. Remove the AV PCB in the direction of arrow (C).

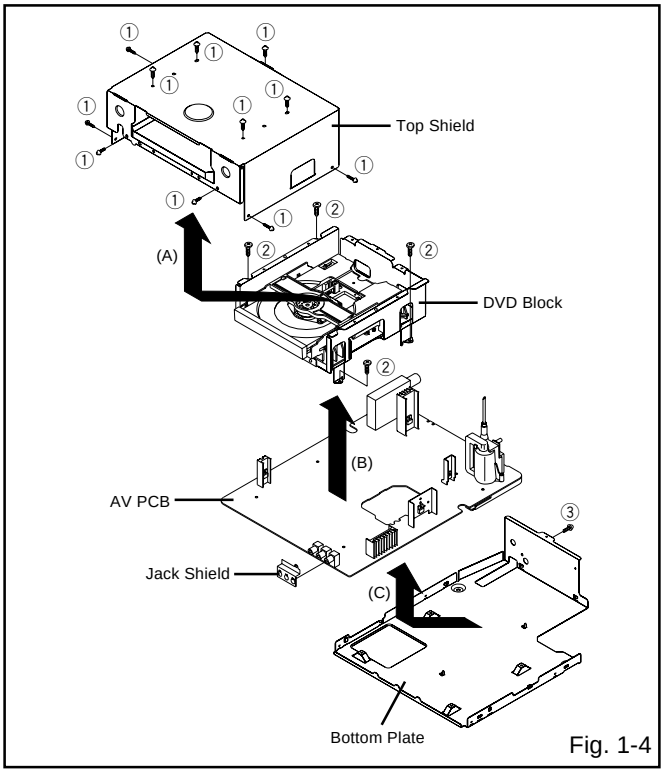

Fig. 1-4

DISASSEMBLY INSTRUCTIONS

1-5: DVD PCB/DVD DECK (Refer to Fig. 1-5)

1. Make the short circuit on the position as shown **Fig. 1-5** using a soldering. If you remove the DVD Deck with no soldering, the Laser may be damaged.
2. Unlock the 2 supports ①.
3. Remove the Front Tray Plate in the direction of arrow (A).
4. Disconnect the following connectors: (CP2001, CP2301 and CP2302).
5. Remove the 4 screws ②.
6. Remove the DVD Deck in the direction of arrow (B).
7. Remove the 4 screws ③.
8. Remove the DVD PCB in the direction of arrow (C).

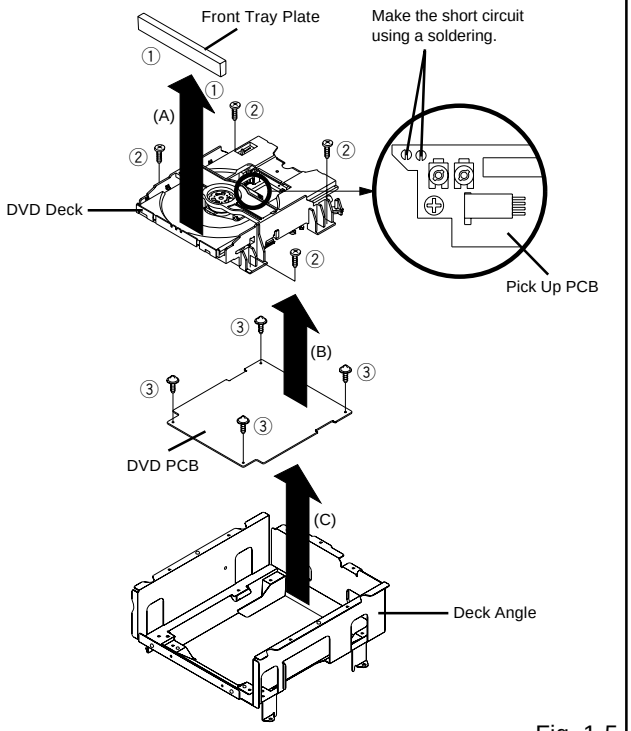

Fig. 1-5

NOTE

When the installation of the DVD Deck, remove all the soldering on the short circuit position after the connection of Pick Up PCB and DVD PCB connector.

DISASSEMBLY INSTRUCTIONS

2. REMOVAL OF DVD DECK PARTS

NOTE

1. Do not disassemble the DVD DECK PARTS except listed parts here. Minute adjustments are needed if the disassemble is done. If the repair is needed except listed parts, replace the DVD MECHA ASS'Y.

2-1: TRAY (Refer to Fig. 2-1-A)

1. Set the Tray opened. **(Refer to the DISC REMOVAL METHOD AT NO POWER SUPPLY)**
2. Unlock the support ① and remove the Tray.

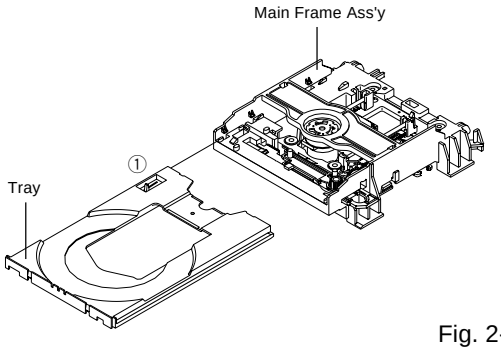

Fig. 2-1-A

NOTE

1. In case of the Tray installation, install them as the circled section of Fig. 2-1-B so that the each markers are met.

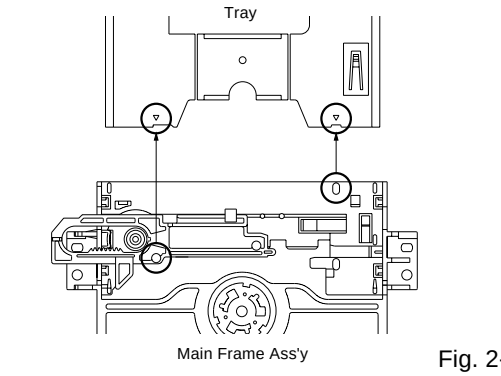

Fig. 2-1-B

2-2: MAIN CHASSIS ASS'Y (Refer to Fig. 2-2-A)

1. Remove the Main Chassis Ass'y from the Insulator (R).
2. Unlock the support ①.
3. Remove the Main Chassis Ass'y.

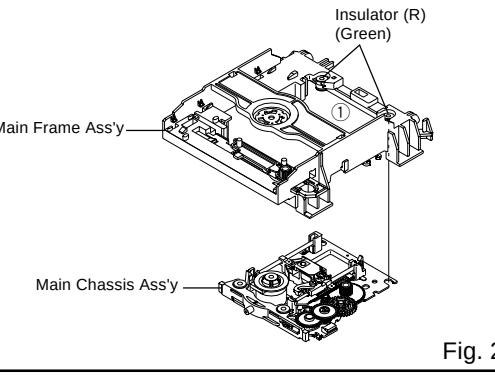

Fig. 2-2-A

NOTE

1. In case of the Main Chassis Ass'y, install it from (1) to (6) in order. **(Refer to Fig. 2-2-B)**

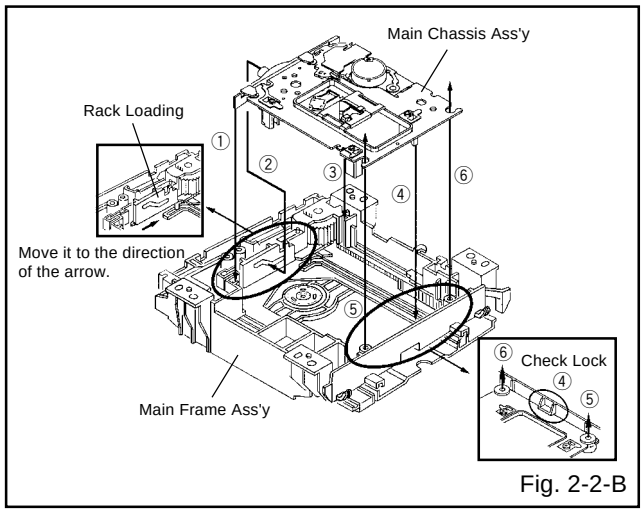

Fig. 2-2-B

2-3: RACK LOADING/MAIN GEAR/ RACK LOADING SPRING (Refer to Fig. 2-3)

1. Remove the Rack L Spring.
2. Press down the catcher ① and slide the Rack Loading.
3. Remove the Rack Loading, Rack Loading Spring and Main Gear.

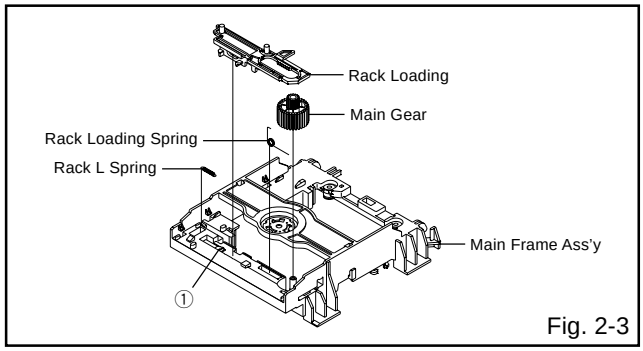

Fig. 2-3

2-4: CLAMPER ASS'Y/INSULATOR(R)/LEVER SWITCH (Refer to Fig. 2-4-A)

1. Remove the screw ①.
2. Remove the Lever Switch.
3. Remove the 2 Insulator (R).
4. Press the Clamper and rotate the Clamper Plate clockwise, then unlock the 3 supports ②.
5. Remove the Clamper Plate, Clamper Magnet and Clamper.

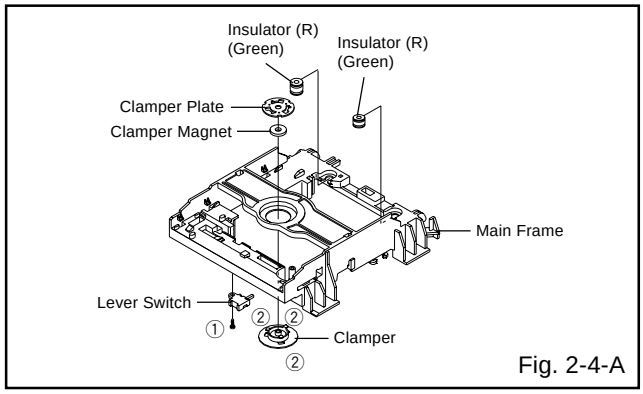

Fig. 2-4-A

DISASSEMBLY INSTRUCTIONS

NOTE

1. When installing the Clamper Magnet, install it with the green face up.
2. When installing the wire of the Lever Switch, install it correctly as Fig. 2-4-B.
3. When installing the Lever Switch, install it correctly as Fig. 2-4-C.
4. In case of the Lever Switch installation, hook the wire on the Main Frame as shown Fig. 2-4-D.

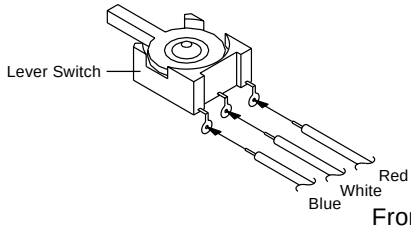

Fig. 2-4-B

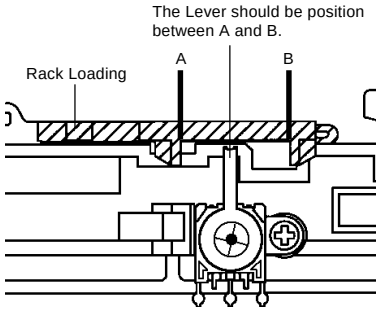

Fig. 2-4-C

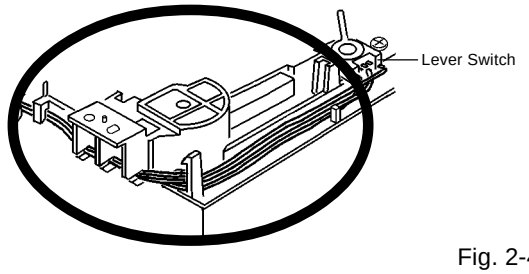

Fig. 2-4-D

2-5: TRAVERSE HOLDER/INSULATOR (F) (Refer to Fig. 2-5-A)

1. Remove the Traverse Holder.
2. Remove the 2 Insulator (F).

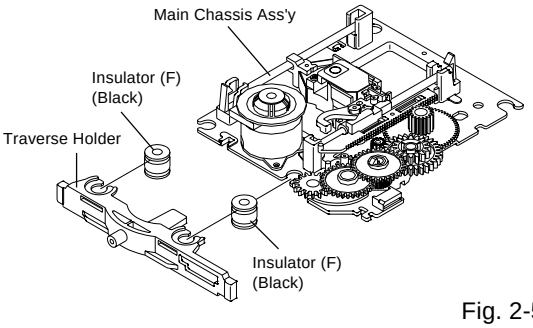

Fig. 2-5-A

NOTE

1. After the installing of the Traverse Holder, check if the wire is like Fig. 2-5-B.

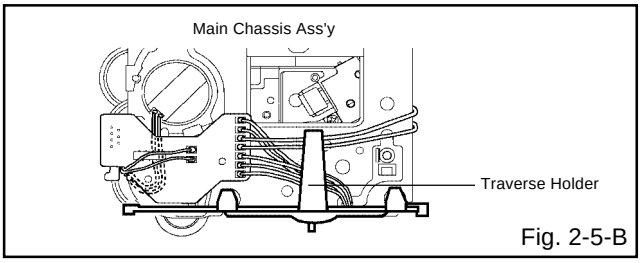

Fig. 2-5-B

2-6: SWITCH PCB ASS'Y (Refer to Fig. 2-6-A)

1. Remove the screw ①.
2. Remove the Switch PCB Ass'y.

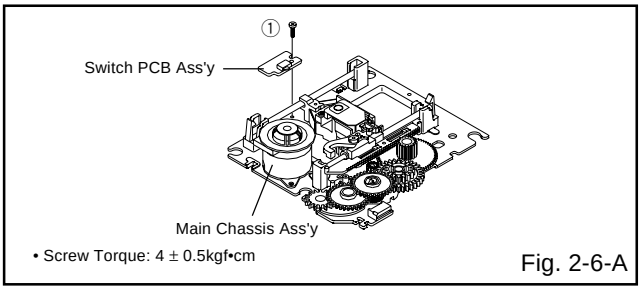

Fig. 2-6-A

NOTE

1. When installing the wire of the Switch PCB, install it correctly as Fig. 2-6-B.
2. When installing the wire of the Switch PCB, while pressing it in the direction of the arrow as shown Fig. 2-6-B, then instal it.

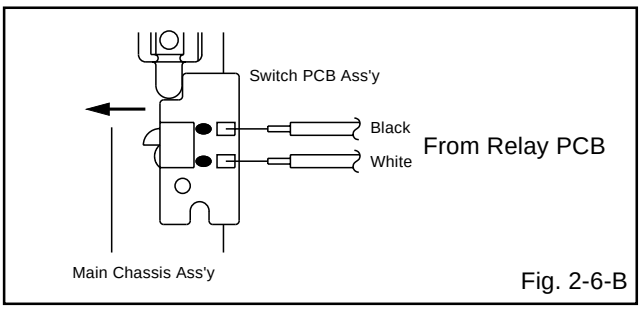

Fig. 2-6-B

2-7: RACK FEED ASS'Y (Refer to Fig. 2-7-A)

1. Remove the screw ①.
2. Remove the Rack Feed 1/2 Spring, Rack Feed 1/2 and Rack Feed Lever.

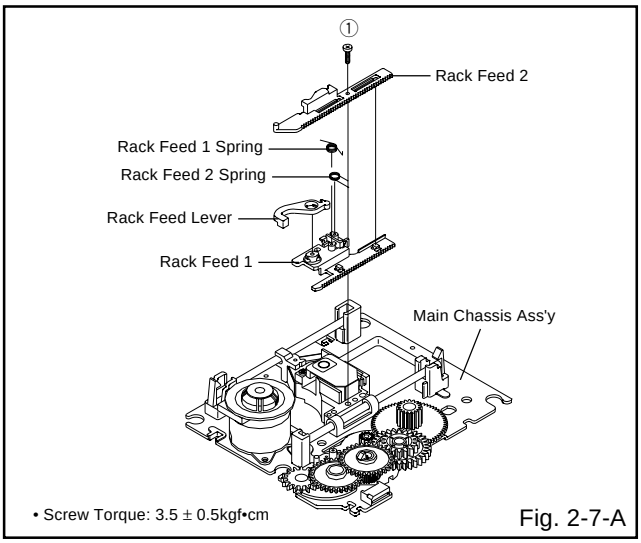

Fig. 2-7-A

DISASSEMBLY INSTRUCTIONS

NOTE

1. After the assembly of the Rack Feed, check if the Rack Feed 1/2 is moving smoothly. **(Refer to Fig. 2-7-B)**
2. In case of the Rack Feed Ass'y installation, install correctly as Fig. 2-7-C.

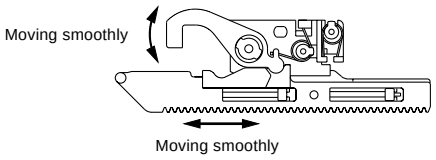

Fig. 2-7-B

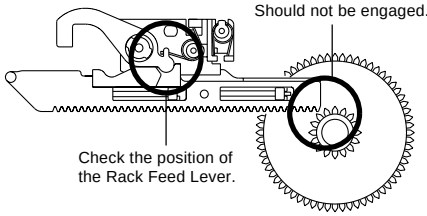

Fig. 2-7-C

2-8: RELAY PCB ASS'Y (Refer to Fig. 2-8-A)

1. Remove the screw ①.
2. Remove the Relay PCB Ass'y.

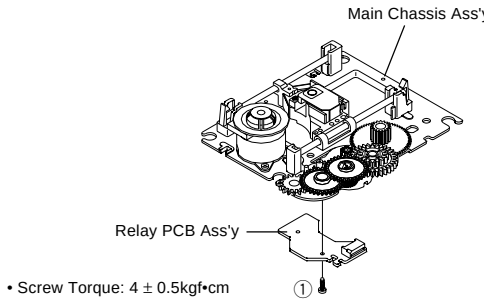

Fig. 2-8-A

NOTE

1. When installing the wire of the Relay PCB, install it correctly as Fig. 2-8-B.

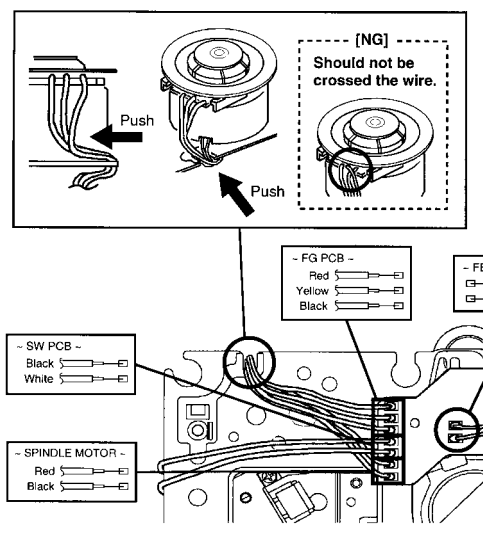

Fig. 2-8-B

2-9: GEAR (Refer to Fig. 2-9-A)

1. Unlock the support ①.
2. Remove the Middle Gear 1/2/3, Idler Gear and Feed Gear.

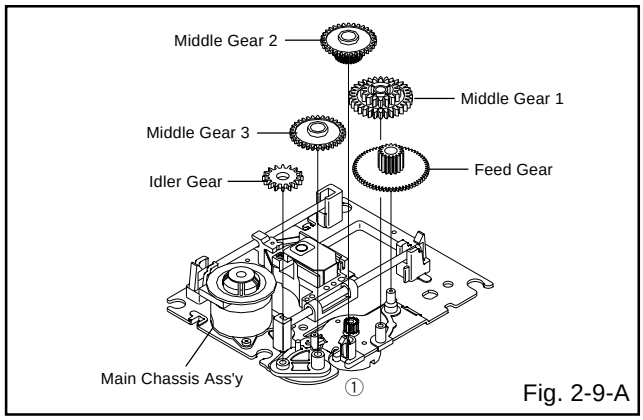

Fig. 2-9-A

NOTE

1. In case of the Idler Gear installation, install correctly as Fig. 2-9-B.
2. When installing the Middle Gear 2, check if the Middle Gear 2 is locked correctly as Fig. 2-9-C.

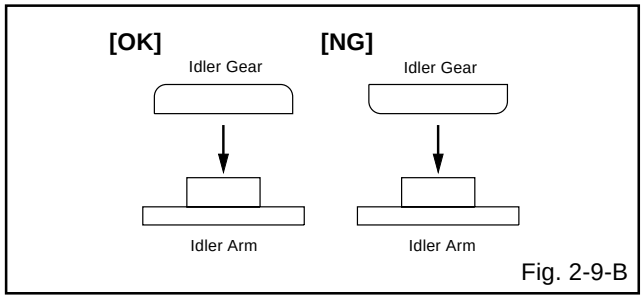

Fig. 2-9-B

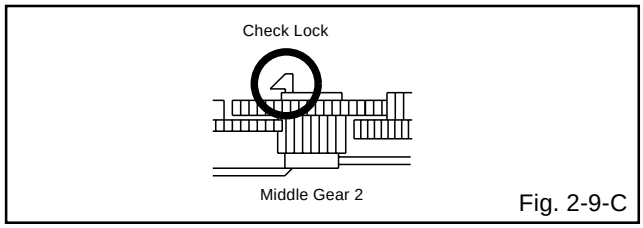

Fig. 2-9-C

2-10: IDLER ARM (Refer to Fig. 2-10-A)

1. Remove the Idler Arm Spring.
2. Remove the Chassis Spring.
3. Remove the Idler Arm.

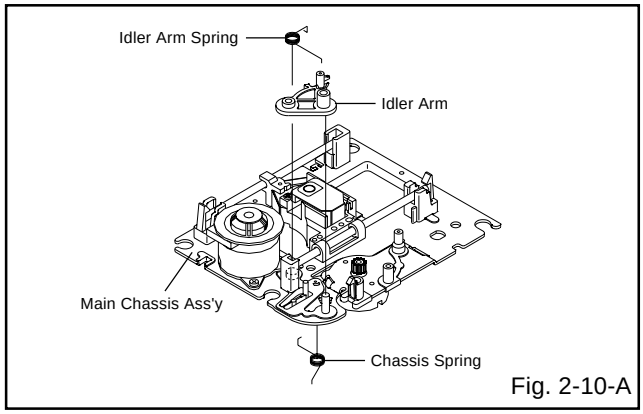

Fig. 2-10-A

DISASSEMBLY INSTRUCTIONS

NOTE

1. In case of the Idler Arm installation, install as the circled section of Fig. 2-10-B.
2. In case of the Idler Arm Spring installation, install as the circled section of Fig. 2-10-C.
3. In case of the Chassis Spring installation, install as the circled section of Fig. 2-10-D.

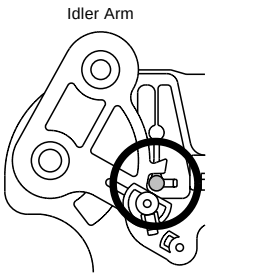

Fig. 2-10-B

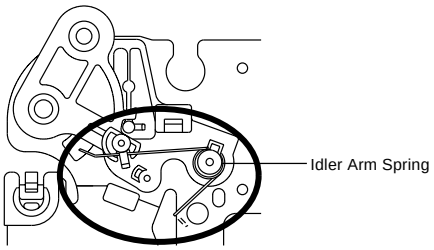

Fig. 2-10-C

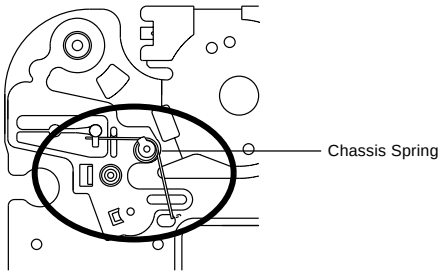

Fig. 2-10-D

2-11: FEED MOTOR (Refer to Fig. 2-11-A)

1. Remove the 2 screws ①.
2. Remove the Feed Motor.
3. Remove the Motor Gear.

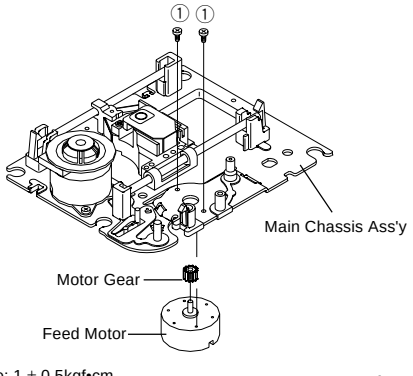

• Screw Torque: 1 ± 0.5kgf•cm

Fig. 2-11-A

NOTE

1. In case of the Motor Gear installation, check if the value of the Fig. 2-11-B is correct.
2. When installing the Feed Motor, check if the cable is positioned as Fig. 2-11-C.

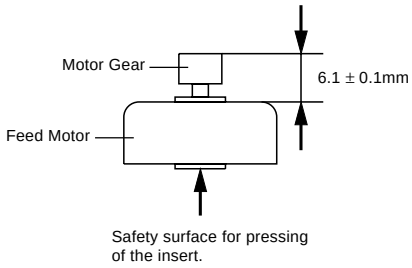

Fig. 2-11-B

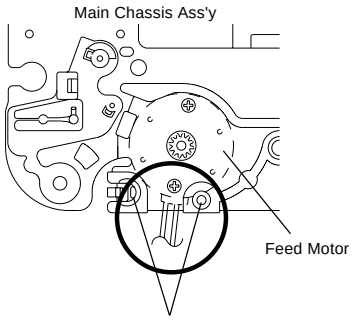

Fig. 2-11-C

DISASSEMBLY INSTRUCTIONS

3. REMOVAL OF ANODE CAP

Read the following **NOTED** items before starting work.

* After turning the power off there might still be a potential voltage that is very dangerous. When removing the Anode Cap, make sure to discharge the Anode Cap's potential voltage.
* Do not use pliers to loosen or tighten the Anode Cap terminal, this may cause the spring to be damaged.

REMOVAL

1. Follow the steps as follows to discharge the Anode Cap. **(Refer to Fig. 3-1.)**
   Connect one end of an Alligator Clip to the metal part of a flat-blade screwdriver and the other end to ground.
   While holding the plastic part of the insulated Screwdriver, touch the support of the Anode with the tip of the Screwdriver.
   A cracking noise will be heard as the voltage is discharged.

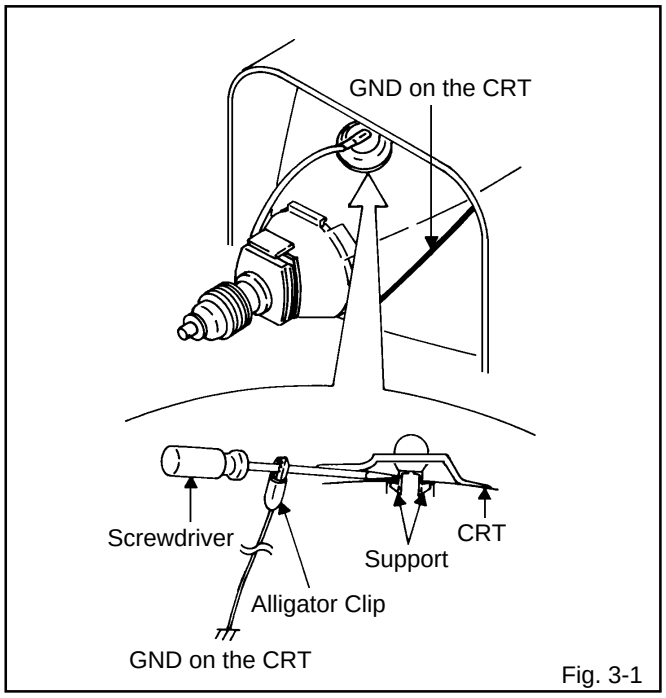

Fig. 3-1

2. Flip up the sides of the Rubber Cap in the direction of the arrow and remove one side of the support. **(Refer to Fig. 3-2.)**

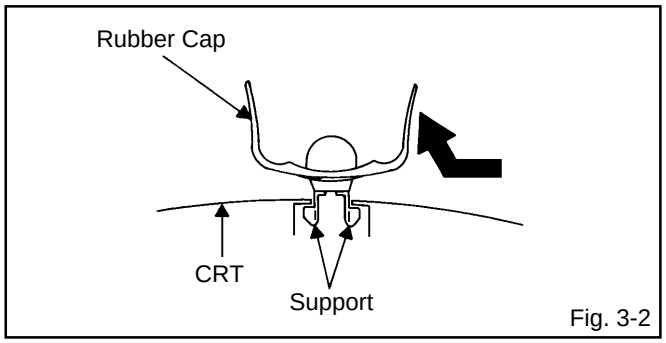

Fig. 3-2

3. After one side is removed, pull in the opposite direction to remove the other.

NOTE

Take care not to damage the Rubber Cap.

INSTALLATION

1. Clean the spot where the cap was located with a small amount of alcohol. **(Refer to Fig. 3-3.)**

NOTE

Confirm that there is no dirt, dust, etc. at the spot where the cap was located.

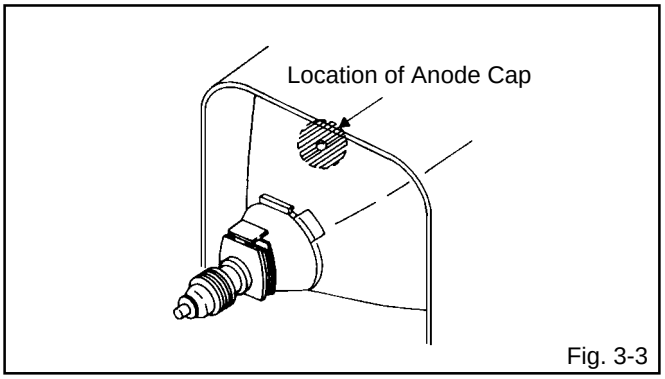

Fig. 3-3

2. Arrange the wire of the Anode Cap and make sure the wire is not twisted.
3. Turn over the Rubber Cap. **(Refer to Fig. 3-4.)**

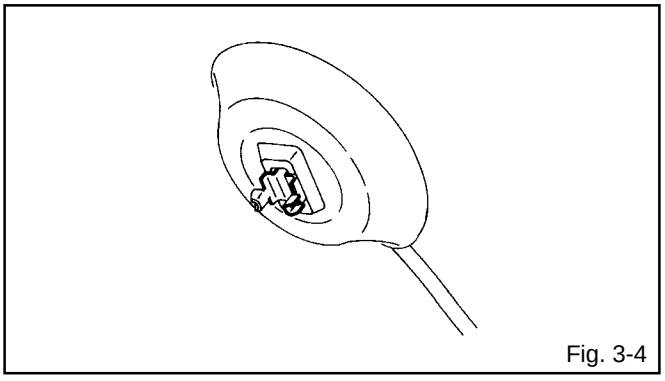
Fig. 3-4

4. Insert one end of the Anode Support into the anode button, then the other as shown in **Fig. 3-5**.

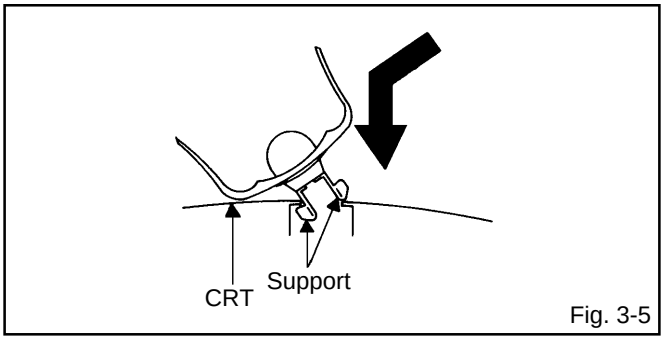

Fig. 3-5

5. Confirm that the Support is securely connected.
6. Put on the Rubber Cap without moving any parts.

DISASSEMBLY INSTRUCTIONS

4. REMOVAL AND INSTALLATION OF FLAT PACKAGE IC

REMOVAL

1. Put the Masking Tape (cotton tape) around the Flat Package IC to protect other parts from any damage. **(Refer to Fig. 4-1.)**

   NOTE

   Masking is carried out on all the parts located within 10 mm distance from IC leads.

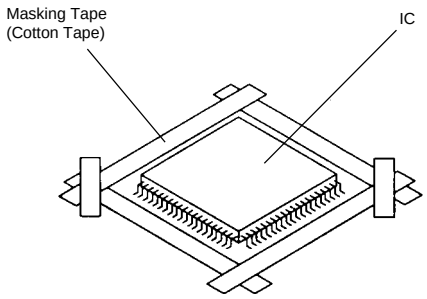

Fig. 4-1

2. Heat the IC leads using a blower type IC desoldering machine. **(Refer to Fig. 4-2.)**

   NOTE

   Do not add the rotating and the back and forth directions force on the IC, until IC can move back and forth easily after desoldering the IC leads completely.

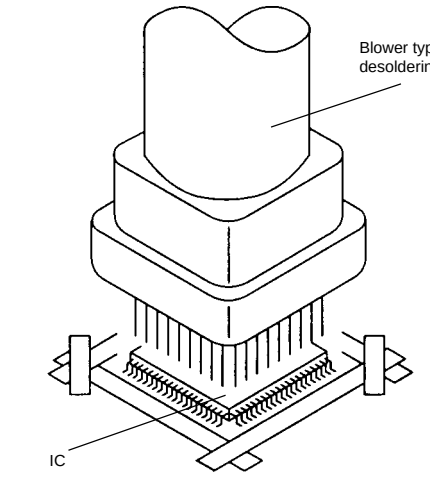

Fig. 4-2

3. When IC starts moving back and forth easily after desoldering completely, pickup the corner of the IC using a tweezers and remove the IC by moving with the IC desoldering machine. **(Refer to Fig. 4-3.)**

   NOTE

   Some ICs on the PCB are affixed with glue, so be careful not to break or damage the foil of each IC leads or solder lands under the IC when removing it.

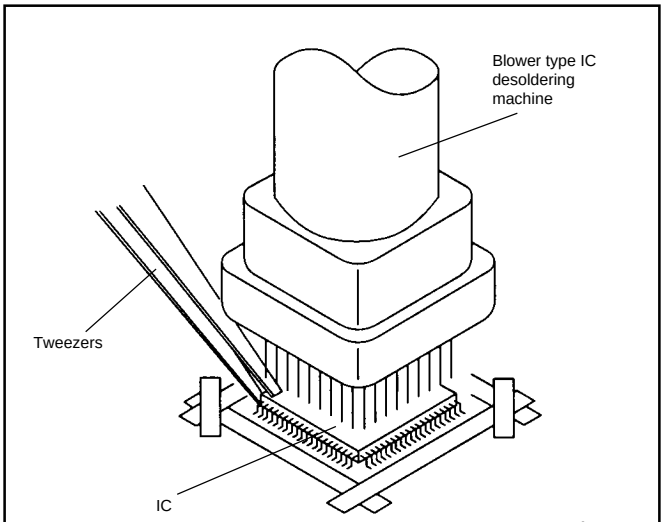

Fig. 4-3

4. Peel off the Masking Tape.

5. Absorb the solder left on the pattern using the Braided Shield Wire. **(Refer to Fig. 4-4.)**

   NOTE

   Do not move the Braided Shield Wire in the vertical direction towards the IC pattern.

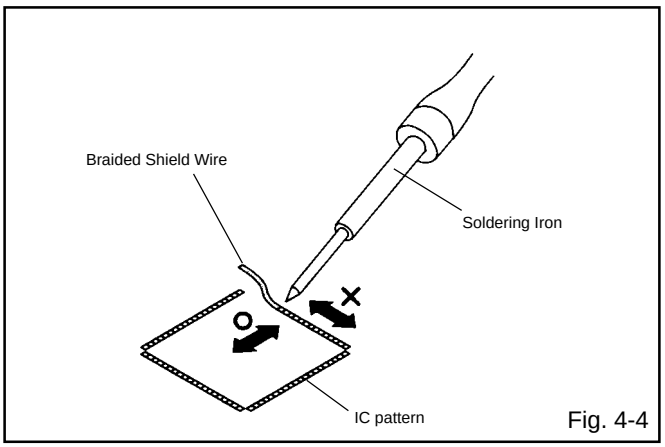

Fig. 4-4

DISASSEMBLY INSTRUCTIONS

INSTALLATION

1. Take care of the polarity of new IC and then install the new IC fitting on the printed circuit pattern. Then solder each lead on the diagonal positions of IC temporarily. **(Refer to Fig. 4-5.)**

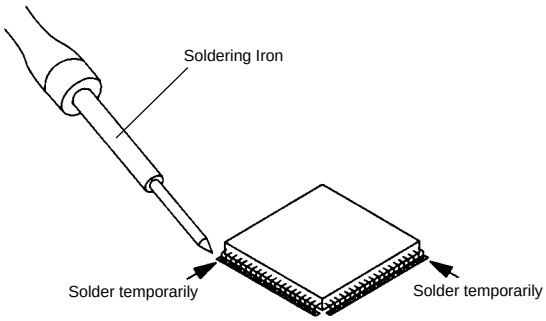

Fig. 4-5

2. Supply the solder from the upper position of IC leads sliding to the lower position of the IC leads. **(Refer to Fig. 4-6.)**

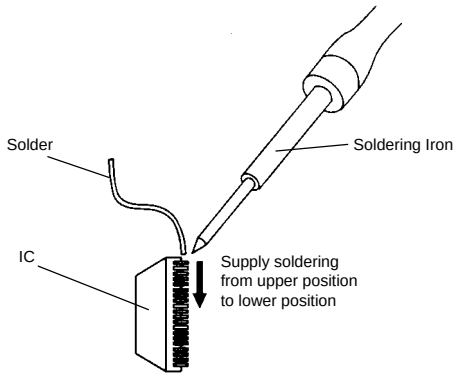

Fig. 4-6

3. Absorb the solder left on the lead using the Braided Shield Wire. **(Refer to Fig. 4-7.)**

   NOTE

   Do not absorb the solder to excess.

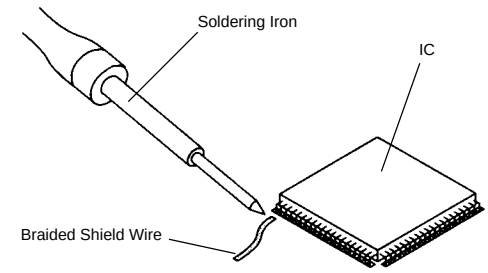

Fig. 4-7

4. When bridge-soldering between terminals and/or the soldering amount are not enough, resolder using a Thin-tip Soldering Iron. **(Refer to Fig. 4-8.)**

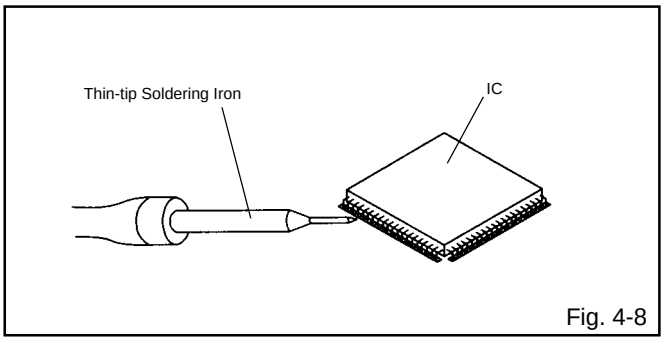

Fig. 4-8

5. Finally, confirm the soldering status on four sides of the IC using a magnifying glass.
   Confirm that no abnormality is found on the soldering position and installation position of the parts around the IC. If some abnormality is found, correct by resoldering.

   NOTE

   When the IC leads are bent during soldering and/or repairing, do not repair the bending of leads. If the bending of leads are repaired, the pattern may be damaged. So, be always sure to replace the IC in this case.

SERVICE MODE LIST

This unit provided with the following SERVICE MODES so you can repair, examine and adjust easily.

To enter to the SERVICE MODE function, press and hold both buttons simultaneously on the main unit and on the remote control for more than a standard time (second).

Set Key	Remocon Key	Standard Time (seconds)	Operations
VOL. (-) MIN	0	1	Releasing of V-CHIP PASSWORD.
VOL. (-) MIN	1	1	Initialization of the factory on TV. NOTE: Do not use this for the normal servicing. If you set a factory initialization, the memories are reset such as the channel setting, and the POWER ON total hours.
VOL. (-) MIN	4	1	Initialization of the factory on DVD. NOTE: Do not use this for the normal servicing. The function will only work at the DVD stop mode.
VOL. (-) MIN	6	1	POWER ON total hours are displayed on the screen. Refer to the "PREVENTIVE CHECKS AND SERVICE INTERVALS" (CONFIRMATION OF HOURS USED). Can be checked of the INITIAL DATA of MEMORY IC. Refer to the "WHEN REPLACING EEPROM (MEMORY) IC".
VOL. (-) MIN	8	1	Writing of EEPROM initial data. NOTE: Do not use this for the normal servicing.
VOL. (-) MIN	9	1	Display of the Adjustment MENU on the screen. Refer to the "ELECTRICAL ADJUSTMENT" (On-Screen Display Adjustment).
STOP	7	3	Releasing of PARENTAL LOCK. Refer to the “PARENTAL CONTROL - RATING LEVEL”. NOTE: The function will only work without the setting of DVD disc at DVD mode.
STOP	9	3	Tray cannot be opened. Refer to the “TRAY LOCK”. NOTE: No indications on the screen when the Tray Lock is setting.

CONFIRMATION OF HOURS USED

POWER ON total hours can be checked on the screen. Total hours are displayed in 16 system of notation.

NOTE: If you set a factory initialization, the total hours is reset to "0".

1. Set the VOLUME to minimum.
2. Press both VOL. DOWN button on the set and Channel button **(6)** on the remote control for more than 1 second.
3. After the confirmation of using hours, turn off the power.

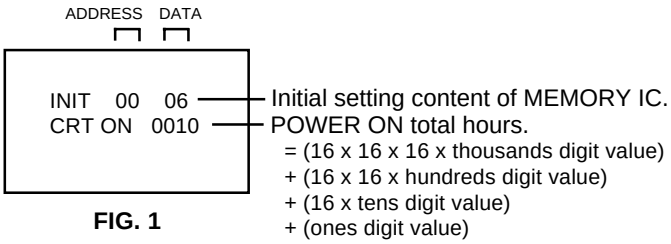
ADDRESS
DATA
INIT 00 06
CRT ON 0010
Initial setting content of MEMORY IC.
POWER ON total hours.
= (16 x 16 x 16 x thousands digit value)
+ (16 x 16 x hundreds digit value)
+ (16 x tens digit value)
+ (ones digit value)

FIG. 1

WHEN REPLACING EEPROM (MEMORY) IC

If a service repair is undertaken where it has been required to change the MEMORY IC, the following steps should be taken to ensure correct data settings while making reference to TABLE 1.

NOTE: No need setting for after INI 1F.

INI	+0	+1	+2	+3	+4	+5	+6	+7	+8	+9	+A	+B	+C	+D	+E	+F
00	06	00	44	20	D0	35	30	25	05	54	**(*1)**	00	49	55	0F	47
10	30	50	50	04	15	77	03	50	20	77	52	00	12	00	00	00

(*1)

	Data
For USA	01
For CANADA	00

Table 1

1. Enter DATA SET mode by setting VOLUME to minimum.
2. Press both VOL. DOWN button on the set and Channel button **(6)** on the remote control for more than 1 second. ADDRESS and DATA should appear as FIG 1.

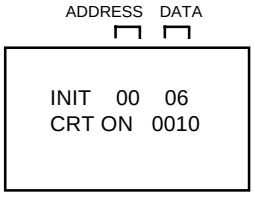

FIG. 1

3. ADDRESS is now selected and should "blink". Using the VOL. UP/DOWN button on the remote, step through the ADDRESS until required ADDRESS to be changed is reached.
4. Press ENTER to select DATA. When DATA is selected, it will "blink".
5. Again, step through the DATA using VOL. UP/DOWN button until required DATA value has been selected.
6. Pressing ENTER will take you back to ADDRESS for further selection if necessary.
7. Repeat steps 3 to 6 until all data has been checked.
8. When satisfied correct DATA has been entered, turn POWER off (return to STANDBY MODE) to finish DATA input.

After the data input, set to the initializing of shipping.

9. Turn POWER on.
10. Press both VOL. DOWN button on the set and Channel button **(1)** on the remote control for more than 1 second.
11. After the finishing of the initializing of shipping, the unit will turn off automatically.

The unit will now have the correct DATA for the new MEMORY IC.

ELECTRICAL ADJUSTMENTS

1. BEFORE MAKING ELECTRICAL ADJUSTMENTS

Read and perform these adjustments when repairing the circuits or replacing electrical parts or PCB assemblies.

CAUTION

- Use an isolation transformer when performing any service on this chassis.
- Before removing the anode cap, discharge electricity because it contains high voltage.
- When removing a PCB or related component, after unfastening or changing a wire, be sure to put the wire back in its original position.
- When you exchange IC and Transistor for a heat sink, apply the silicon grease on the contact section of the heat sink. Before applying new silicon grease, remove all the old silicon grease. (Old grease may cause damages to the IC and Transistor).

Prepare the following measurement tools for electrical adjustments.

1. Oscilloscope
2. Digital Voltmeter
3. AC Voltmeter
4. Pattern Generator
5. Multi-Sound Signal Generator

On-Screen Display Adjustment

1. Set the VOLUME to minimum.
2. Press the VOL. DOWN button on the set and the Channel button **(9)** on the remote control for more than 1 second to appear the adjustment mode on the screen as shown in **Fig. 1-1**.

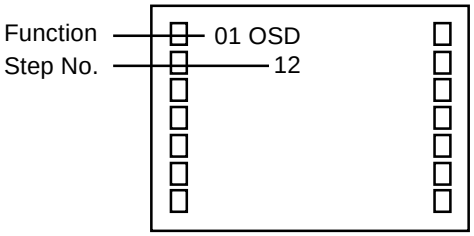

Fig. 1-1

3. Use the Channel UP/DOWN button or Channel button **(1-0)** on the remote control to select the options shown in **Fig. 1-2**.
4. Press the MENU button on the remote control to end the adjustments.

NO.	FUNCTION	NO.	FUNCTION
01	OSD H	36	COL. AV(CENT.)
02	OSD CONTRAST	37	COL. AV(MAX)
03	CUT OFF	38	COL. AV(MIN)
04	H POSITION	39	TINT AV
05	H BLK L	40	SHARPNESS AV
06	H BLK R	41	SUB BIAS
07	V SIZE	42	BRI. DVD(CENT.)
08	V POSITION	43	BRI. DVD(MAX)
09	V LINEARITY	44	BRI. DVD(MIN)
10	V S CORRECTION	45	CONT. DVD(CENT.)
11	V COMP	46	CONT. DVD(MAX)
12	R CUT OFF	47	CONT. DVD(MIN)
13	G CUT OFF	48	COL. DVD(CENT.)
14	B CUT OFF	49	COL. DVD(MAX)
15	R DRIVE	50	COL. DVD(MIN)
16	G DRIVE	51	TINT DVD
17	B DRIVE	52	SHARPNESS DVD
18	BRIGHTNESS(CENT.)	53	SUB BIAS
19	BRIGHTNESS(MAX)	54	BRI. GAME(CENT.)
20	BRIGHTNESS(MIN)	55	BRI. GAME(MAX)
21	CONTRAST(CENT.)	56	BRI. GAME(MIN)
22	CONTRAST(MAX)	57	CONT. GAME(CENT.)
23	CONTRAST(MIN)	58	CONT. GAME(MAX)
24	COLOR(CENT.)	59	CONT. GAME(MIN)
25	COLOR(MAX)	60	SUB BIAS
26	COLOR(MIN)	61	TUNING V MUTE
27	TINT	62	POWER ON V MUTE
28	SHARPNESS	63	INPUT LEVEL
29	SUB BIAS	64	SEPARATION L
30	BRI. AV(CENT.)	65	SEPARATION H
31	BRI. AV(MAX)	66	TEST PWM
32	BRI. AV(MIN)	67	X-RAY TEST
33	CONT. AV(CENT.)	68	H STOP
34	CONT. AV(MAX)	69	H FREQ
35	CONT. AV(MIN)		

Fig. 1-2

2. BASIC ADJUSTMENTS

2-1: CONSTANT VOLTAGE

1. Set condition is AV MODE without signal.
2. Using the remote control, set the brightness and contrast to normal position.
3. Connect the digital voltmeter to **TP401**.
4. Adjust the **VR3800** until the digital voltmeter is 135 ± 0.5V.

2-2: FOCUS

1. Receive the monoscope pattern.
2. Turn the Focus Volume fully counterclockwise once.
3. Adjust the **Focus Volume** until picture is distinct.

2-3: CUT OFF

1. Adjust the unit to the following settings.
   R DRIVE=3F, G DRIVE=07, B DRIVE=3F, R CUT OFF=7F, G CUT OFF=7F, B CUT OFF=7F
2. Place the set with Aging Test for more than 15 minutes.
3. Set condition is AV MODE without signal.
4. Using the remote control, set the brightness and contrast to normal position.
5. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(03)** on the remote control to select "CUT OFF".
6. Adjust the **Screen Volume** until a dim raster is obtained.

ELECTRICAL ADJUSTMENTS

2-4: WHITE BALANCE

NOTE: Adjust after performing CUT OFF adjustment.

1. Place the set with Aging Test for more than 15 minutes.
2. Receive the gray scale pattern from the Pattern Generator.
3. Using the remote control, set the brightness and contrast to normal position.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(16)** on the remote control to select "G DRV".
5. Press the CH. UP/DOWN button on the remote control to select the "R CUT", "G CUT", "B CUT", "R DRV" or "B DRV".
6. Adjust the VOL. UP/DOWN button on the remote control to whiten the R CUT, G CUT, B CUT, R DRV, and B DRV at each step tone sections equally.
7. Perform the above adjustments 5 and 6 until the white color is looked like a white.

2-5: HORIZONTAL POSITION

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(04)** on the remote control to select "HPOSI".
4. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on right and left becomes minimum.

2-6: VERTICAL POSITION

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(08)** on the remote control to select "VPOSI".
4. Check if the step No. V POSI is "02".
5. Adjust the **VR401** until the horizontal line becomes fit to notch of the shadow mask.

2-7: VERTICAL SIZE

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(07)** on the remote control to select "VSIZE".
4. Press the VOL. UP/DOWN button on the remote control until the Up/Down OVER SCAN Quantity becomes equal to the Right/Left OVER SCAN Quantity.
5. Receive a broadcast and check if the picture is normal.

2-8: VERTICAL LINEARITY

NOTE: Adjust after performing adjustments in section 2-7. After the adjustment of Vertical Linearity, reconfirm the Vertical Position and Vertical Size adjustments.

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(09)** on the remote control to select "VLIN".
4. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on upside and downside becomes minimum.

2-9: SEPARATION

Please do the method (1) or method (2) adjustment.

Method (1)

1. Set the multi-sound signal generator for each different L-ch and R-ch frequency (Ex. L-ch=2KHz, R-ch=400Hz) and receive the RF signal.
2. Connect the oscilloscope to the **Audio Out Jack**.
3. Press the AUDIO button on the remote control to set to the stereo mode.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(64)** on the remote control to select “SEPAL”.
5. Press the VOL. UP/DOWN button on the remote control to adjust it until the audio output wave becomes a fine sine wave.
6. Press the CH UP button 1 time to set to "SEPAH" mode.
7. Press the VOL. UP/DOWN button on the remote control to adjust it until the audio output wave becomes a fine sine wave.

Method (2)

1. Set the multi-sound signal generator L-ch=1KHz, R-ch =Non input and receive the RF signal.
2. Connect the oscilloscope to the **Audio Out Jack (R-ch)**.
3. Press the AUDIO button on the remote control to set to the stereo mode.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(64)** on the remote control to select “SEPAL”.
5. Press the VOL. UP/DOWN button on the remote control to adjust it until the R-ch output becomes minimum.
6. Press the CH UP button 1 time to set to "SEPAH" mode.
7. Press the VOL. UP/DOWN button on the remote control to adjust it until the R-ch output becomes minimum.
8. Set the multi-sound signal generator L-ch=Non input, R-ch=1KHz and receive the RF signal.
9. Connect the oscilloscope to the **Audio Out Jack (L-ch)**. Then perform the above adjustments 3~7.

ELECTRICAL ADJUSTMENTS

2-10: OSD HORIZONTAL

1. Activate the adjustment mode display of **Fig. 1-1**.
2. Press the VOL. UP/DOWN button on the remote control until the difference of A and B becomes minimum. **(Refer to Fig. 2-1)**

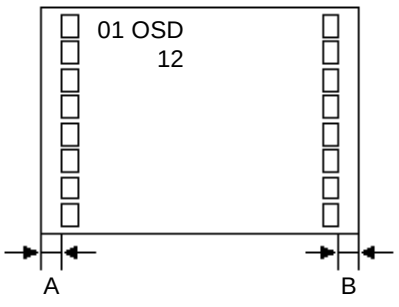

Fig. 2-1

2-11: LEVEL

1. Receive the VHF HIGH (70dB).
2. Connect the AC voltmeter to **pin 6 of CP101**.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(63)** on the remote control to select "LVL".
4. Press the VOL. UP/DOWN button on the remote control until the AC voltmeter is 75 ± 2mV.

2-12: BRIGHT CENTER

1. Receive the monoscope pattern. (RF Input)
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(18)** on the remote control to select "BRTC".
4. Press the VOL. UP/DOWN button on the remote control until the white 15% is starting to be visible
5. Receive the monoscope pattern. (Audio Video Input)
6. Press the INPUT SELECT button on the remote control to set to the AV mode.
7. Using the remote control, set the brightness and contrast to normal position.
8. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(30)** on the remote control to select "BRTCA".
9. Press the VOL. UP/DOWN button on the remote control until the white 15% is starting to be visible
10. Press the TV/DVD button on the remote control to set to the DVD mode.
11. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(42)** on the remote control to select "BRTCD".
12. Press the VOL. UP/DOWN button on the remote control to set the same step numbers as the AV.
13. Press the GAME button on the remote control to set to the GAME mode.
14. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(54)** on the remote control to select "BRTCG".
15. Press the VOL. UP/DOWN button on the remote control to set the same step numbers as the AV.

2-13: TINT CENTER

1. Receive the color bar pattern. (RF Input)
2. Using the remote control, set the brightness, contrast, color and tint to normal position.
3. Connect the oscilloscope to **TP024**.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(27)** on the remote control to select "TNTC".
5. Press the VOL. UP/DOWN button on the remote control until the section "A" becomes a straight line. **(Refer to Fig. 2-2)**
6. Receive the color bar pattern. (Audio Video Input)
7. Press the INPUT SELECT button on the remote control to set to the AV mode.
8. Using the remote control, set the brightness, contrast, color and tint to normal position.
9. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(39)** on the remote control to select "TNTCA".
10. Press the VOL. UP/DOWN button on the remote control until the section "A" becomes a straight line. **(Refer to Fig. 2-2)**
11. Press the TV/DVD button on the remote control to set to the DVD mode.
12. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(51)** on the remote control to select "TNTCD".
13. Press the VOL. UP/DOWN button on the remote control to set the same step numbers as the AV.

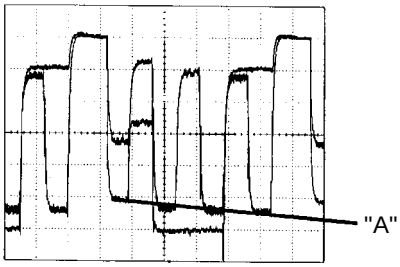

Fig. 2-2

ELECTRICAL ADJUSTMENTS

2-14: COLOR CENTER

1. Receive the color bar pattern. (RF Input)
2. Using the remote control, set the brightness, contrast, color and tint to normal position.
3. Connect the oscilloscope to **TP022**.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(24)** on the remote control to select "COLC".
5. Adjust the VOLTS RANGE VARIABLE knob of the oscilloscope until the range between white 100% and 0% is set to 4 scales on the screen of the oscilloscope.
6. Press the VOL. UP/DOWN button on the remote control until the red color level is adjusted to 110 ± 5% of the white level. **(Refer to Fig. 2-3)**
7. Receive the color bar pattern. (Audio Video Input)
8. Press the INPUT SELECT button on the remote control to set to the AV mode.
9. Using the remote control, set the brightness, contrast, color and tint to normal position.
10. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(36)** on the remote control to select "COLCA".
11. Adjust the VOLTS RANGE VARIABLE knob of the oscilloscope until the range between white 100% and 0% is set to 4 scales on the screen of the oscilloscope.
12. Press the VOL. UP/DOWN button on the remote control until the red color level is adjusted to 110 ± 5% of the white level. **(Refer to Fig. 2-3)**
13. Press the TV/DVD button on the remote control to set to the DVD mode.
14. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(48)** on the remote control to select "COLCD".
15. Press the VOL. UP/DOWN button on the remote control to decrease the step numbers by 8 steps to the AV.

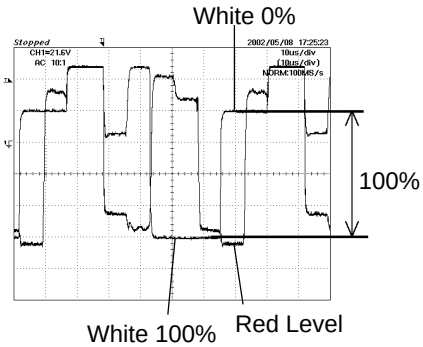

Fig. 2-3

2-15: CONTRAST MAX

1. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(22)** on the remote control to select "CNTX".
2. Press the VOL. UP/DOWN button on the remote control until the contrast step No. becomes "5A"
3. Receive a broadcast and check if the picture is normal.
4. Press the INPUT SELECT button on the remote control to set to the AV mode.
5. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(34)** on the remote control to select "CNTXA".
6. Press the VOL. UP/DOWN button on the remote control until the contrast step No. becomes "5A"
7. Receive a broadcast and check if the picture is normal.
8. Press the TV/DVD button on the remote control to set to the DVD mode.
9. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(46)** on the remote control to select "CNTXD".
10. Press the VOL. UP/DOWN button on the remote control to set the same step numbers as the AV.
11. Press the GAME button on the remote control to set to the GAME mode.
12. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(58)** on the remote control to select "CNTXG".
13. Press the VOL. UP/DOWN button on the remote control to set the same step numbers as the AV.

2-16: Confirmation of Fixed Value (Step No.)

Please check if the fixed values of the each adjustment items are set correctly referring below.

NO.	FUNCTION	STEP NO.	NO.	FUNCTION	STEP NO.
02	OSD CONTRAST	03	38	COL. AV(MIN)	10
05	H BLK L	04	40	SHARPNESS AV	10
06	H BLK R	02	41	SUB BIAS	00
08	V POSITION	02	43	BRI. DVD(MAX)	70
10	V S CORRECTION	08	44	BRI. DVD(MIN)	10
11	V COMP	03	45	CONT. DVD(CENT.)	40
16	G DRIVE	07	47	CONT. DVD(MIN)	10
19	BRIGHTNESS(MAX)	70	49	COL. DVD(MAX)	70
20	BRIGHTNESS(MIN)	10	50	COL. DVD(MIN)	10
21	CONTRAST(CENT.)	40	52	SHARPNESS DVD	10
23	CONTRAST(MIN)	10	53	SUB BIAS	00
25	COLOR(MAX)	70	55	BRI. GAME(MAX)	70
26	COLOR(MIN)	10	56	BRI. GAME(MIN)	10
28	SHARPNESS	18	57	CONT. GAME(CENT.)	40
29	SUB BIAS	00	59	CONT. GAME(MIN)	10
31	BRI. AV(MAX)	70	60	SUB BIAS	00
32	BRI. AV(MIN)	10	61	TUNING V MUTE	00
33	CONT. AV(CENT.)	40	62	POWER ON V MUTE	40
35	CONT. AV(MIN)	10	66	TEST PWM	00
37	COL. AV(MAX)	70	69	H FREQ	3F

ELECTRICAL ADJUSTMENTS

3. PURITY AND CONVERGENCE ADJUSTMENTS

NOTE

1. Turn the unit on and let it warm up for at least 30 minutes before performing the following adjustments.
2. Place the CRT surface facing east or west to reduce the terrestrial magnetism.
3. Turn ON the unit and demagnetize with a Degauss Coil.

3-1: STATIC CONVERGENCE (ROUGH ADJUSTMENT)

1. Tighten the screw for the magnet. Refer to the adjusted CRT for the position. **(Refer to Fig. 3-1)**
   If the deflection yoke and magnet are in one body, untighten the screw for the body.
2. Receive the green raster pattern from the color bar generator.
3. Slide the deflection yoke until it touches the funnel side of the CRT.
4. Adjust center of screen to green, with red and blue on the sides, using the pair of purity magnets.
5. Switch the color bar generator from the green raster pattern to the crosshatch pattern.
6. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
7. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.
8. Adjust the crosshatch pattern to change to white by repeating steps 6 and 7.

3-2: PURITY

NOTE

Adjust after performing adjustments in section 3-1.

1. Receive the green raster pattern from color bar generator.
2. Adjust the pair of purity magnets to center the color on the screen.
   Adjust the pair of purity magnets so the color at the ends are equally wide.
3. Move the deflection yoke backward (to neck side) slowly, and stop it at the position when the whole screen is green.
4. Confirm red and blue colors.
5. Adjust the slant of the deflection yoke while watching the screen, then tighten the fixing screw.

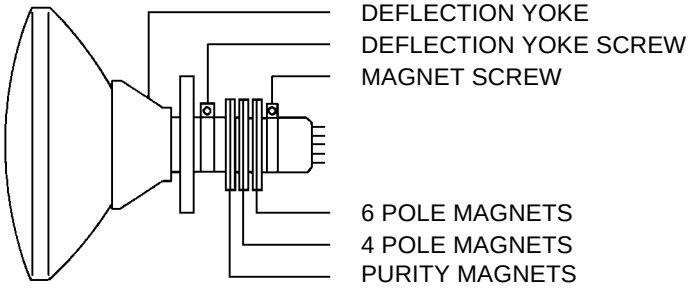

Fig. 3-1

3-3: STATIC CONVERGENCE

NOTE

Adjust after performing adjustments in section 3-2.

1. Receive the crosshatch pattern from the color bar generator.
2. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
3. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.

3-4: DYNAMIC CONVERGENCE

NOTE

Adjust after performing adjustments in section 3-3.

1. Adjust the differences around the screen by moving the deflection yoke upward/downward and right/left. **(Refer to Fig. 3-2-a)**
2. Insert three wedges between the deflection yoke and CRT funnel to fix the deflection yoke. **(Refer to Fig. 3-2-b)**

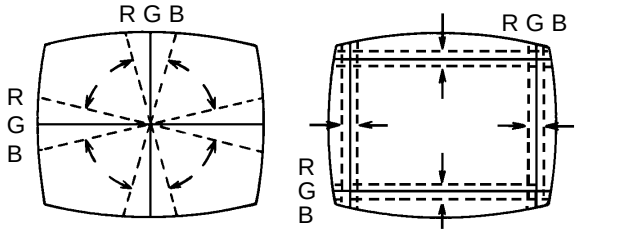

UPWARD/DOWNWARD SLANT RIGHT/LEFT SLANT

Fig. 3-2-a

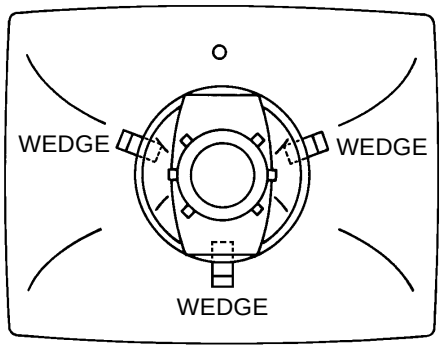

WEDGE POSITION

Fig. 3-2-b

ELECTRICAL ADJUSTMENTS

4. ELECTRICAL ADJUSTMENT PARTS LOCATION GUIDE (WIRING CONNECTION)

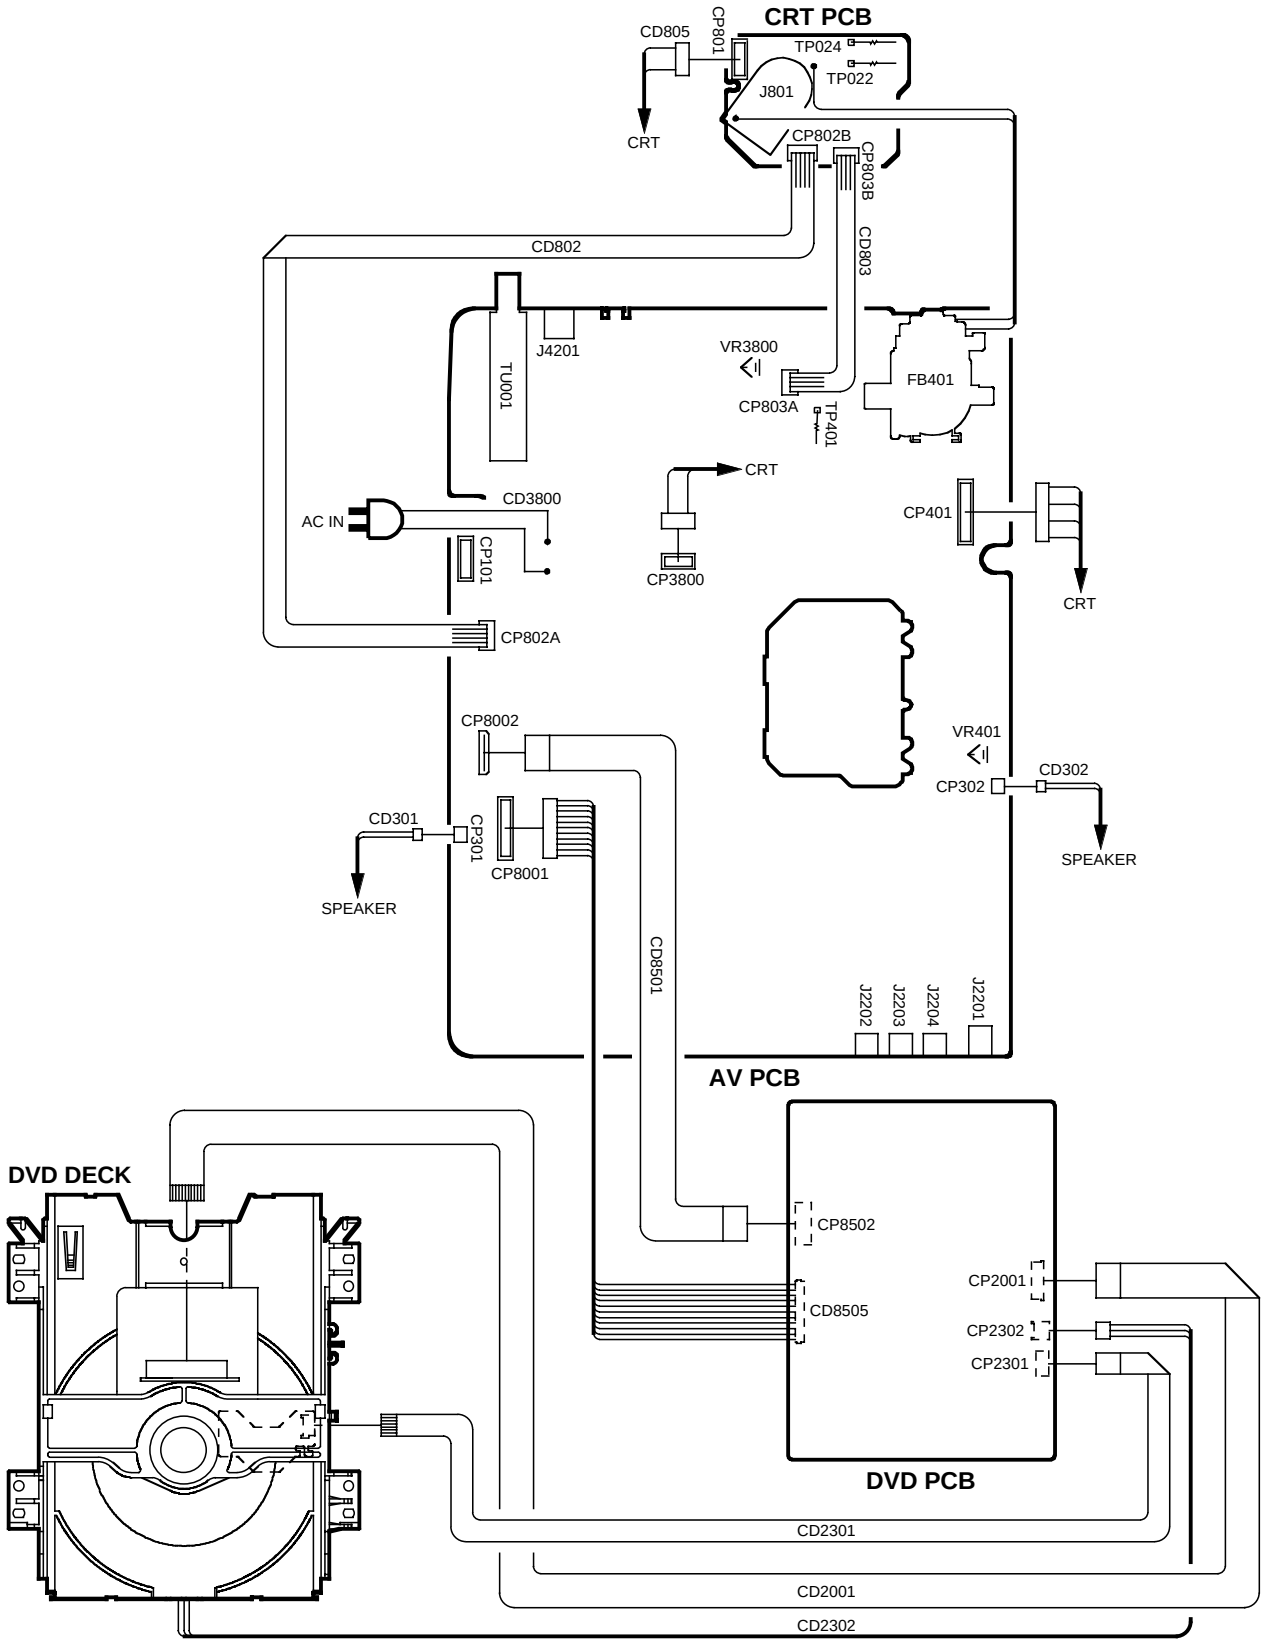

DVD ST SOLUTION BLOCK DIAGRAM

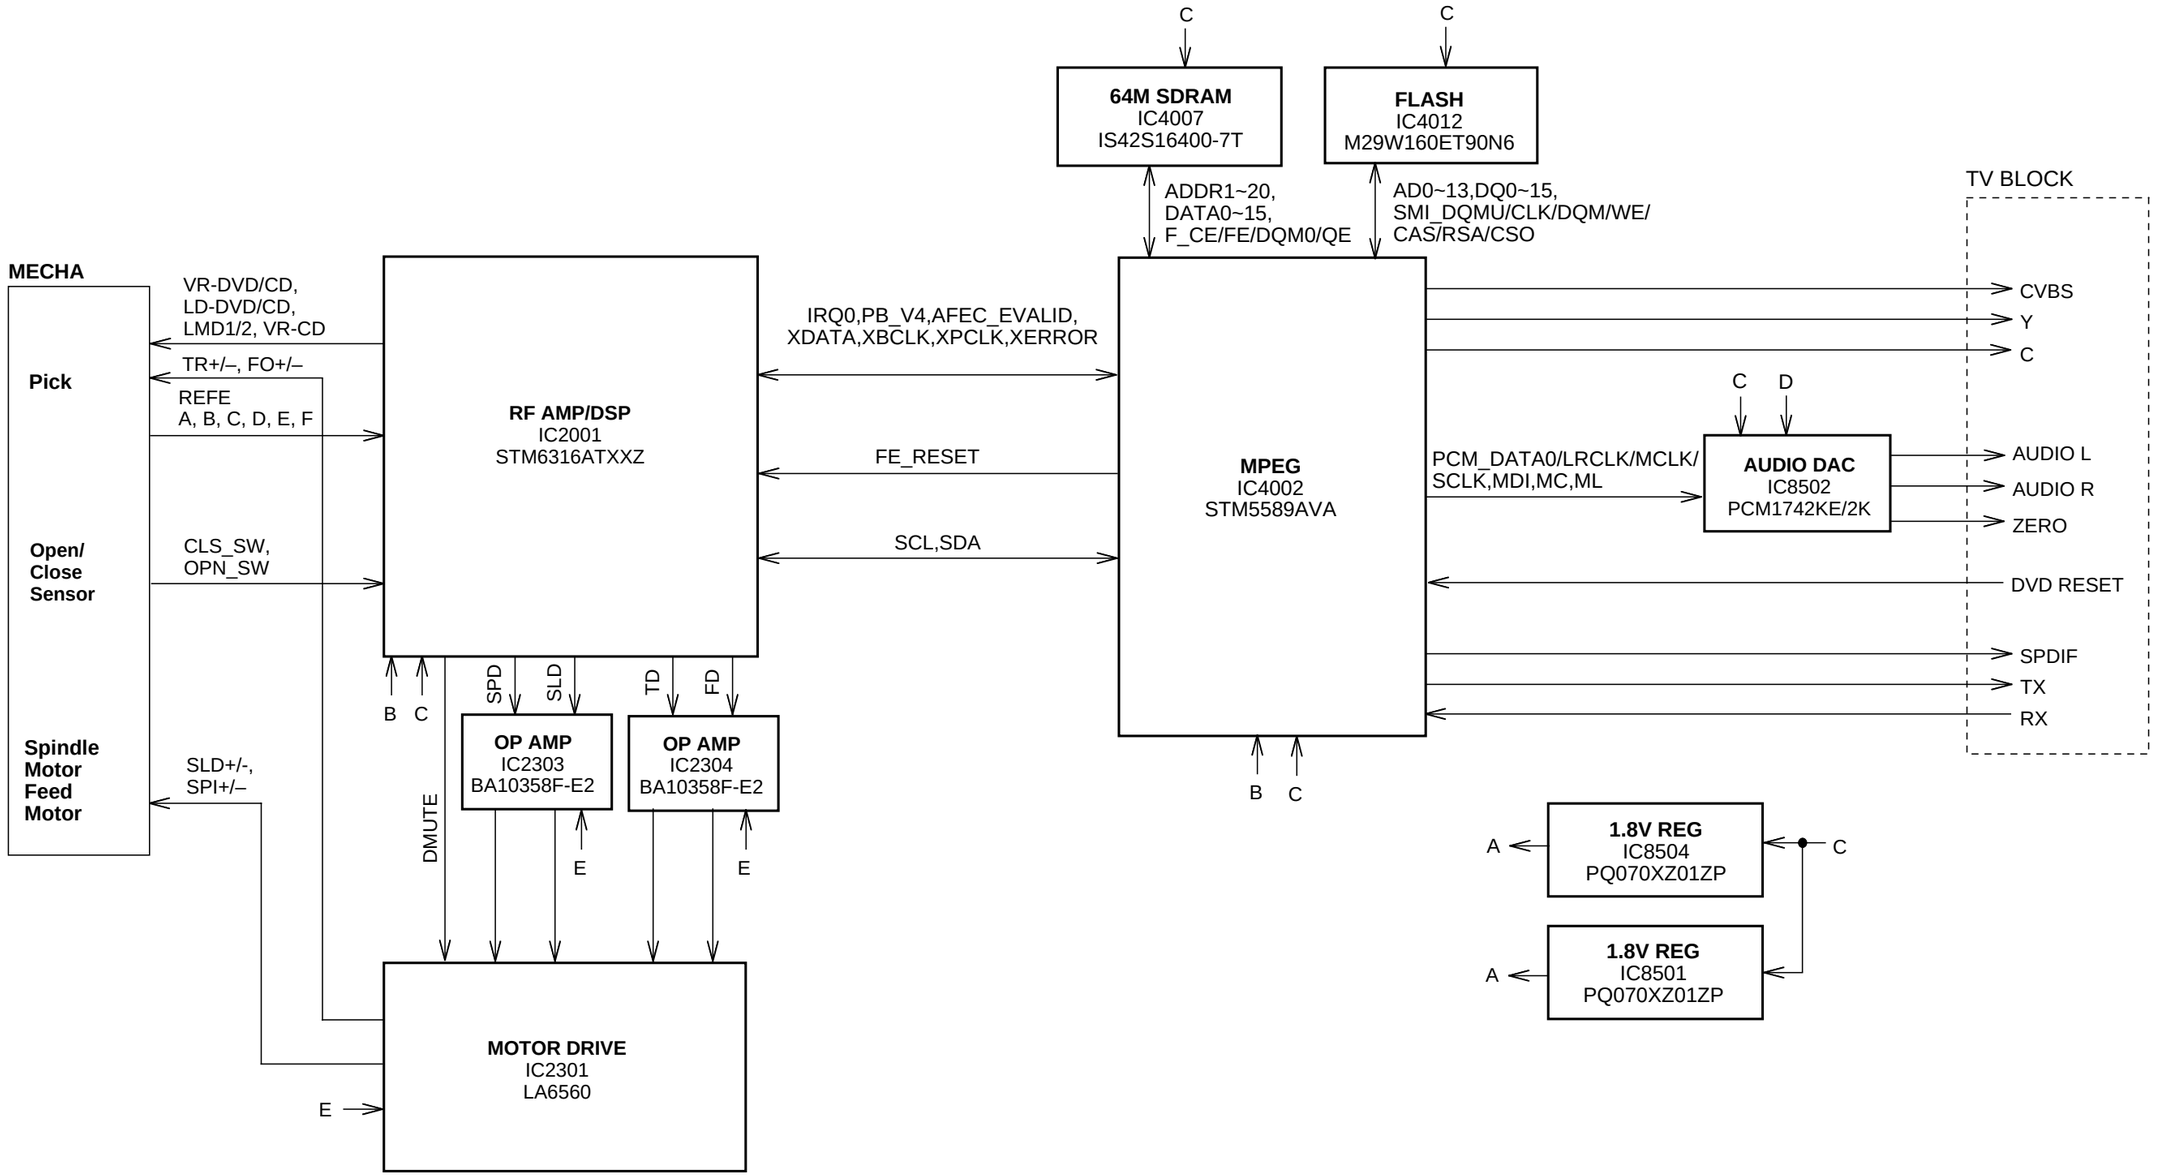

A --- 1.8V
B --- 2.5V
C --- 3.3V
D --- 5V
E --- 9V

TV BLOCK DIAGRAM

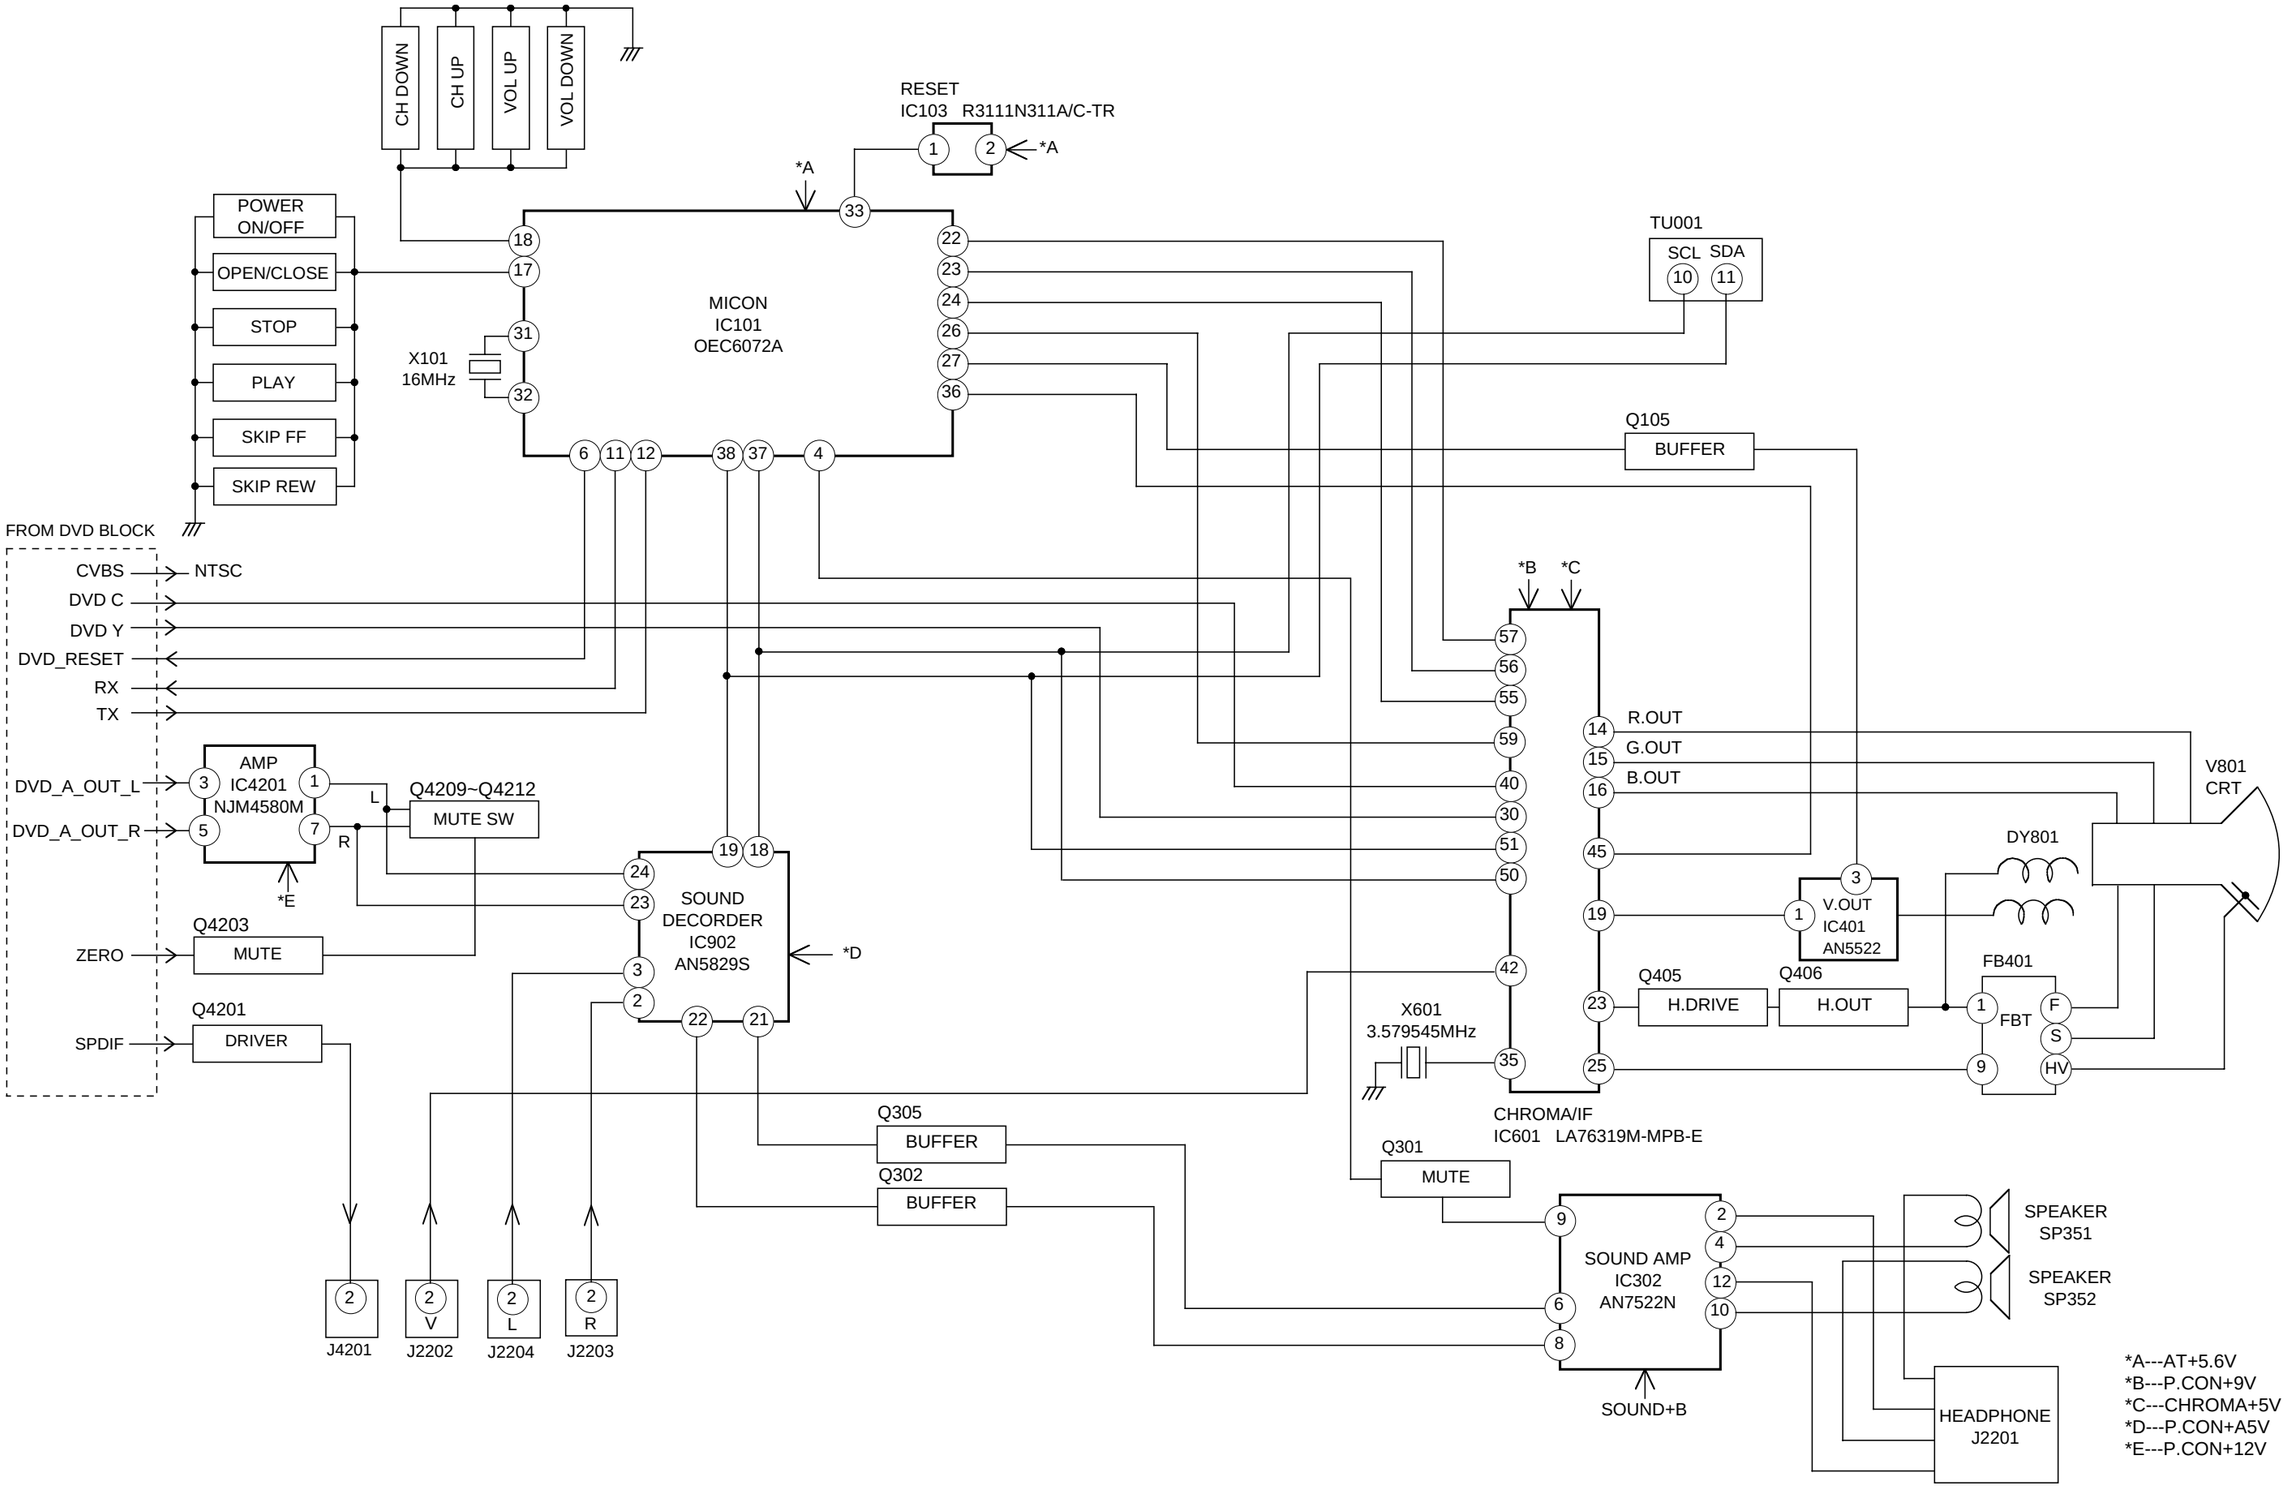

POWER BLOCK DIAGRAM

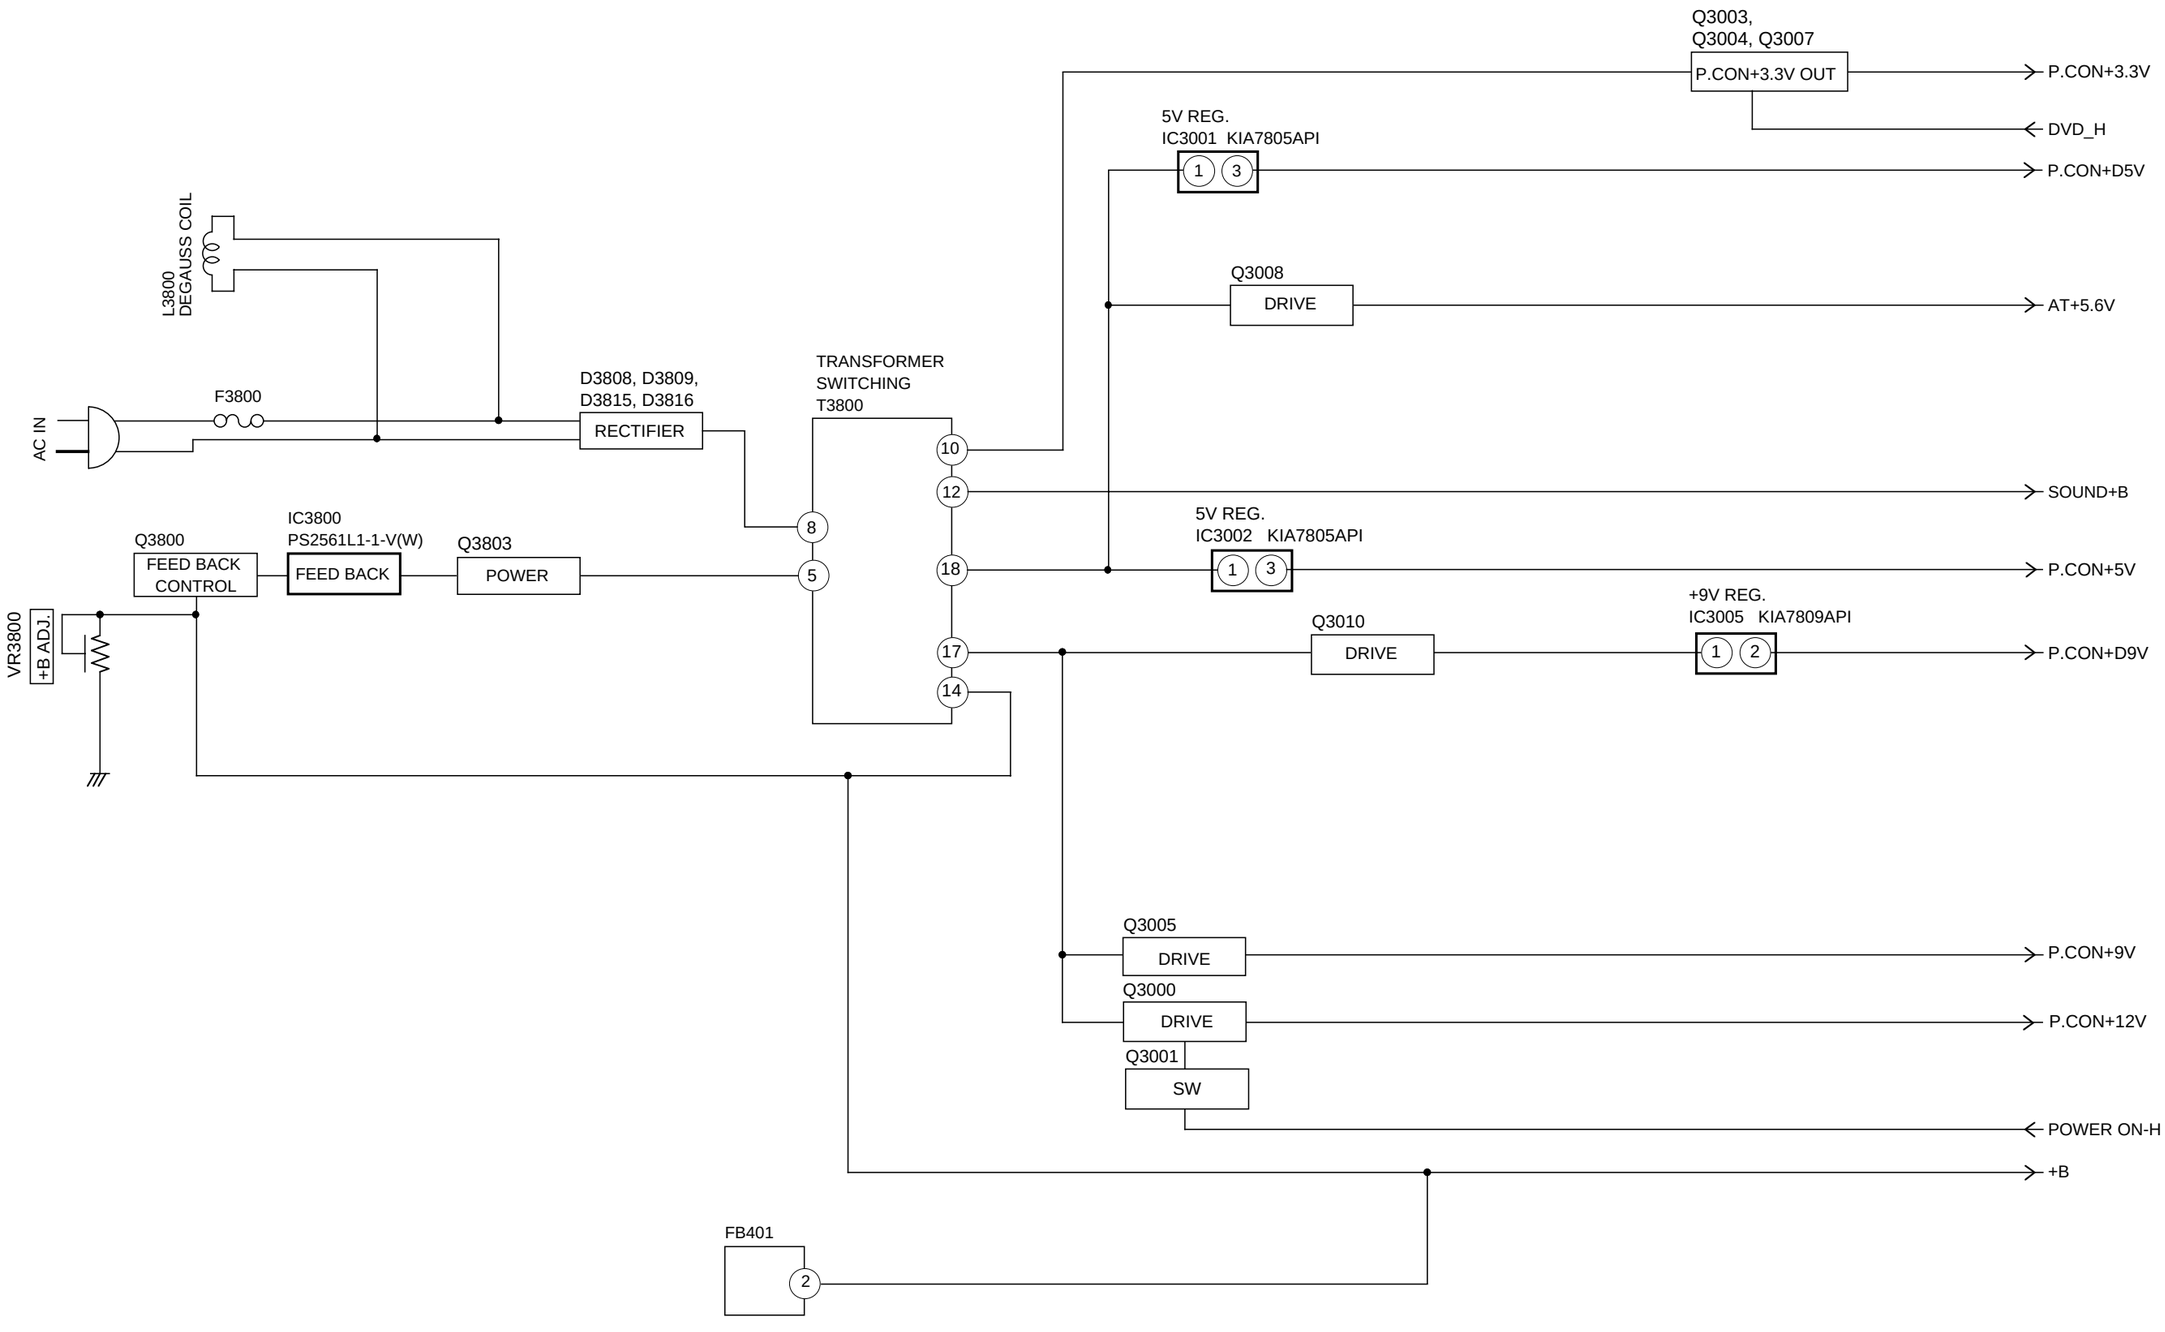

PRINTED CIRCUIT BOARDS

DVD (TOP SIDE)

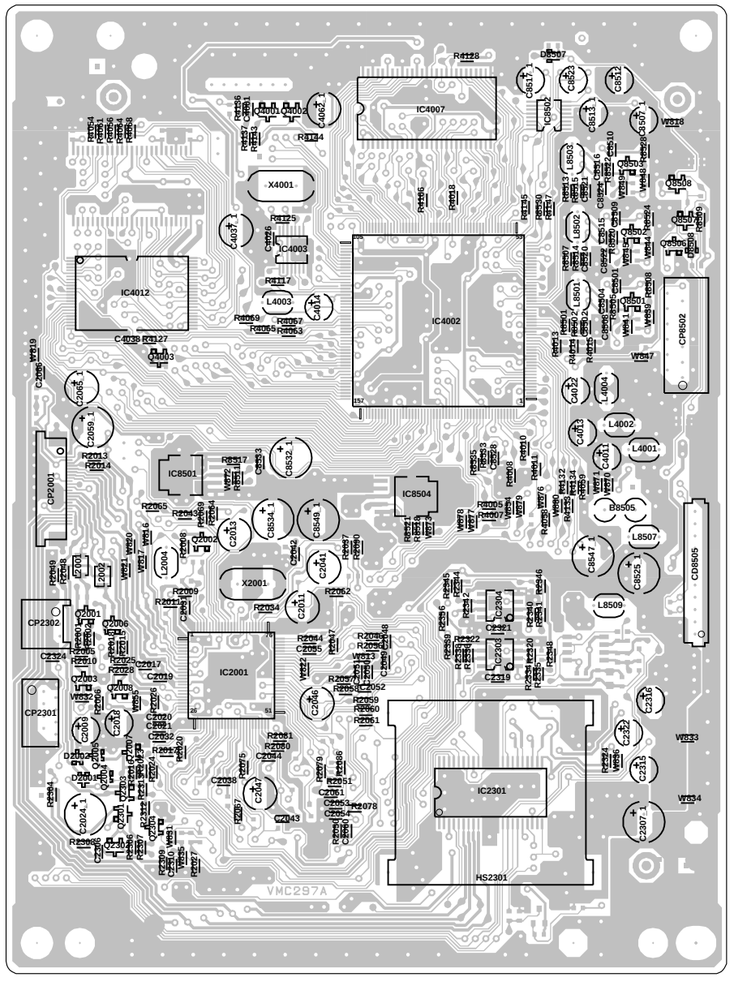

DVD (BOTTOM SIDE)

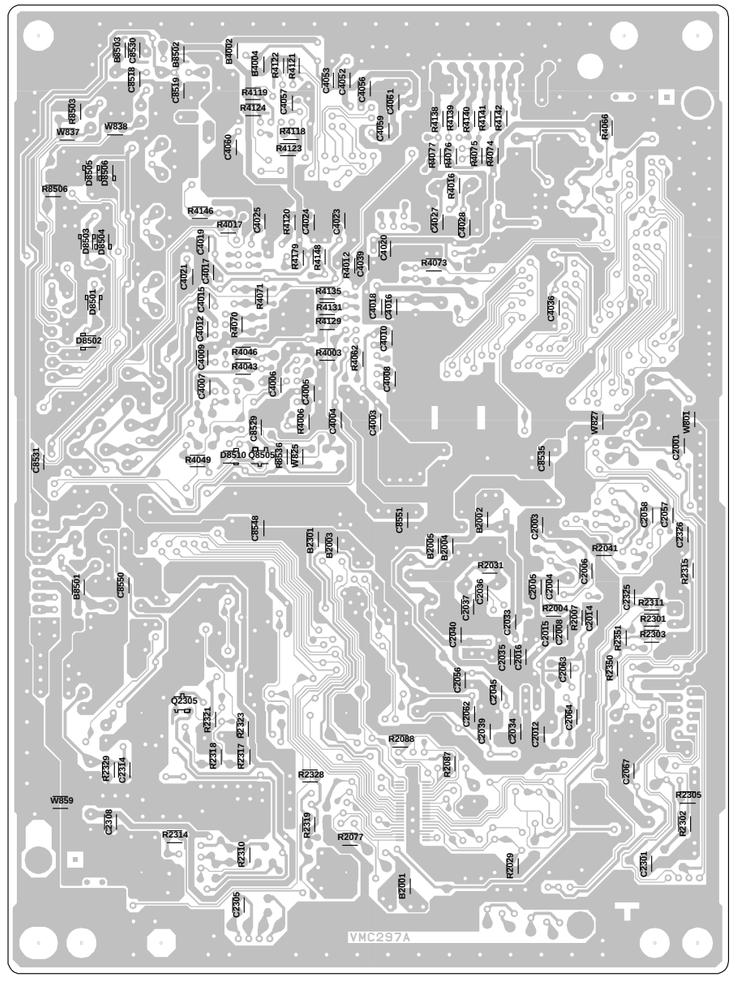

PRINTED CIRCUIT BOARDS
AV/CRT (INSERTED PARTS)
SOLDER SIDE

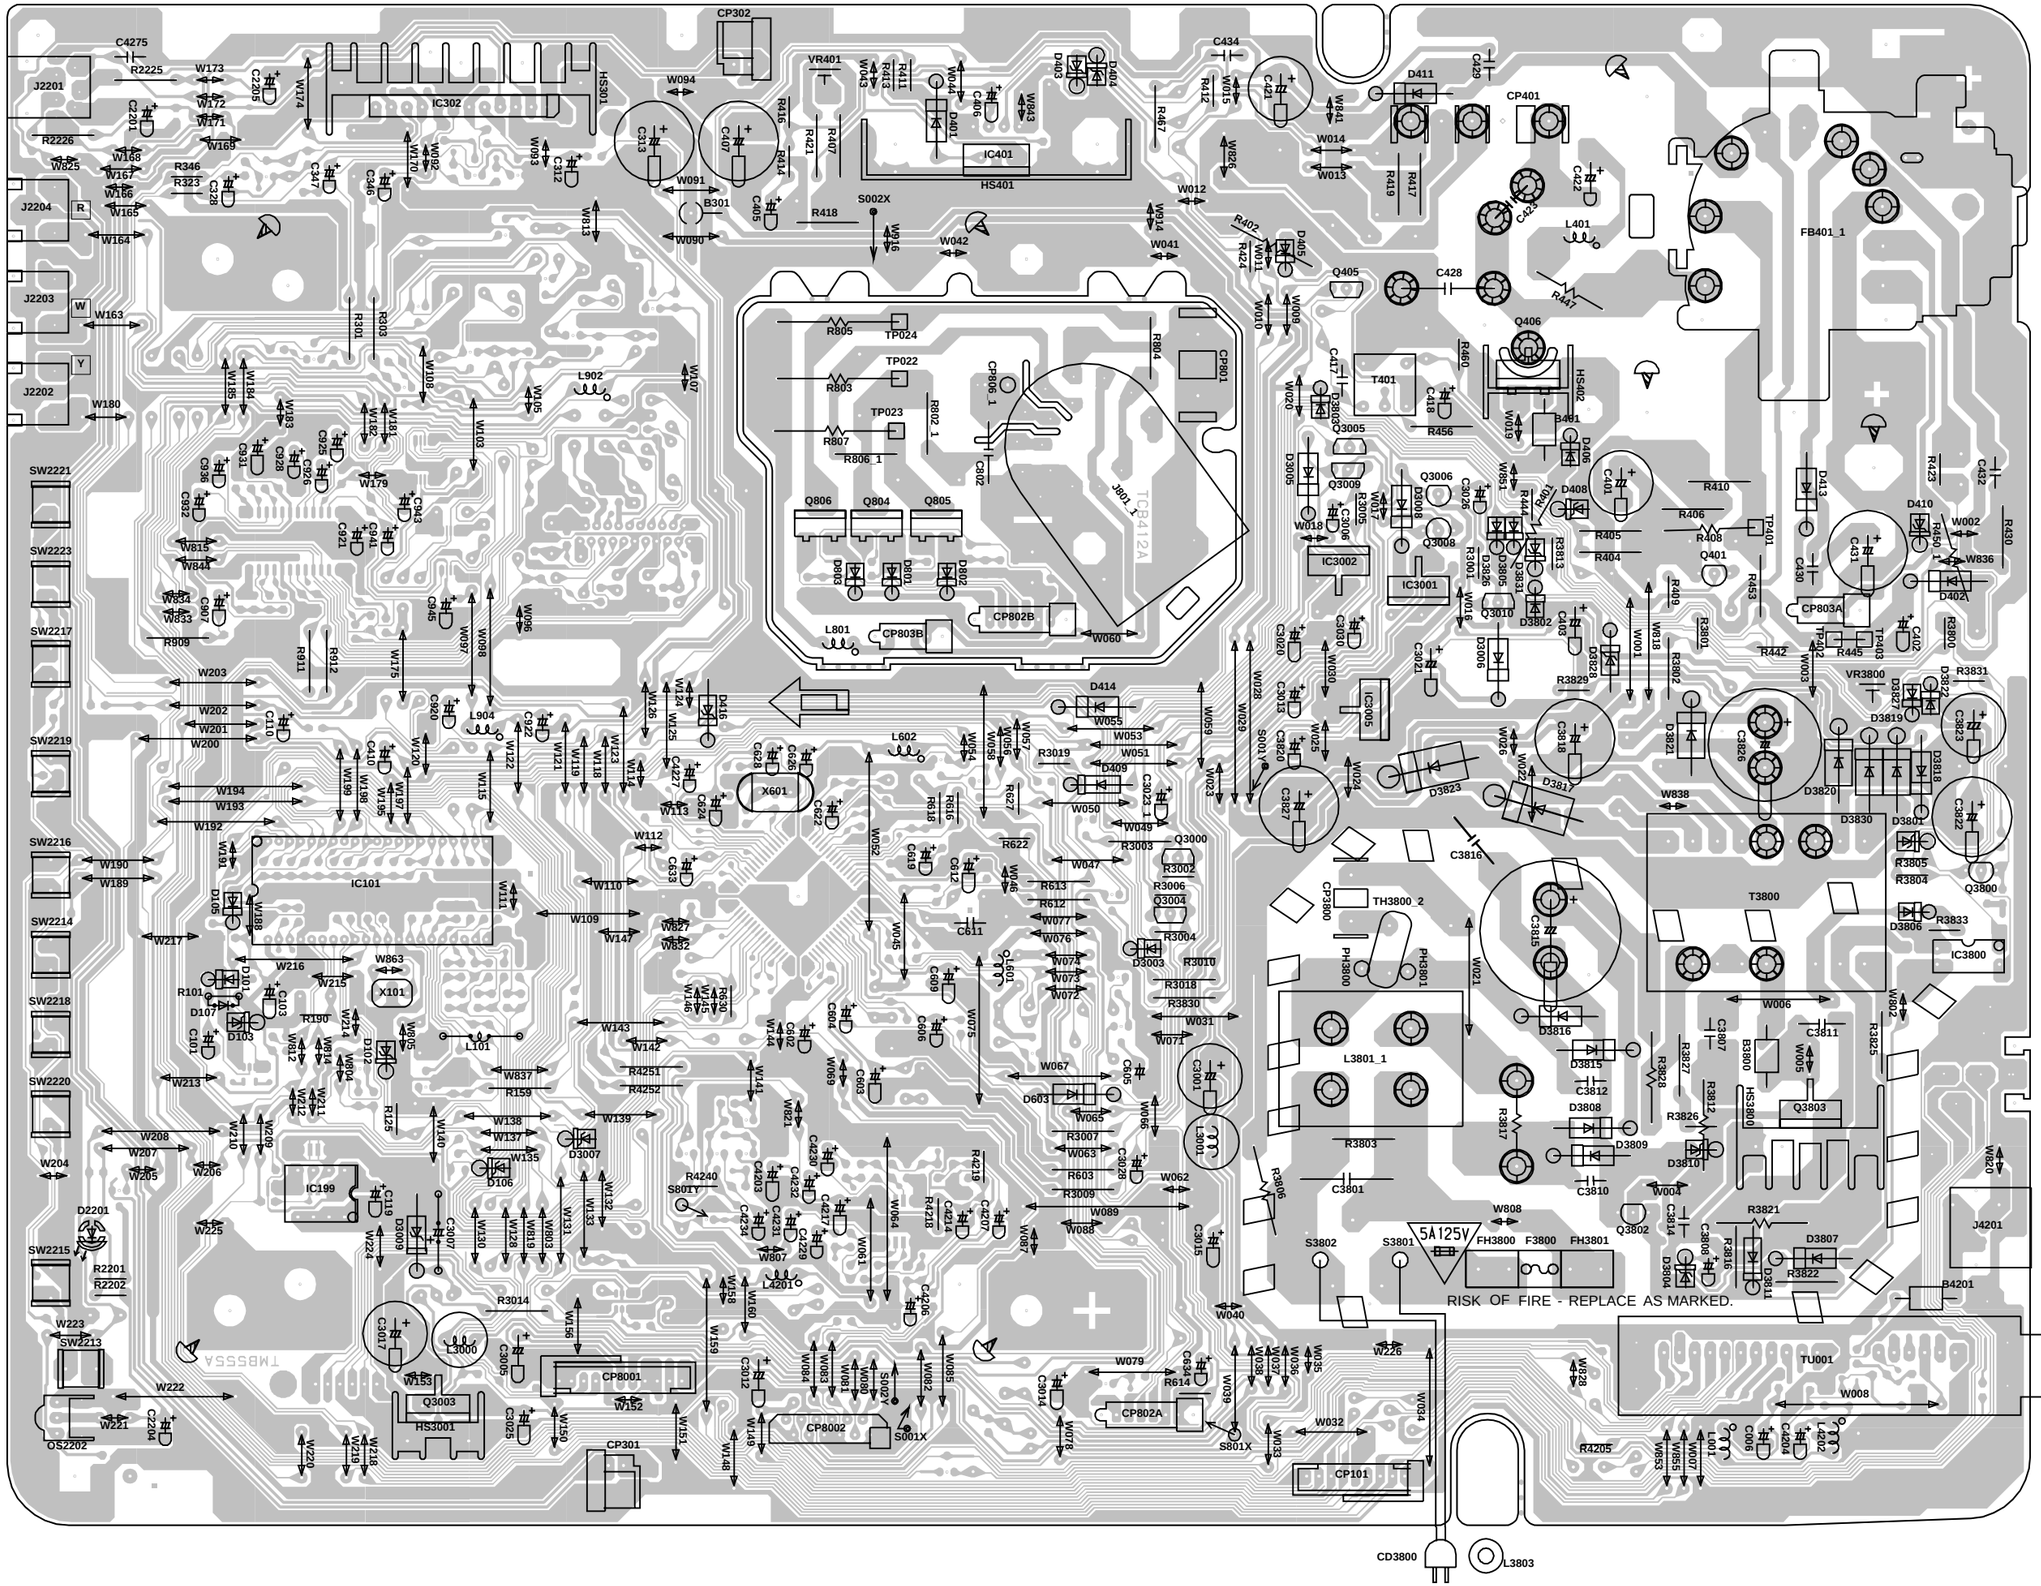
CP302
VR401
IC302
HS301
IC401
HS401
S002X
B301
CP801
TP024
TP022
TP023
R805
R803
R807
R806_1
R802_1
C802
C806_1
R804
J801_1
TCR412A
Q806
Q804
Q805
D803
D801
D802
L801
CP803B
CP802B
L902
L904
L602
X601
IC101
X101
IC199
D414
D409
D603
D3007
D106
D107
D103
D101
D102
L101
CP8001
CP8002
CP802A
CP301
S001X
S002Y
S801Y
L3000
HS3001
OS2202
D2201
SW2201
SW2223
SW2217
SW2219
SW2216
SW2214
SW2218
SW2220
SW2215
SW2213
J2201
J2204
J2203
J2202
R
W
Y
IC3002
IC3001
IC3005
Q3009
Q3006
Q3008
Q3010
Q401
Q405
Q406
T401
L401
FB401_1
CP401
D411
D408
D405
D3005
D3006
D3826
D3825
D3827
D3802
D3823
D3816
D3815
D3808
D3809
D3810
D3804
D3807
D3811
D3822
D3821
D3820
D3830
D3801
D3819
D3818
D3806
D3805
D3828
D3829
D410
D413
D402
CP803A
TU001
B4201
J4201
CP3800
TH3800_2
PH3800
PH3801
T3800
Q3800
Q3803
Q3802
IC3800
L3801_1
L3803
CD3800
CP101
S3801
S3802
FH3800
FH3801
F3800
5A125V
RISK OF FIRE - REPLACE AS MARKED.
HS402
HS3800
TP401
TP402
TP403
VR3800
C4275
R2225
R2226
C2201
C2205
C347
C246
C328
C313
C407
C405
C312
C406
C434
C427
C429
C422
C423
C428
C418
C456
C417
C401
C431
C430
C432
C3026
C3030
C3013
C3027
C3021
C3028
C3029
C3025
C3006
C3005
C3015
C3814
C3813
C3818
C3817
C3816
C3815
C3812
C3811
C3810
C3807
C3808
C3809
C3823
C3822
C3824
C3826
C3827
C3801
C3802
C3803
C3804
C3805
C3806
C3821
C3830
C3831
C3832
C3833
C3834
C3835
C3836
C3837
C3838
C3839
C3840
C3841
C3842
C3843
C3844
C3845
C3846
C3847
C3848
C3849
C3850
C3851
C3852
C3853
C3854
C3855
C3856
C3857
C3858
C3859
C3860
C3861
C3862
C3863
C3864
C3865
C3866
C3867
C3868
C3869

PRINTED CIRCUIT BOARDS
AV/CRT (CHIP MOUNTED PARTS)
SOLDER SIDE

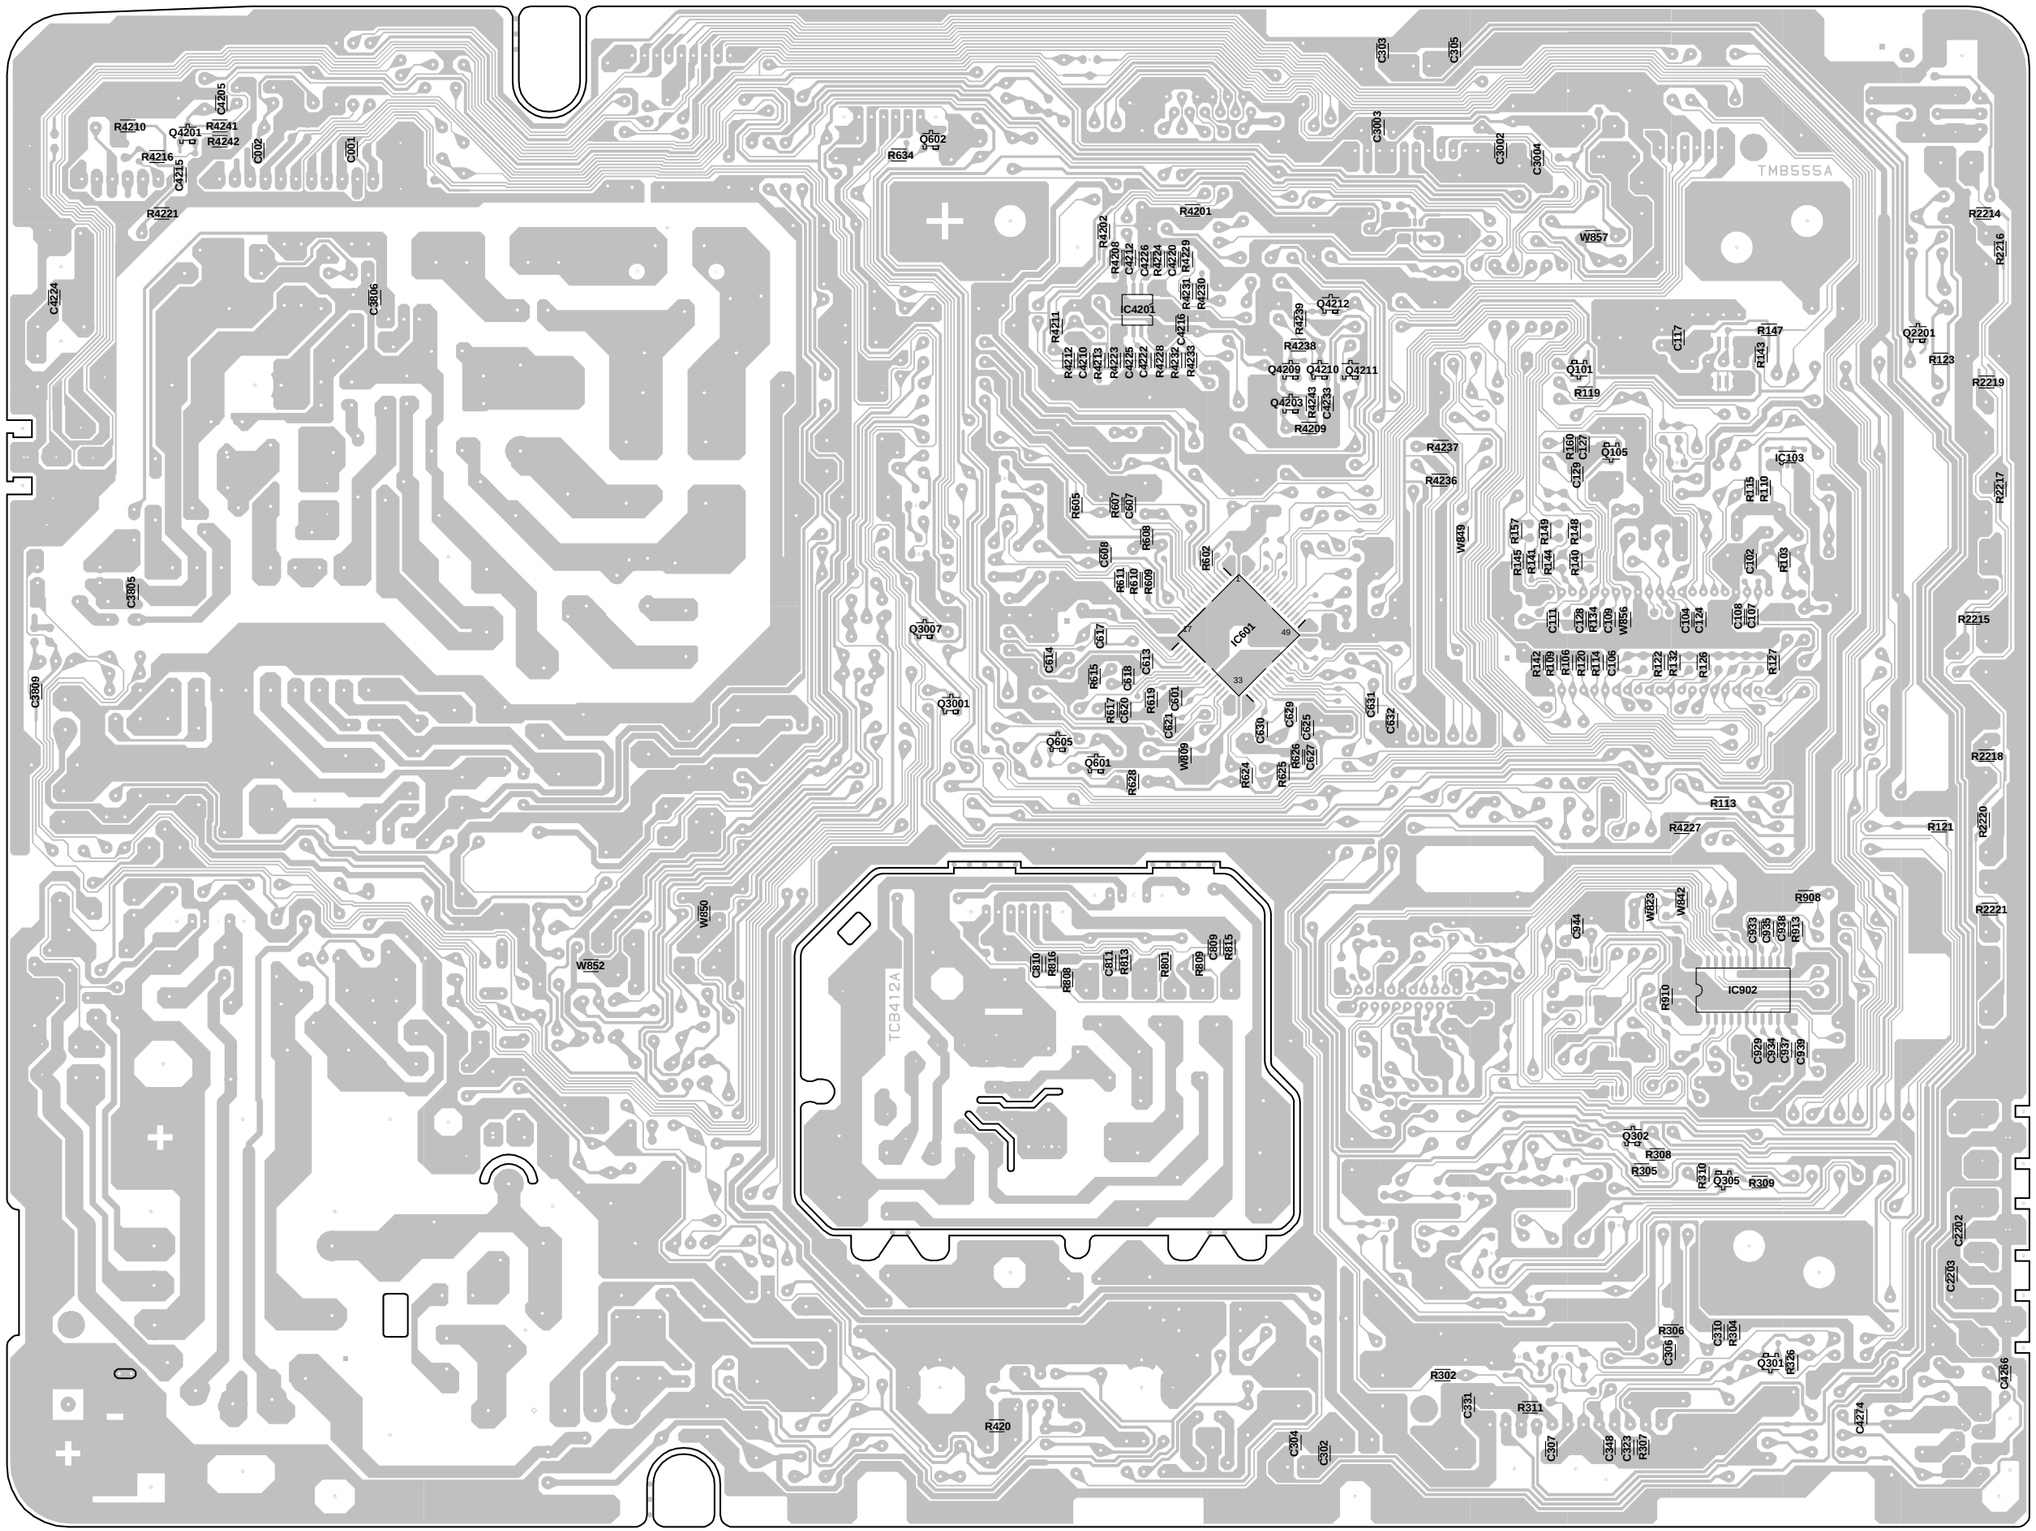

RF_AMP/DSP SCHEMATIC DIAGRAM

(DVD MT PCB)

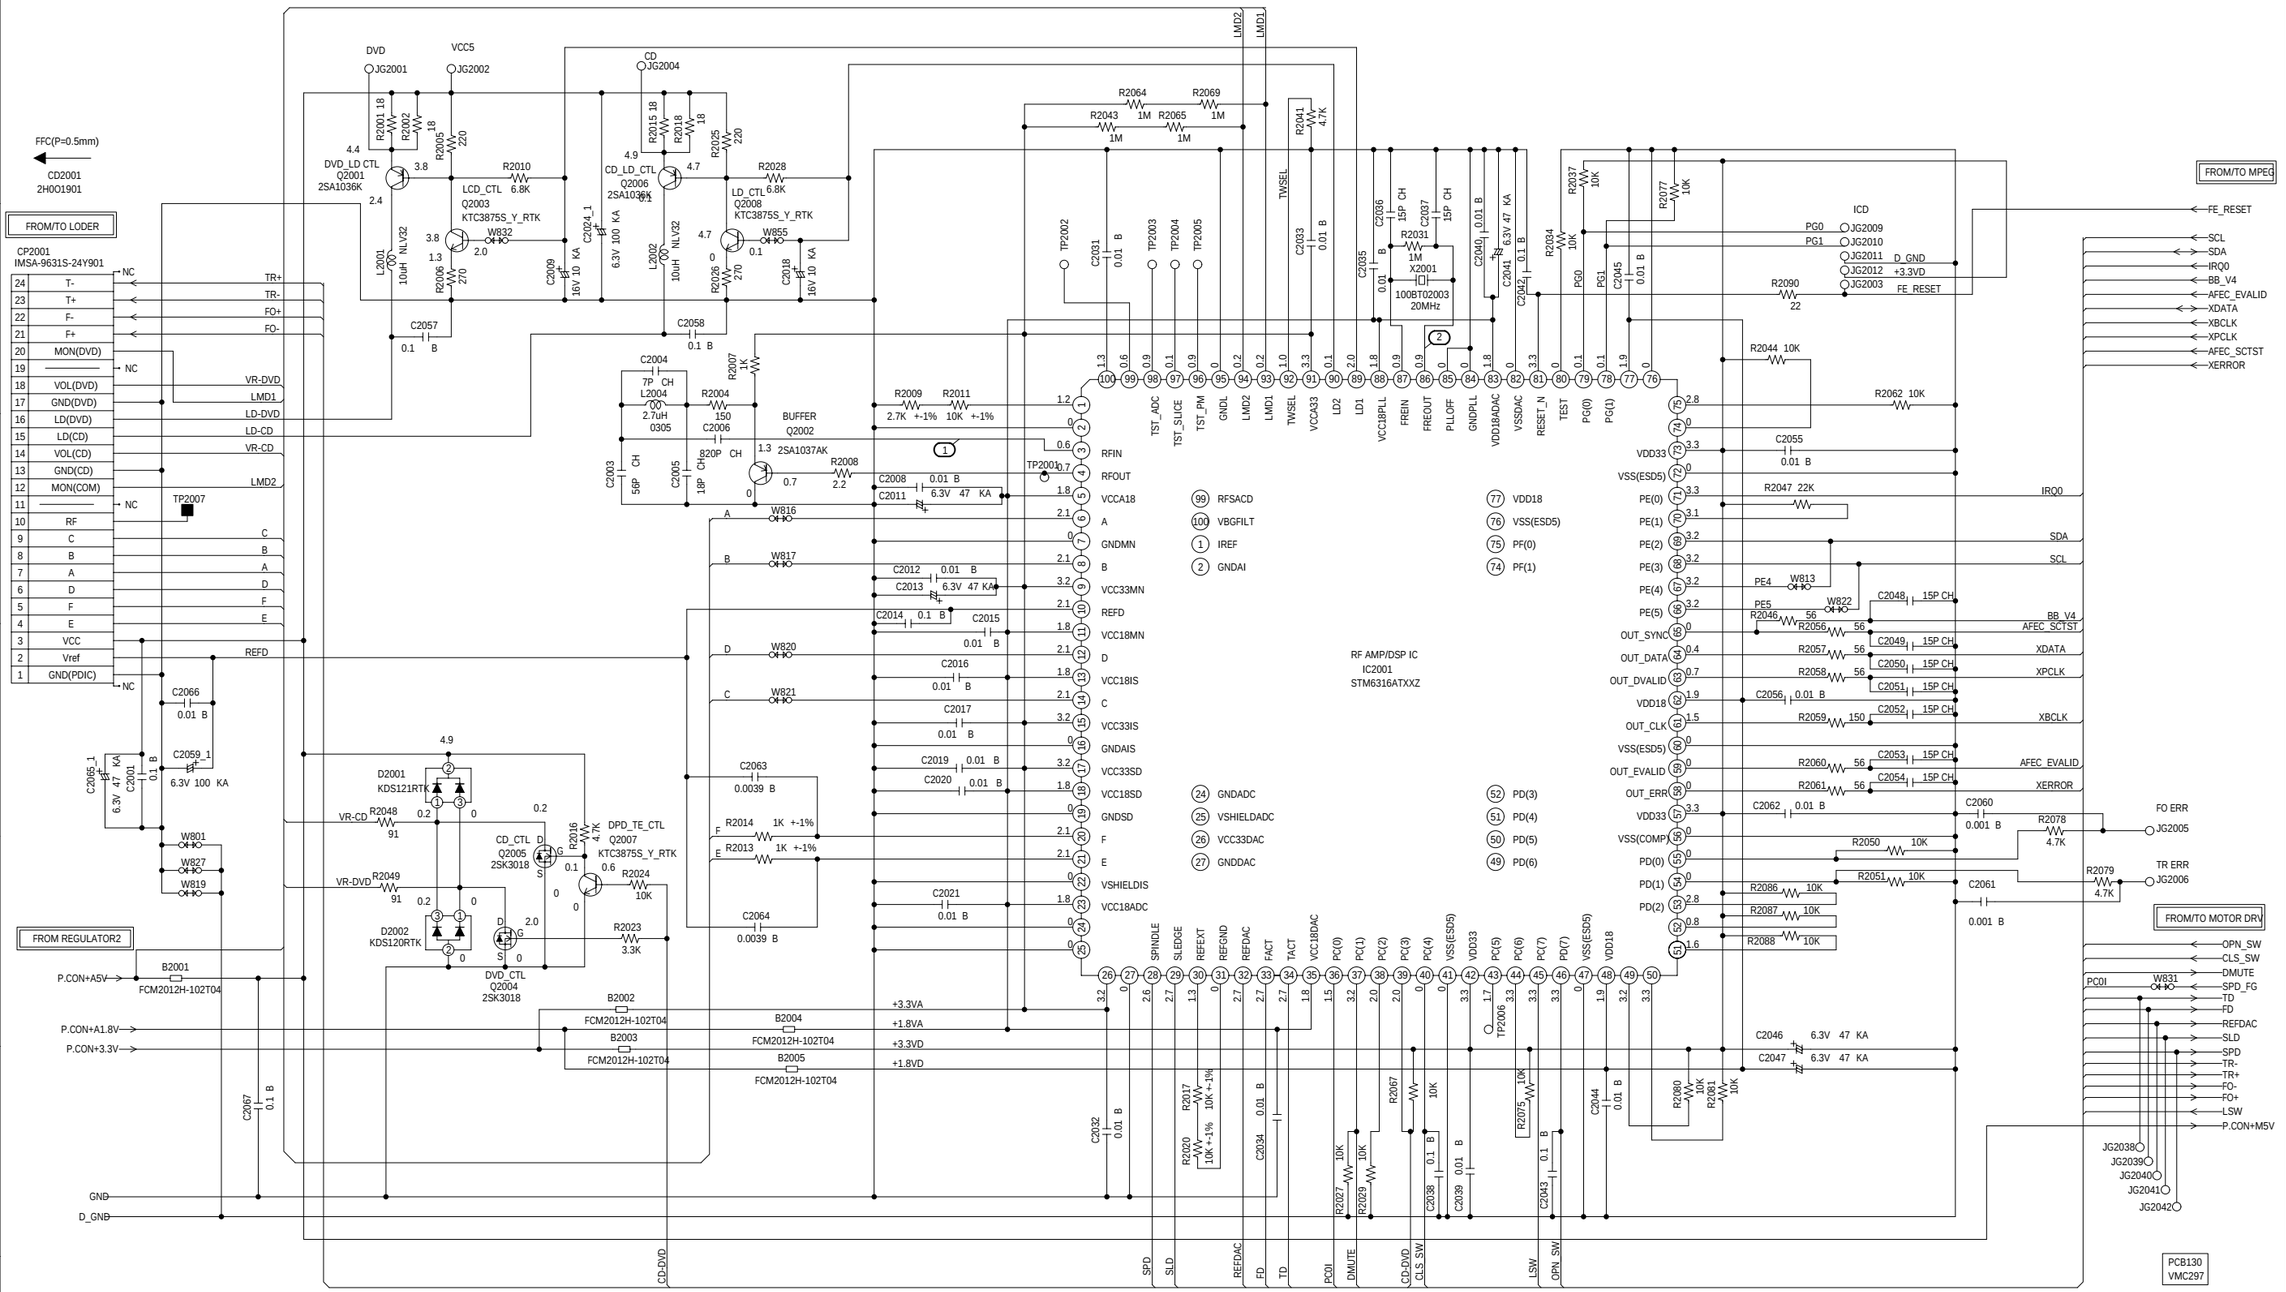

MOTOR DRV SCHEMATIC DIAGRAM

(DVD MT PCB)

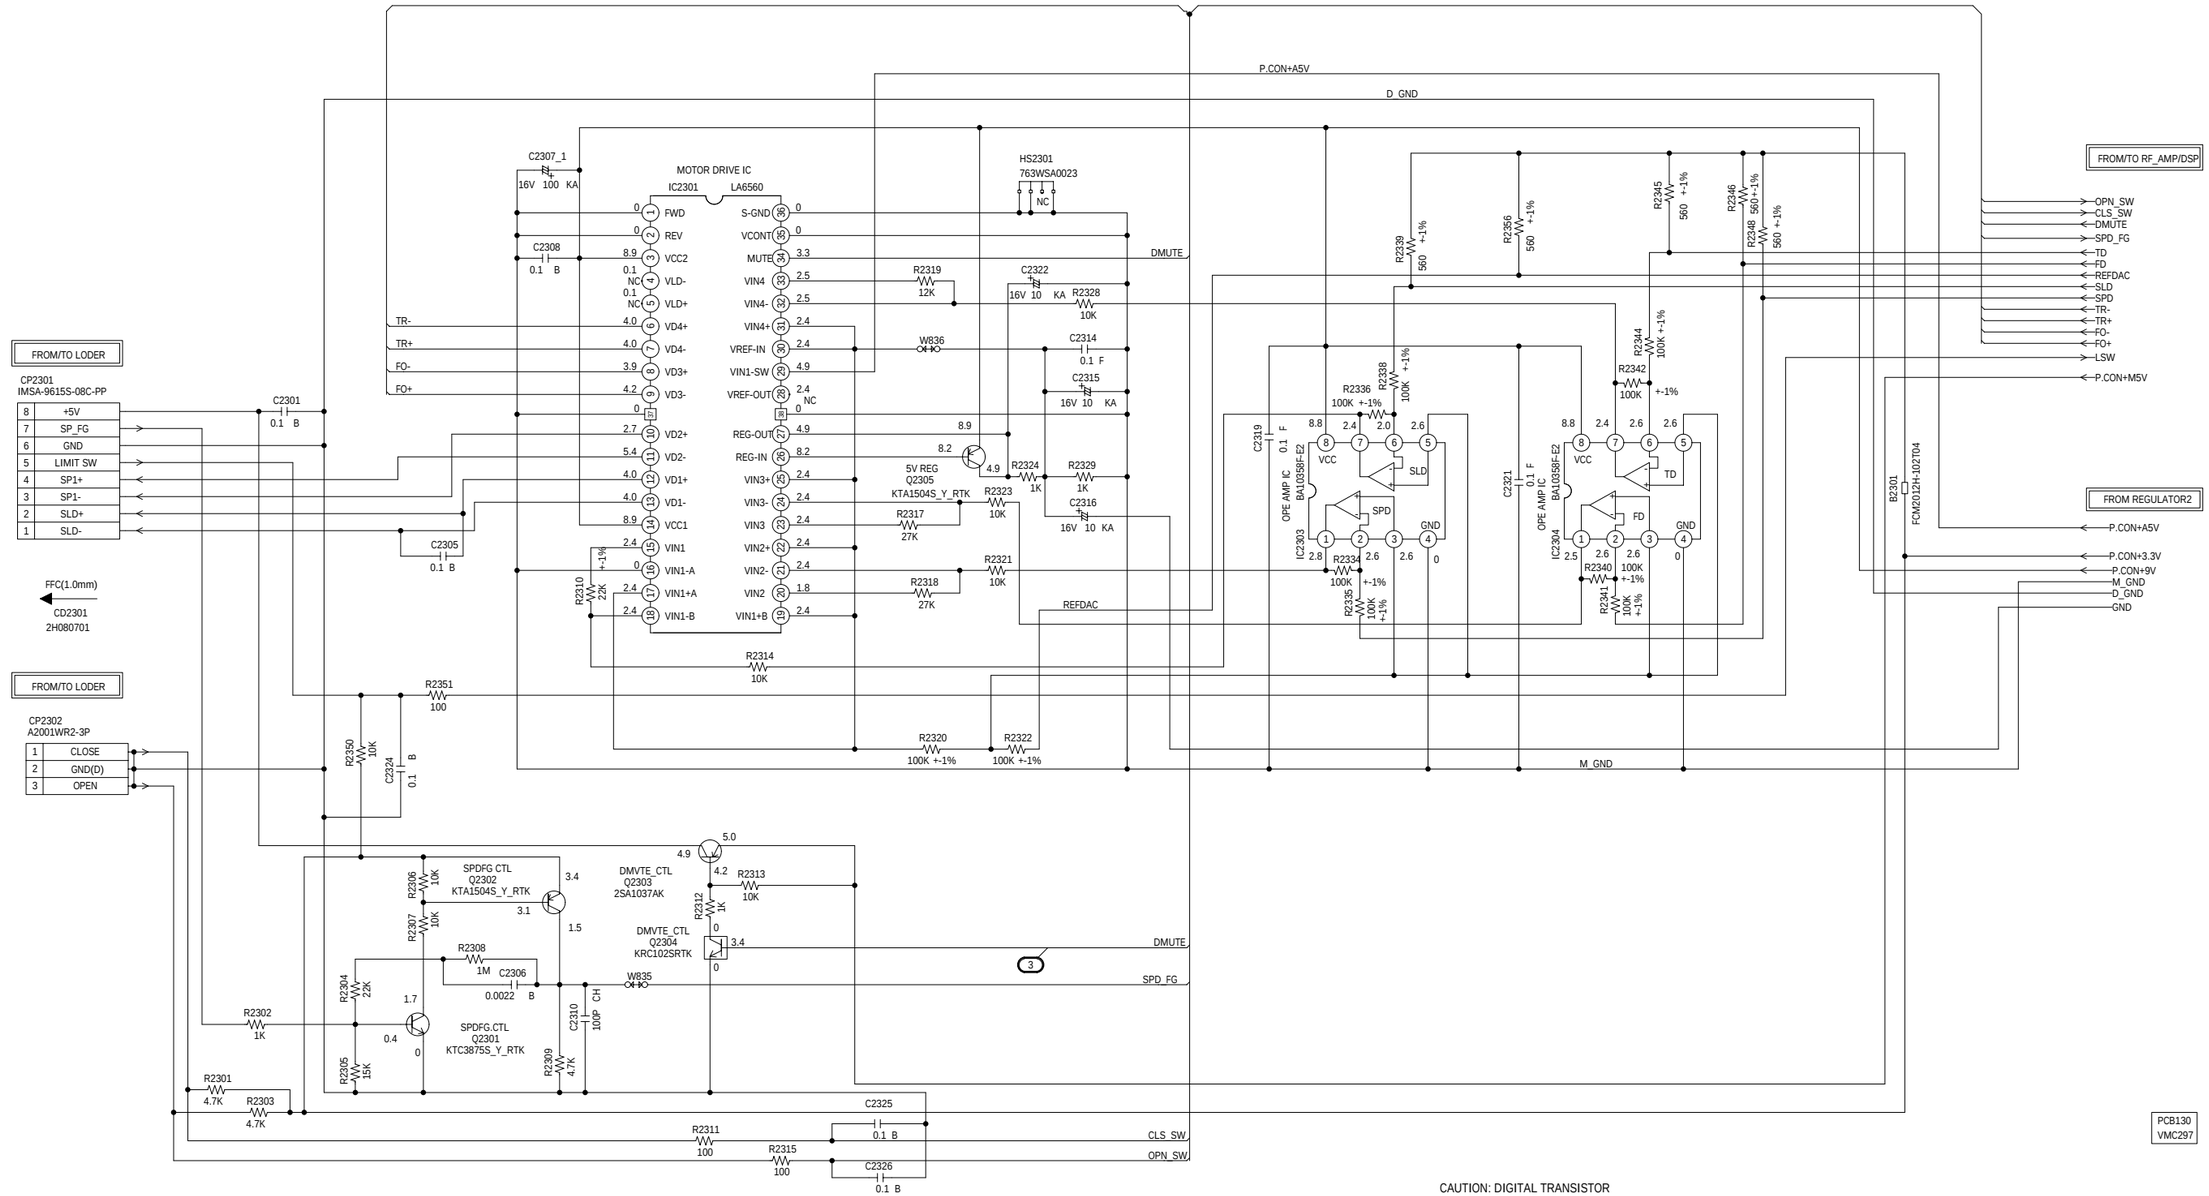

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE。

NOTE: THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

CAUTION: DIGITAL TRANSISTOR



MPEG SCHEMATIC DIAGRAM

(DVD MT PCB)

MPEG IC
IC4002
STM5589AVA

CLOCK GENERATOR IC
IC4003
SN74AHCU04PWR

FROM/TO MEMORY

FROM/TO RF_AMP/DSP

FROM/TO REGULATOR2

FROM/TO AUDIO/VIDEO

PCB130
VMC297

NOTE:THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE 。

NOTE:THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

MEMORY SCHEMATIC DIAGRAM

(DVD MT PCB)

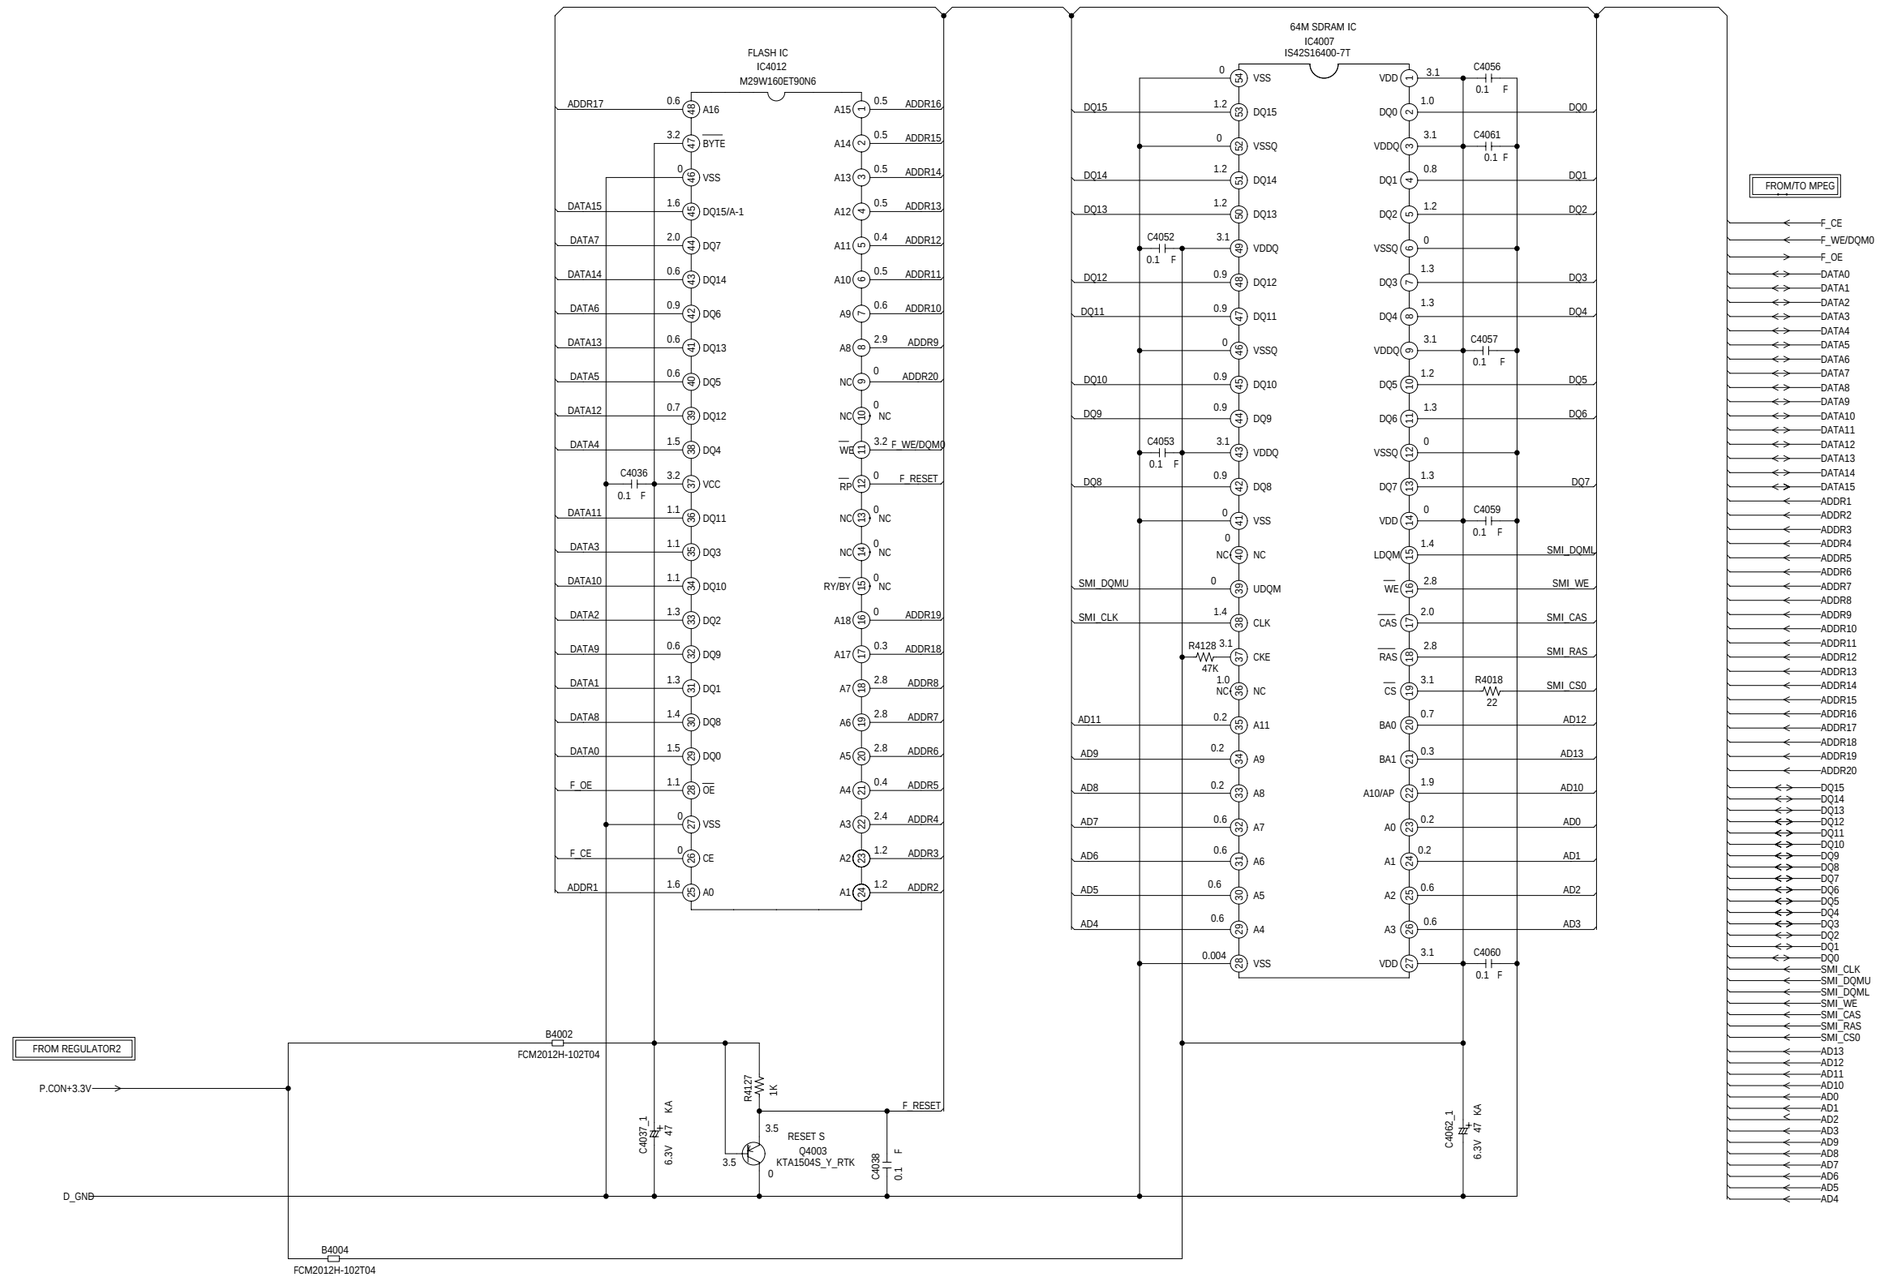

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE。

NOTE: THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

AUDIO/VIDEO SCHEMATIC DIAGRAM

(DVD MT PCB)

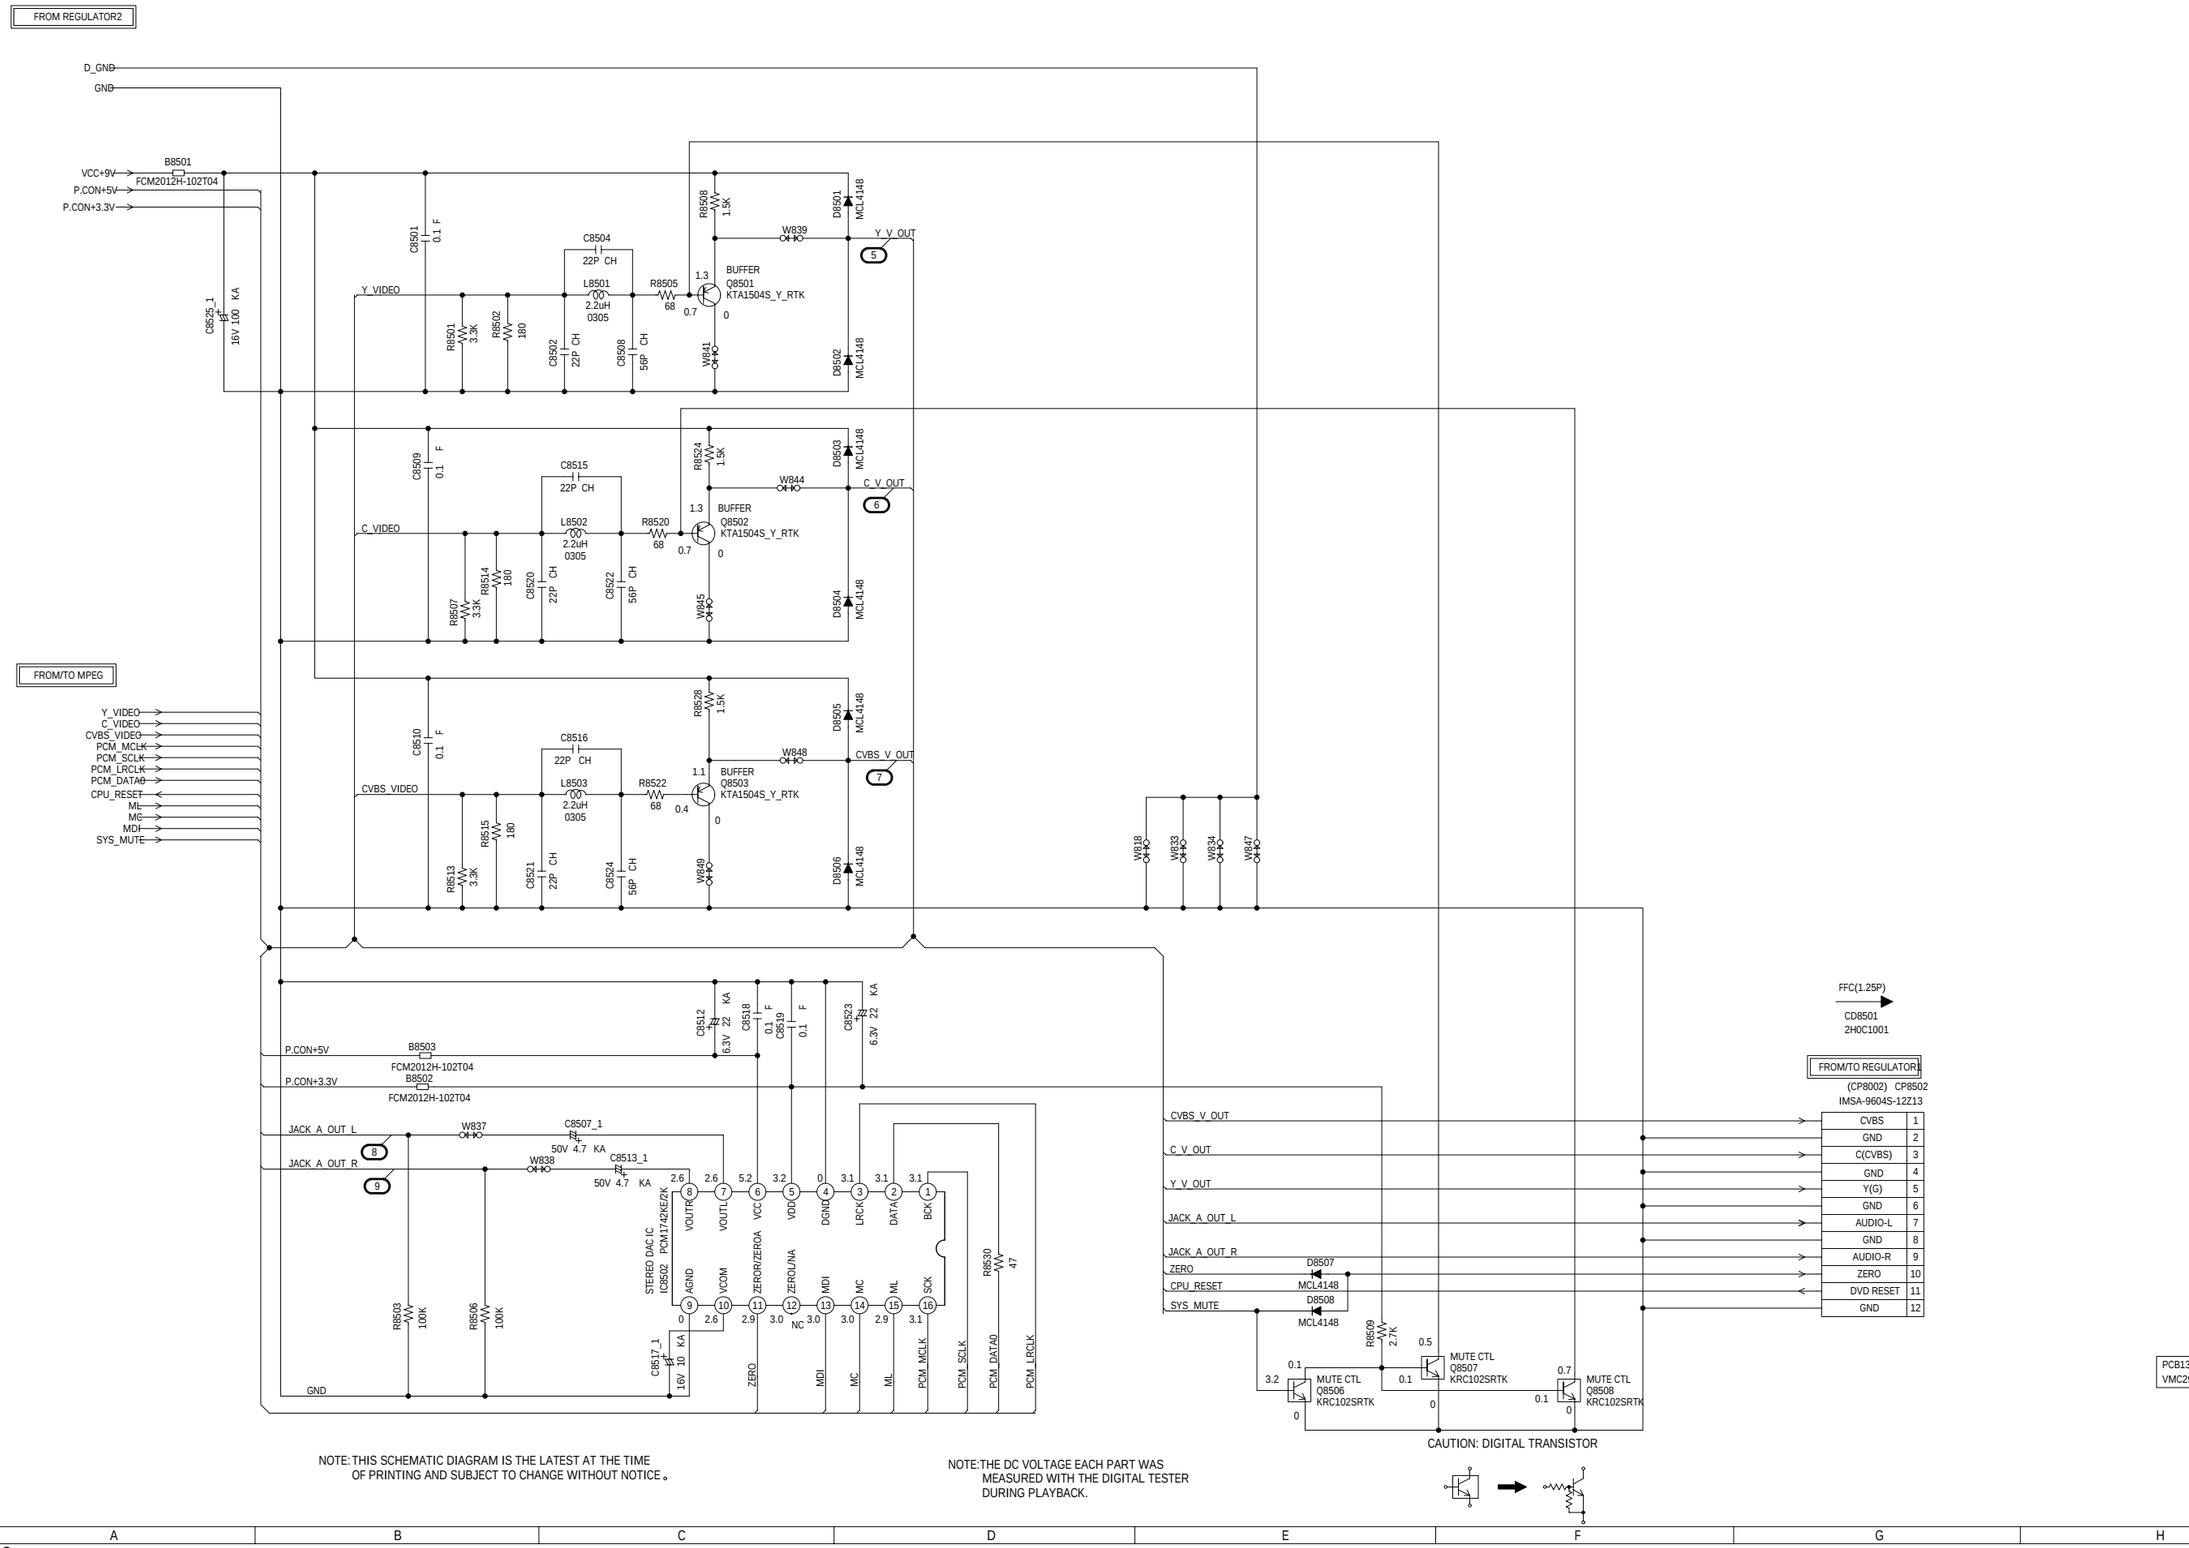

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE。

NOTE: THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

REGULATOR2 SCHEMATIC DIAGRAM
(DVD MT PCB)

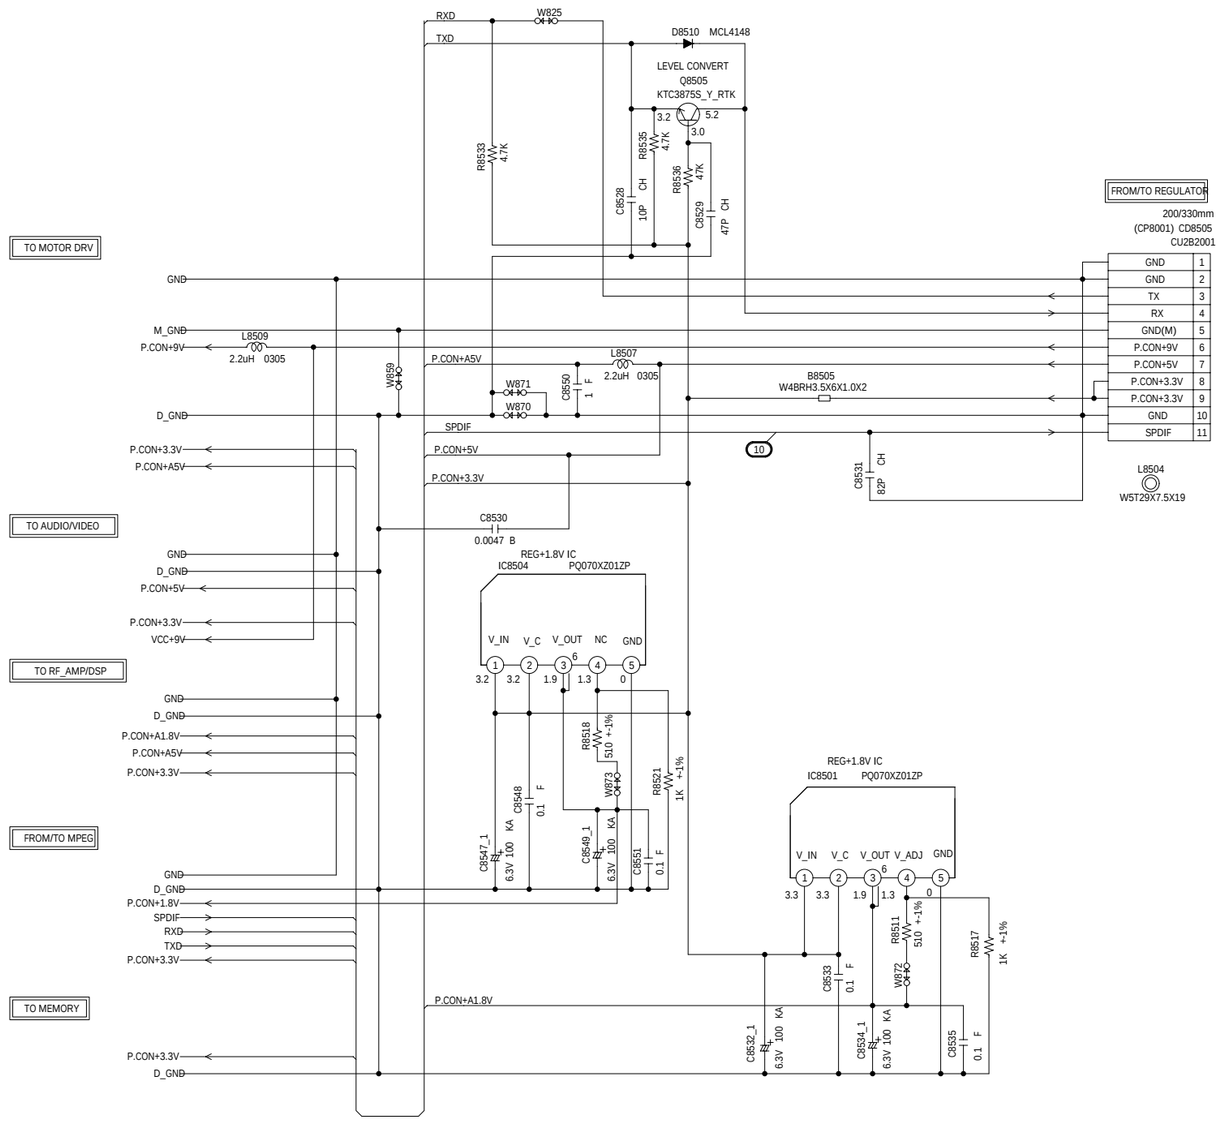

PCB130
VMC297

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE。

NOTE:THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

REGULATOR SCHEMATIC DIAGRAM
(AV PCB)

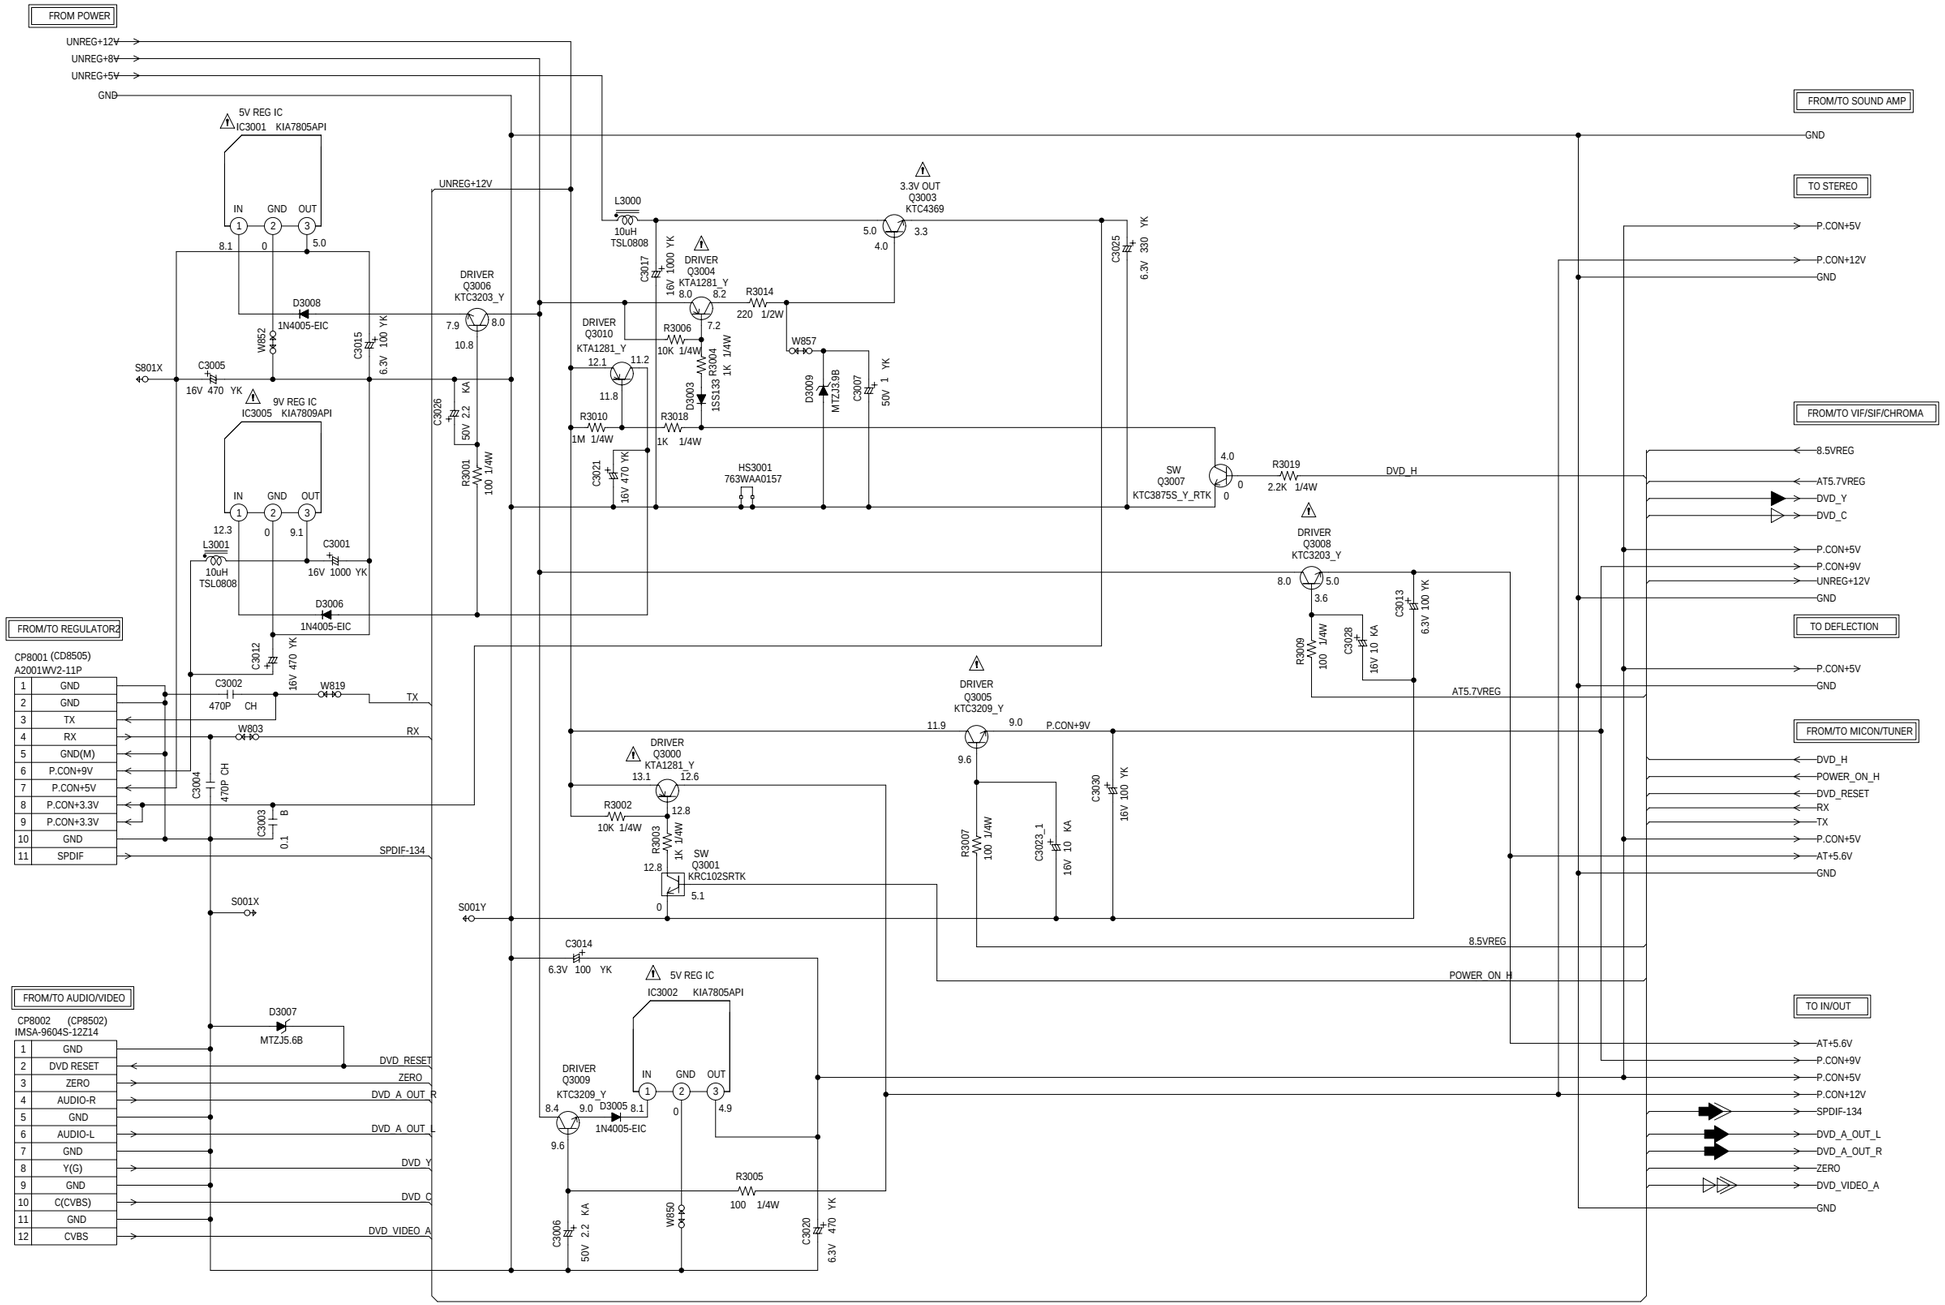

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE 。

NOTE: THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

ATTENTION: LES PIECES REPAREES PAR UN ⚠ ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES。

CAUTION SINCE THESE PARTS MARKED BY ⚠ ARE CRITICAL FOR SAFETY,USE ONES DESCRIBED IN PARTS LIST ONLY 。

CAUTION: DIGITAL TRANSISTOR

◀ PLAYBACK LUMINANCE SIGNAL
◁ PLAYBACK COLOR SIGNAL
◁◀ PLAYBACK VIDEO SIGNAL
◀ AUDIO SIGNAL(PB)
◀◀ DIGITAL AUDIO SIGNAL(PB)

MICON /TUNER SCHEMATIC DIAGRAM
(AV PCB)

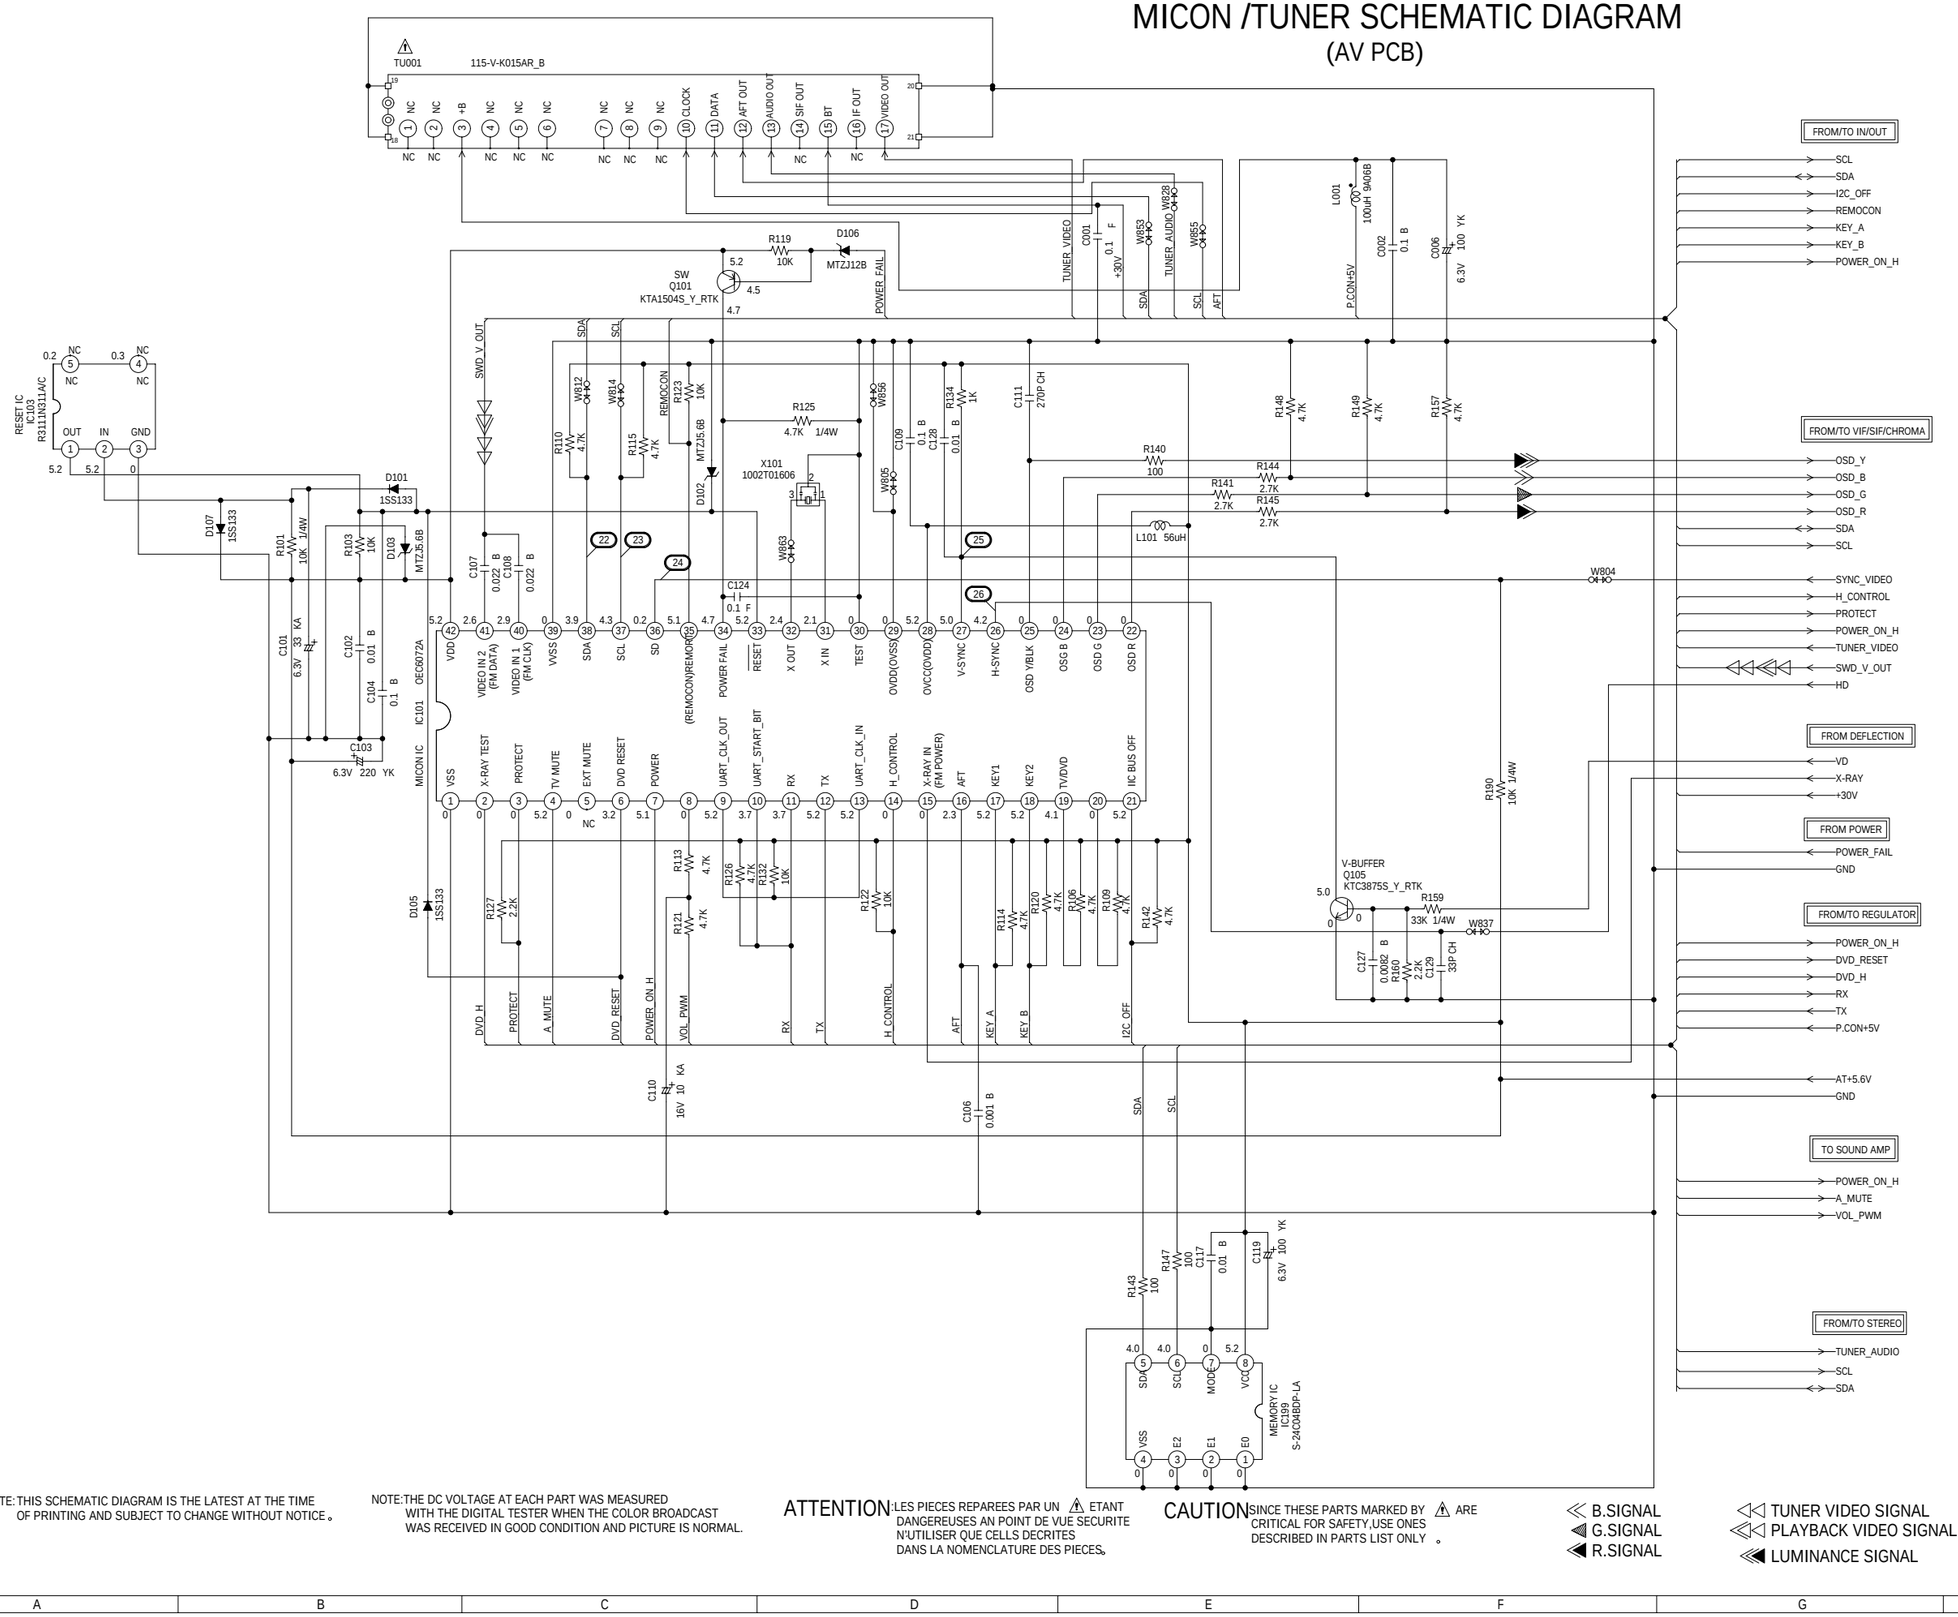

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE。

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

ATTENTION: LES PIECES REPAREES PAR UN ⚠ ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES。

CAUTION SINCE THESE PARTS MARKED BY ⚠ ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY 。

≪ B.SIGNAL
◀ G.SIGNAL
◀ R.SIGNAL

◁◁ TUNER VIDEO SIGNAL
◁◁ PLAYBACK VIDEO SIGNAL
◀◀ LUMINANCE SIGNAL

VIF/SIF/CHROMA SCHEMATIC DIAGRAM

(AV PCB)

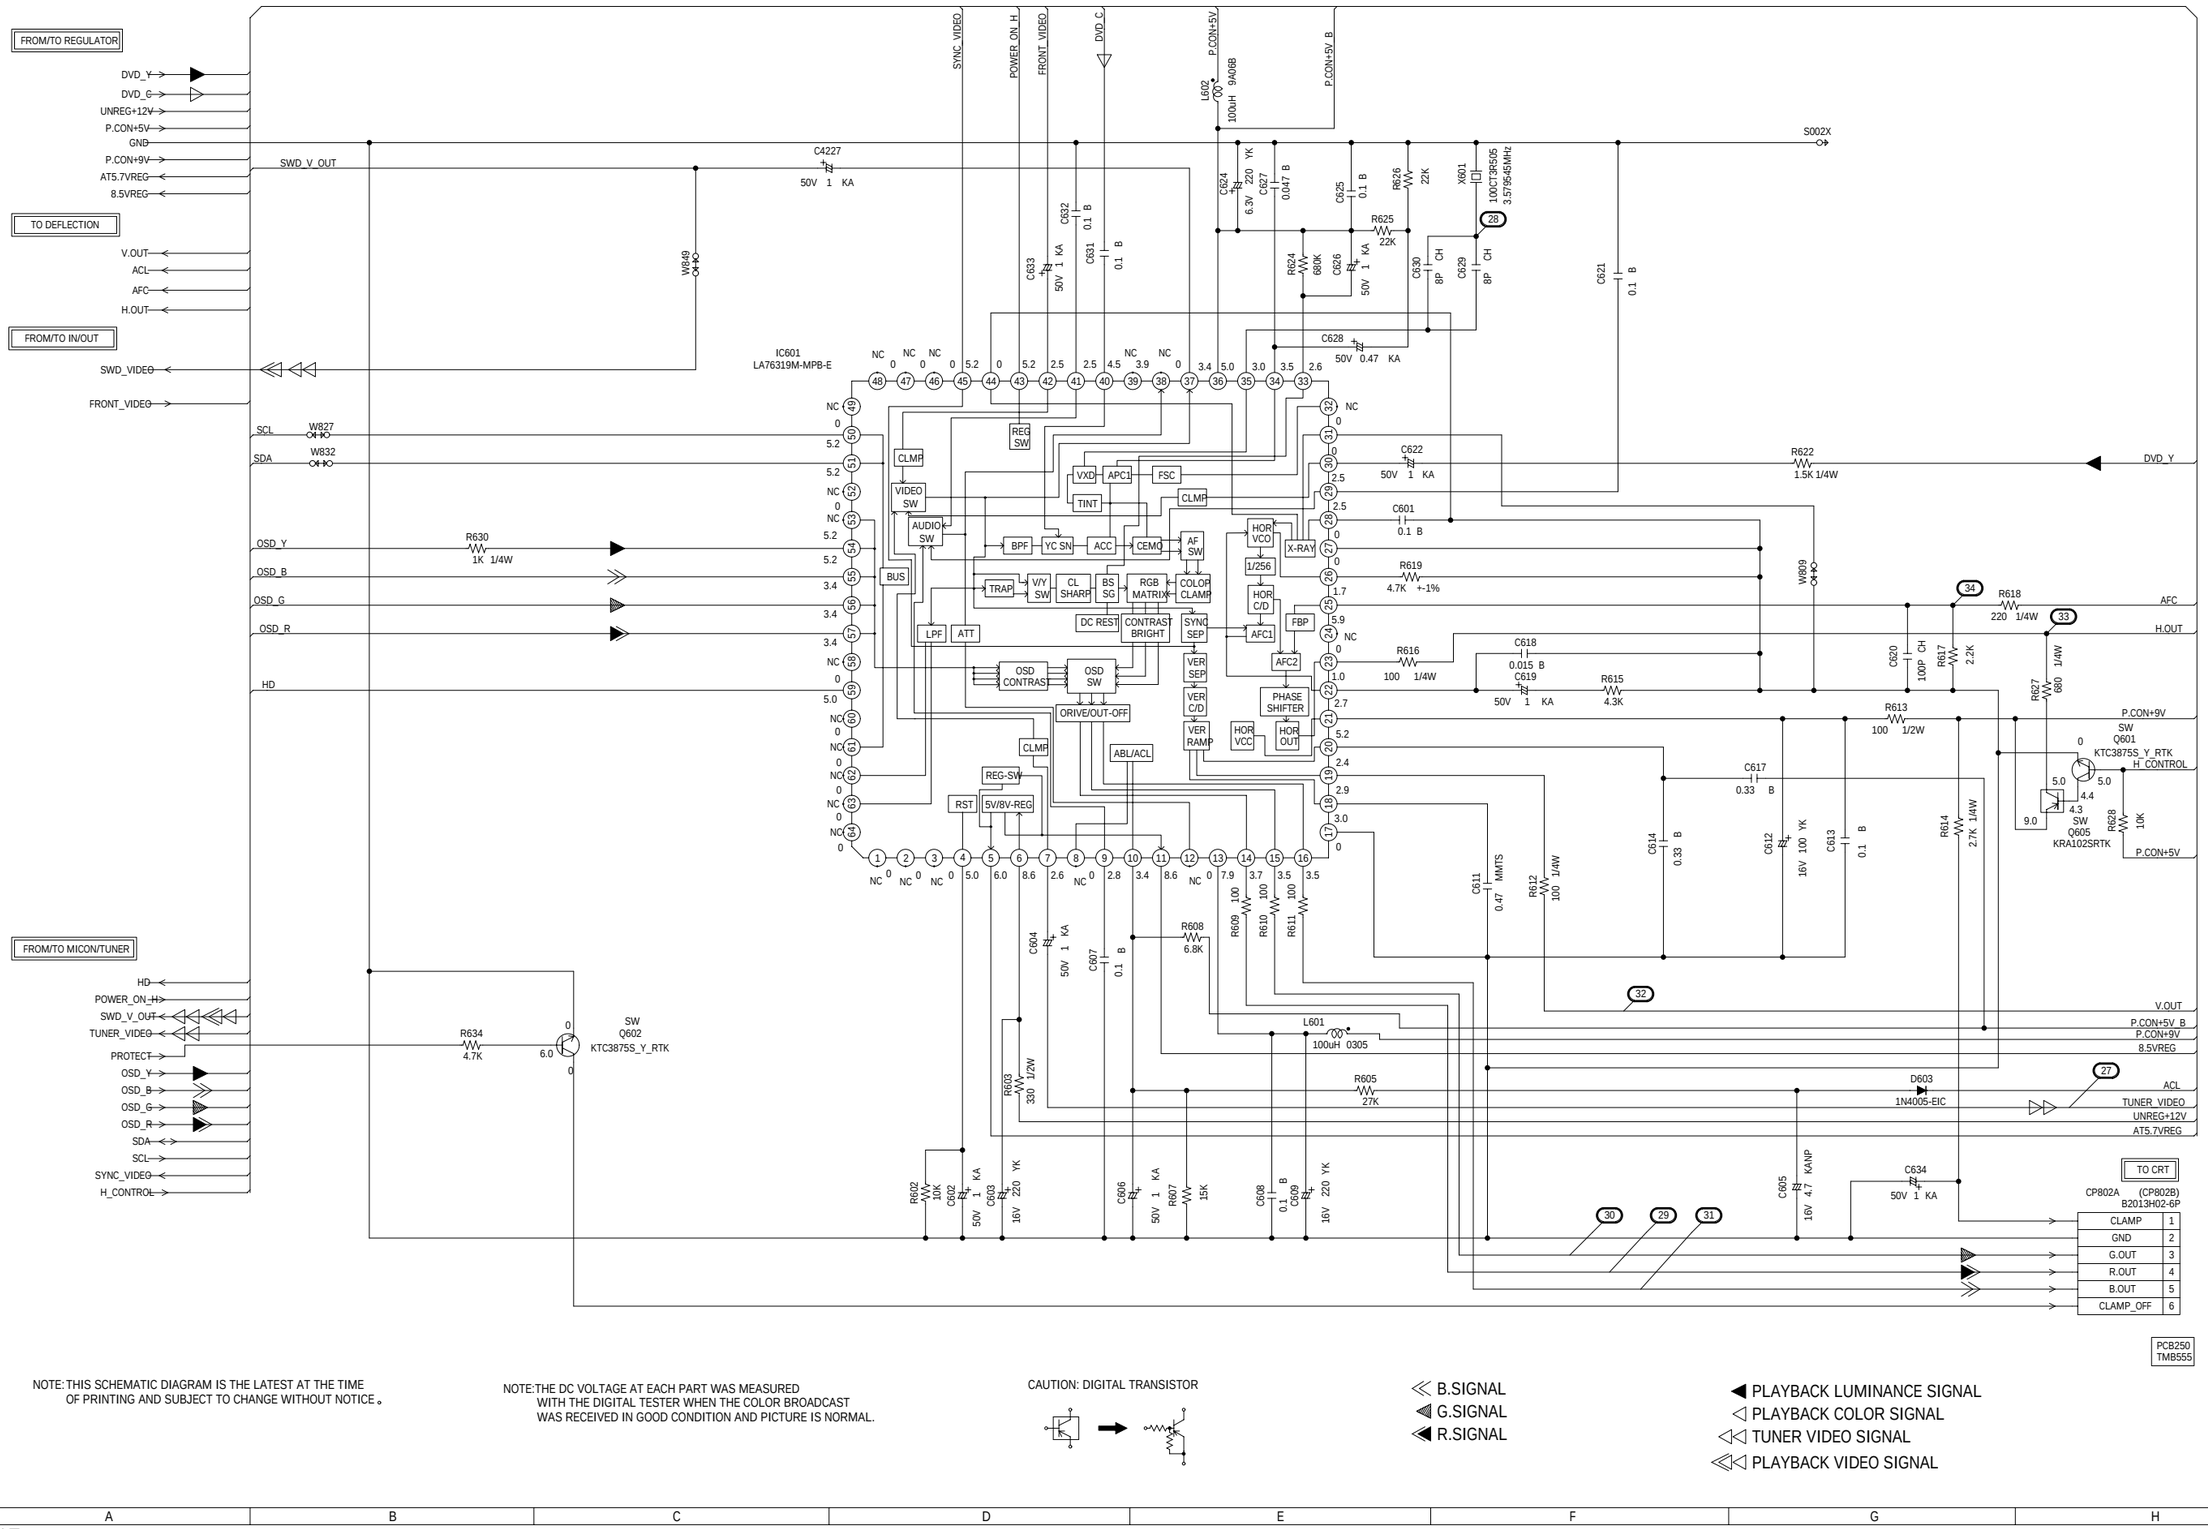

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE。

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

CAUTION: DIGITAL TRANSISTOR

B.SIGNAL
G.SIGNAL
R.SIGNAL

PLAYBACK LUMINANCE SIGNAL
PLAYBACK COLOR SIGNAL
TUNER VIDEO SIGNAL
PLAYBACK VIDEO SIGNAL

SOUND AMP SCHEMATIC DIAGRAM

(AV PCB)

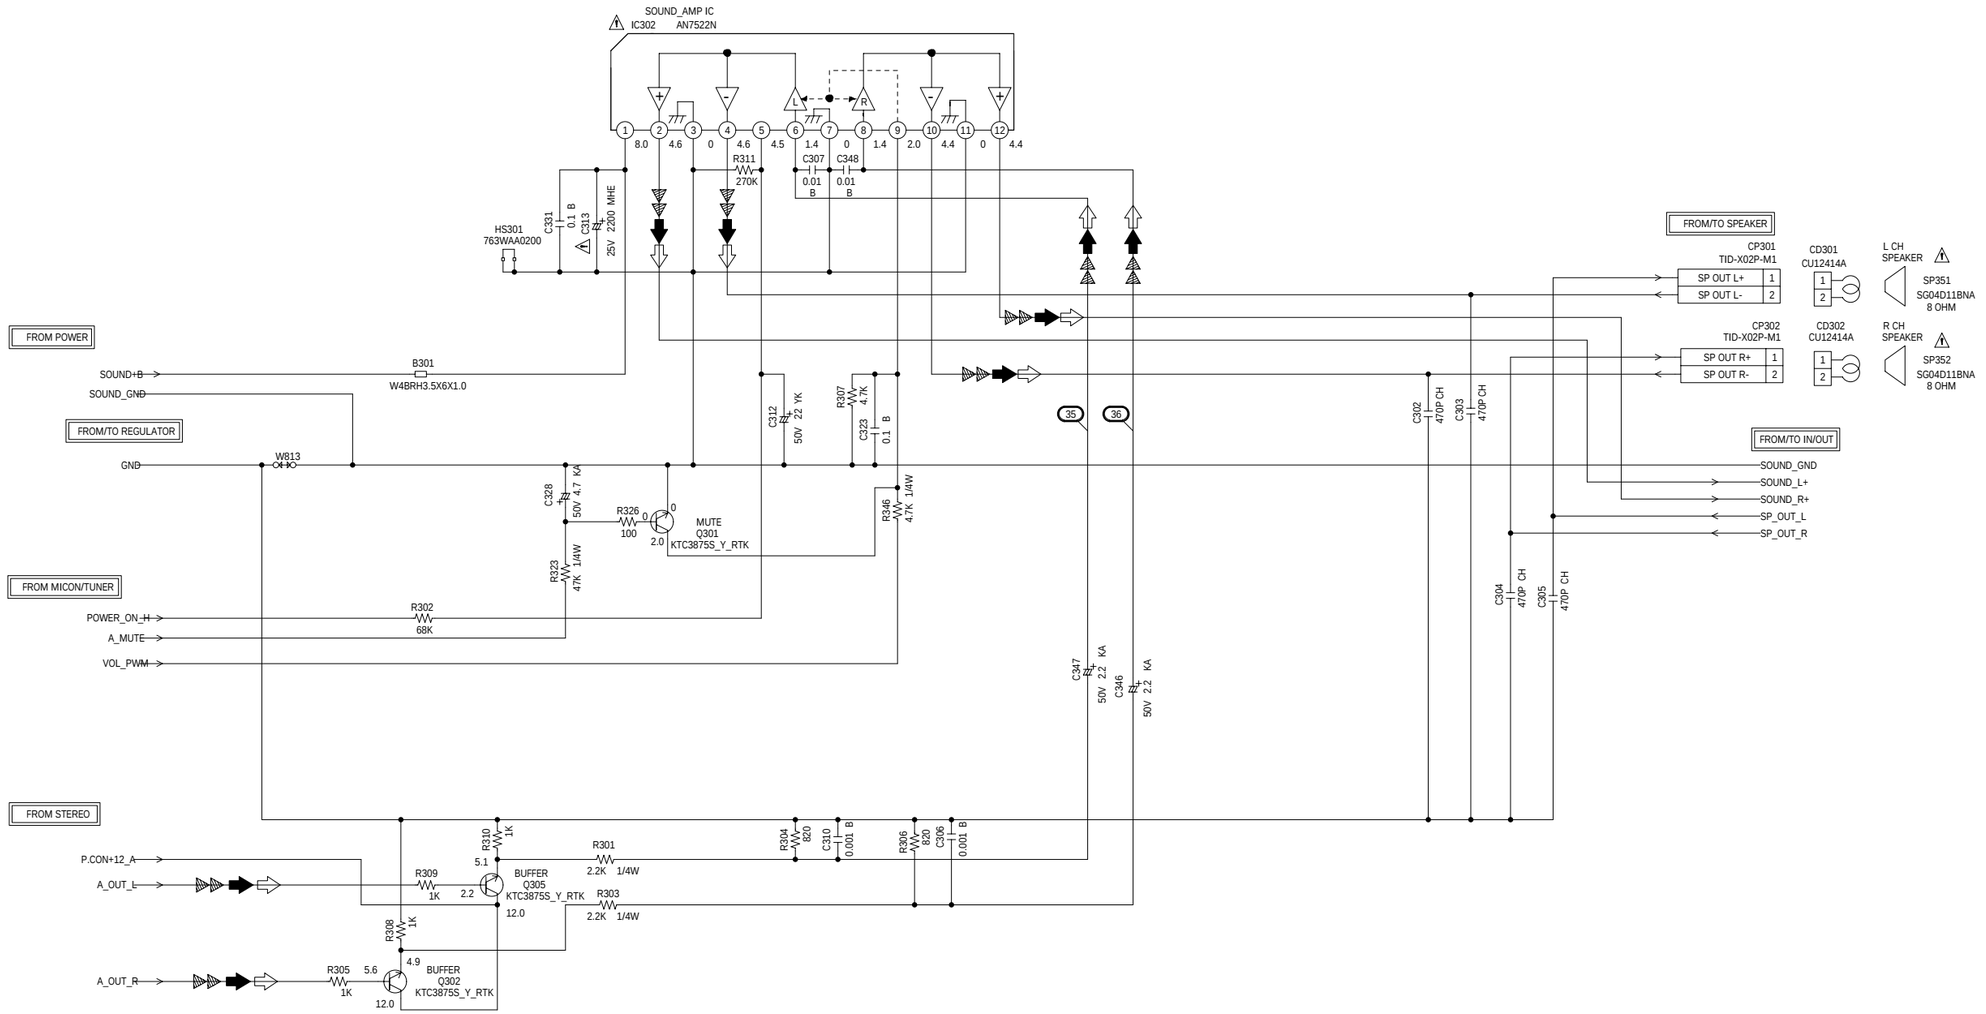

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE。

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

ATTENTION: LES PIECES REPAREES PAR UN ⚠ ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES。

CAUTION SINCE THESE PARTS MARKED BY ⚠ ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY 。

⇦ AUDIO SIGNAL
⬅ AUDIO SIGNAL(PB)
⇚ TUNER AUDIO SIGNAL

IN/OUT SCHEMATIC DIAGRAM
(AV PCB)

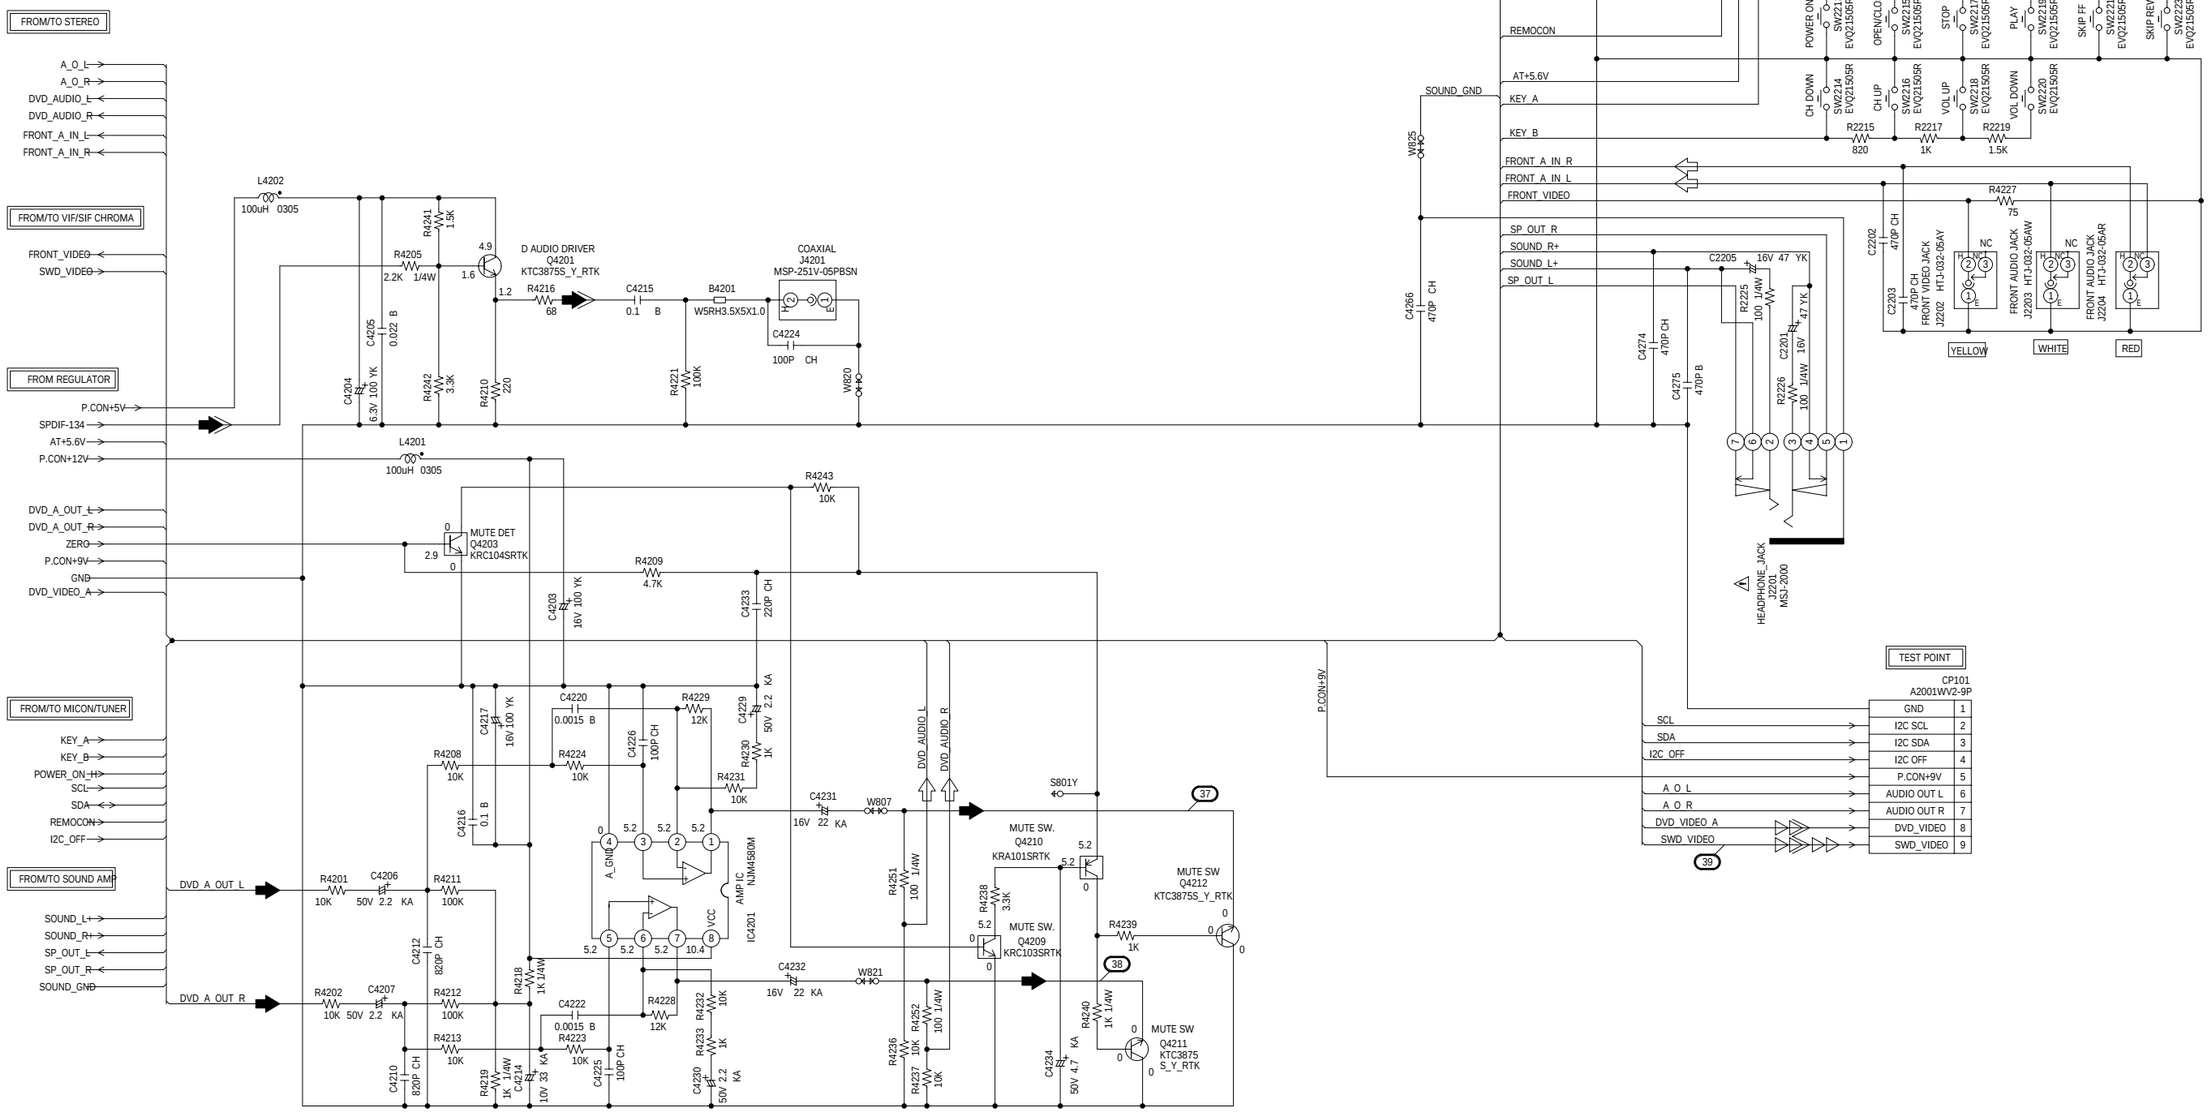

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE。

NOTE:THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

ATTENTION:LES PIECES REPAREES PAR UN ⚠ ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES。

CAUTION SINCE THESE PARTS MARKED BY ⚠ ARE CRITICAL FOR SAFETY,USE ONES DESCRIBED IN PARTS LIST ONLY 。

CAUTION: DIGITAL TRANSISTOR

CAUTION: DIGITAL TRANSISTOR

STEREO SCHEMATIC DIAGRAM

(AV PCB)

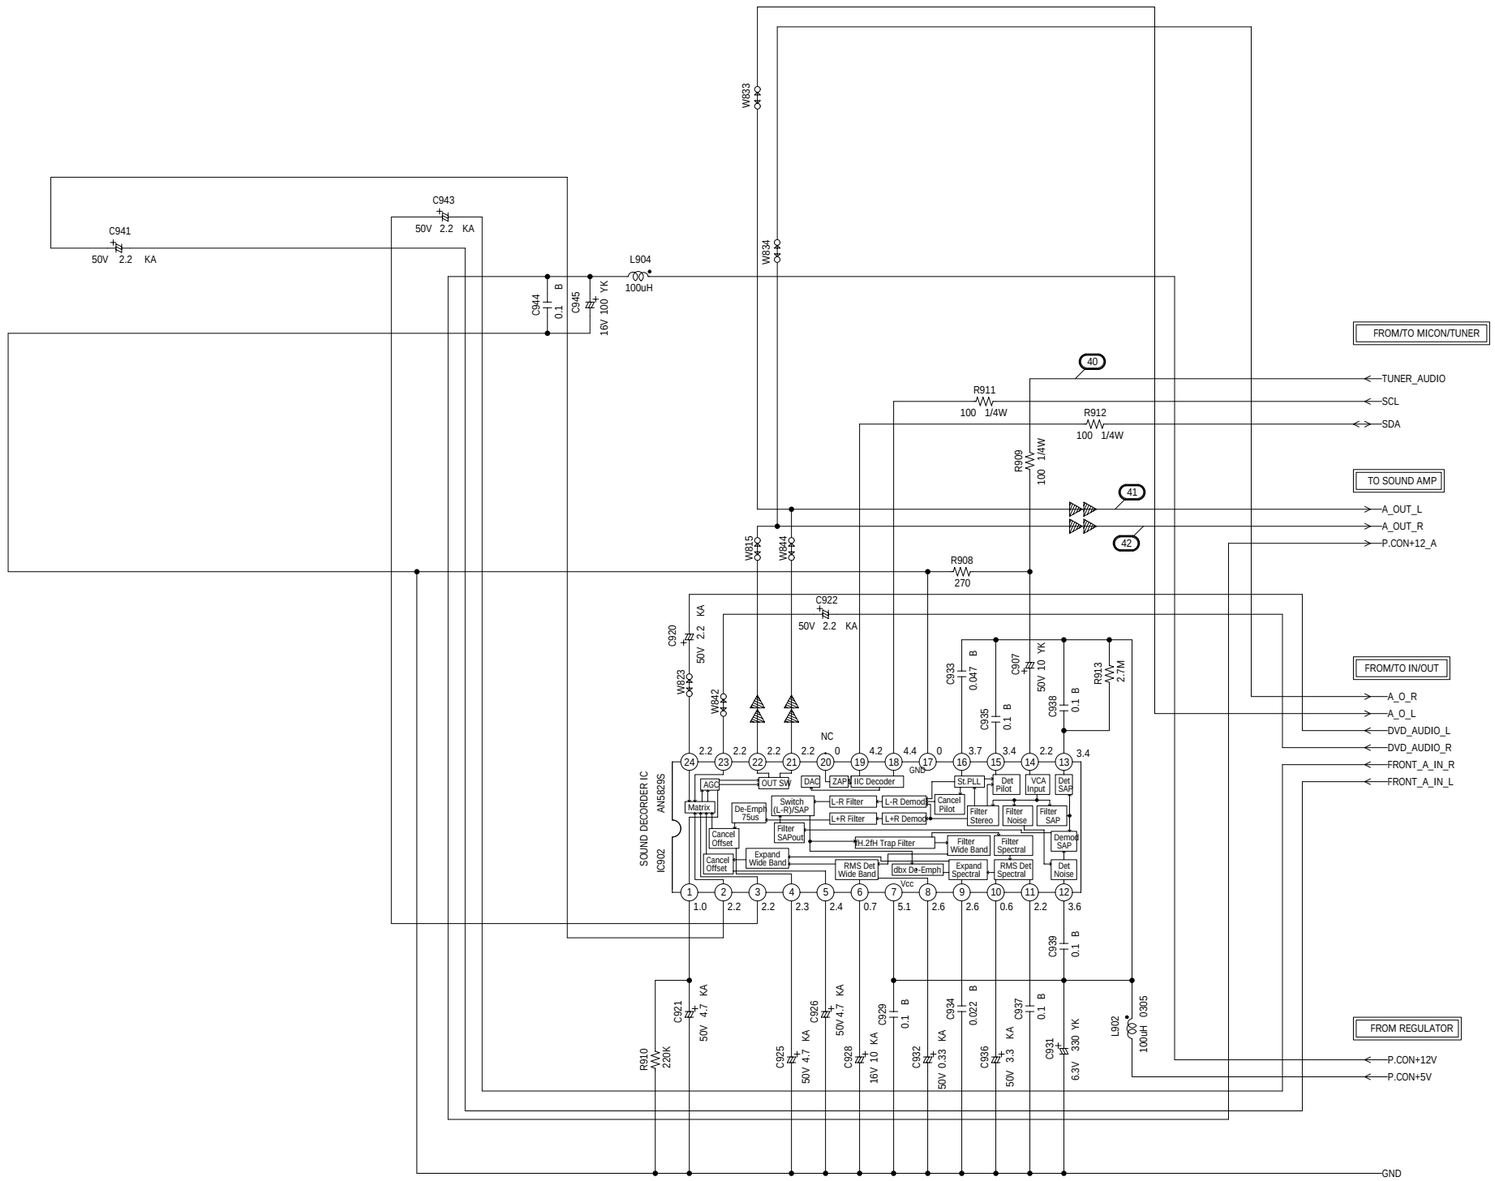

PCB250
TMB555

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE。

NOTE:THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

TUNER AUDIO SIGNAL

DEFLECTION SCHEMATIC DIAGRAM

(AV PCB)

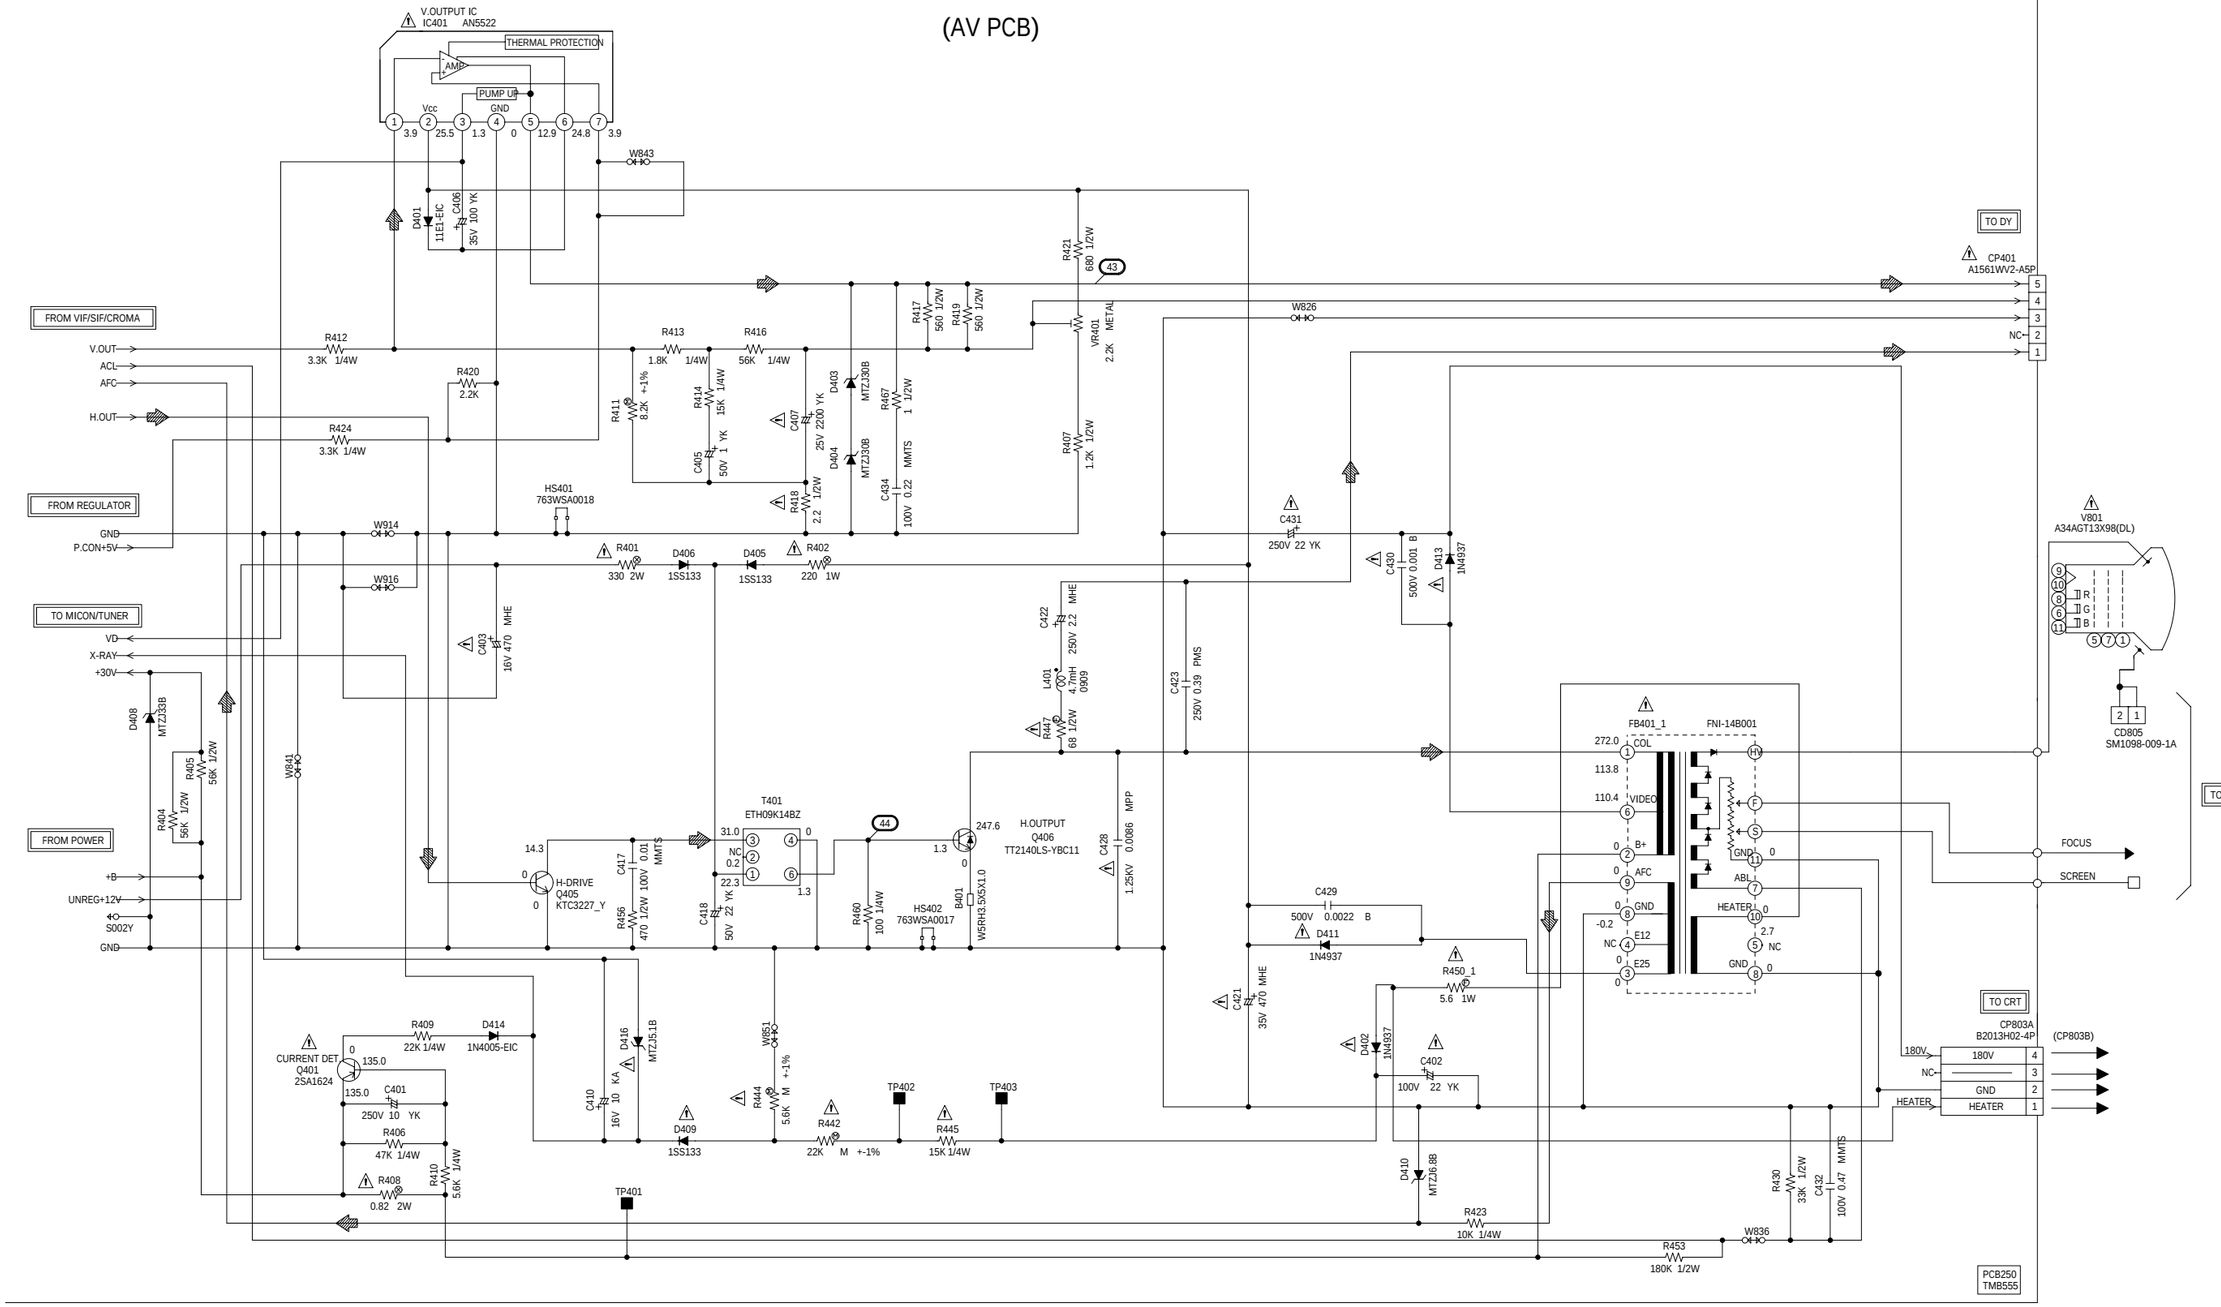

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE。

NOTE: THE RESISTOR MARKED F IS FUSE RESISTOR. THE ALUMI ELECTROLYTIC CAPACITOR MARKED NP IS NON POLAR ONE.

ATTENTION: LES PIECES REPAREES PAR UN ⚠ ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES。

CAUTION SINCE THESE PARTS MARKED BY ⚠ ARE CRITICAL FOR SAFETY,USE ONES DESCRIBED IN PARTS LIST ONLY 。

DEFLECTION SIGNAL

CRT SCHEMATIC DIAGRAM

(CRT PCB)

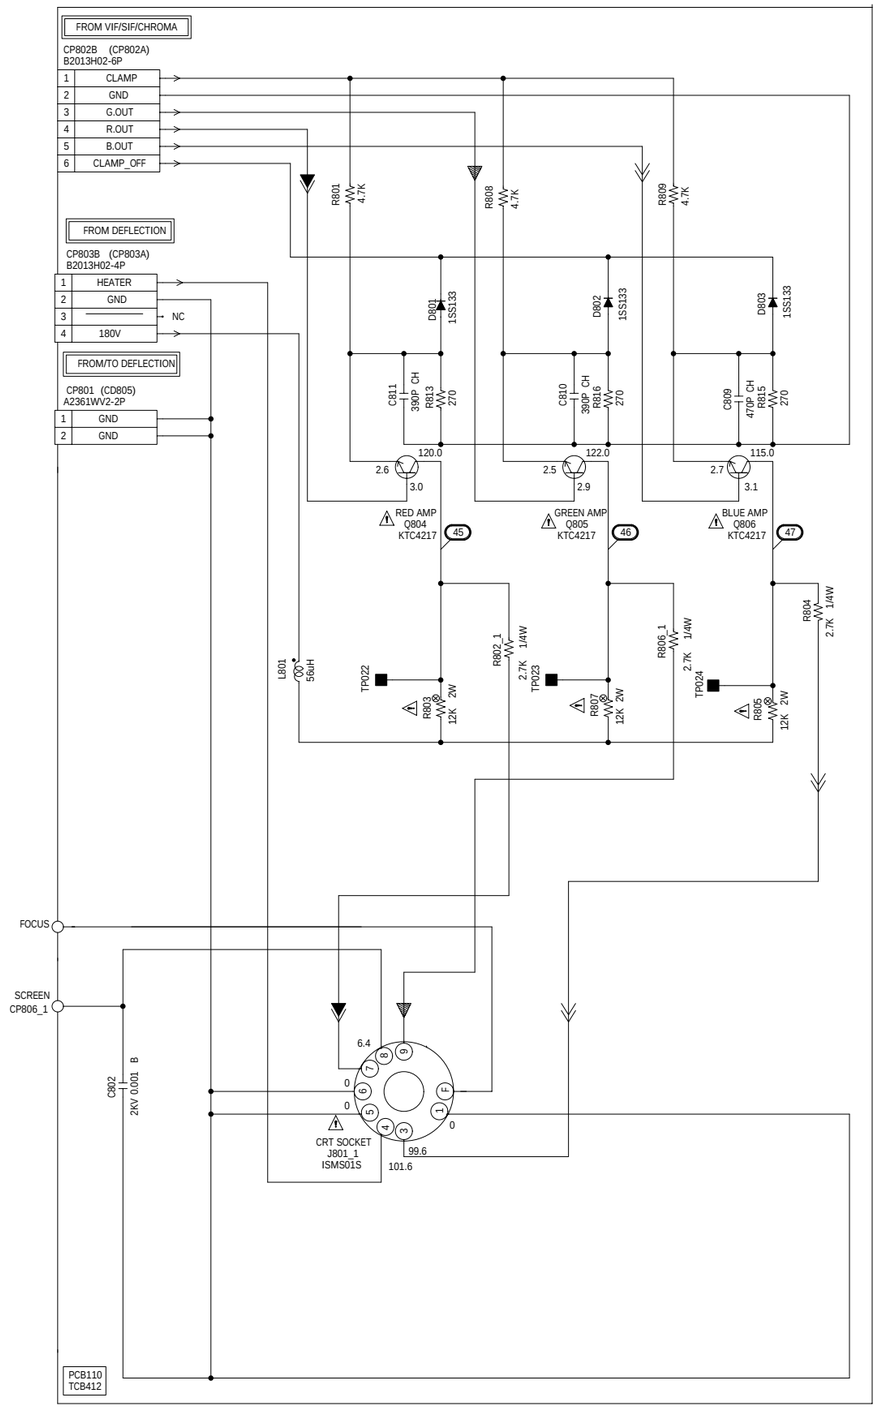

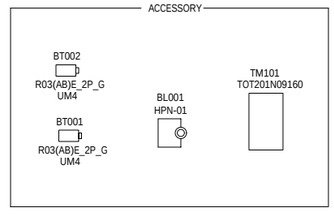

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE 。

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

ATTENTION: LES PIECES REPAREES PAR UN ⚠ ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES。

CAUTION: SINCE THESE PARTS MARKED BY ⚠ ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY 。

◀ R.SIGNAL
◀ G.SIGNAL
≪ B.SIGNAL

POWER SCHEMATIC DIAGRAM

(AV PCB)

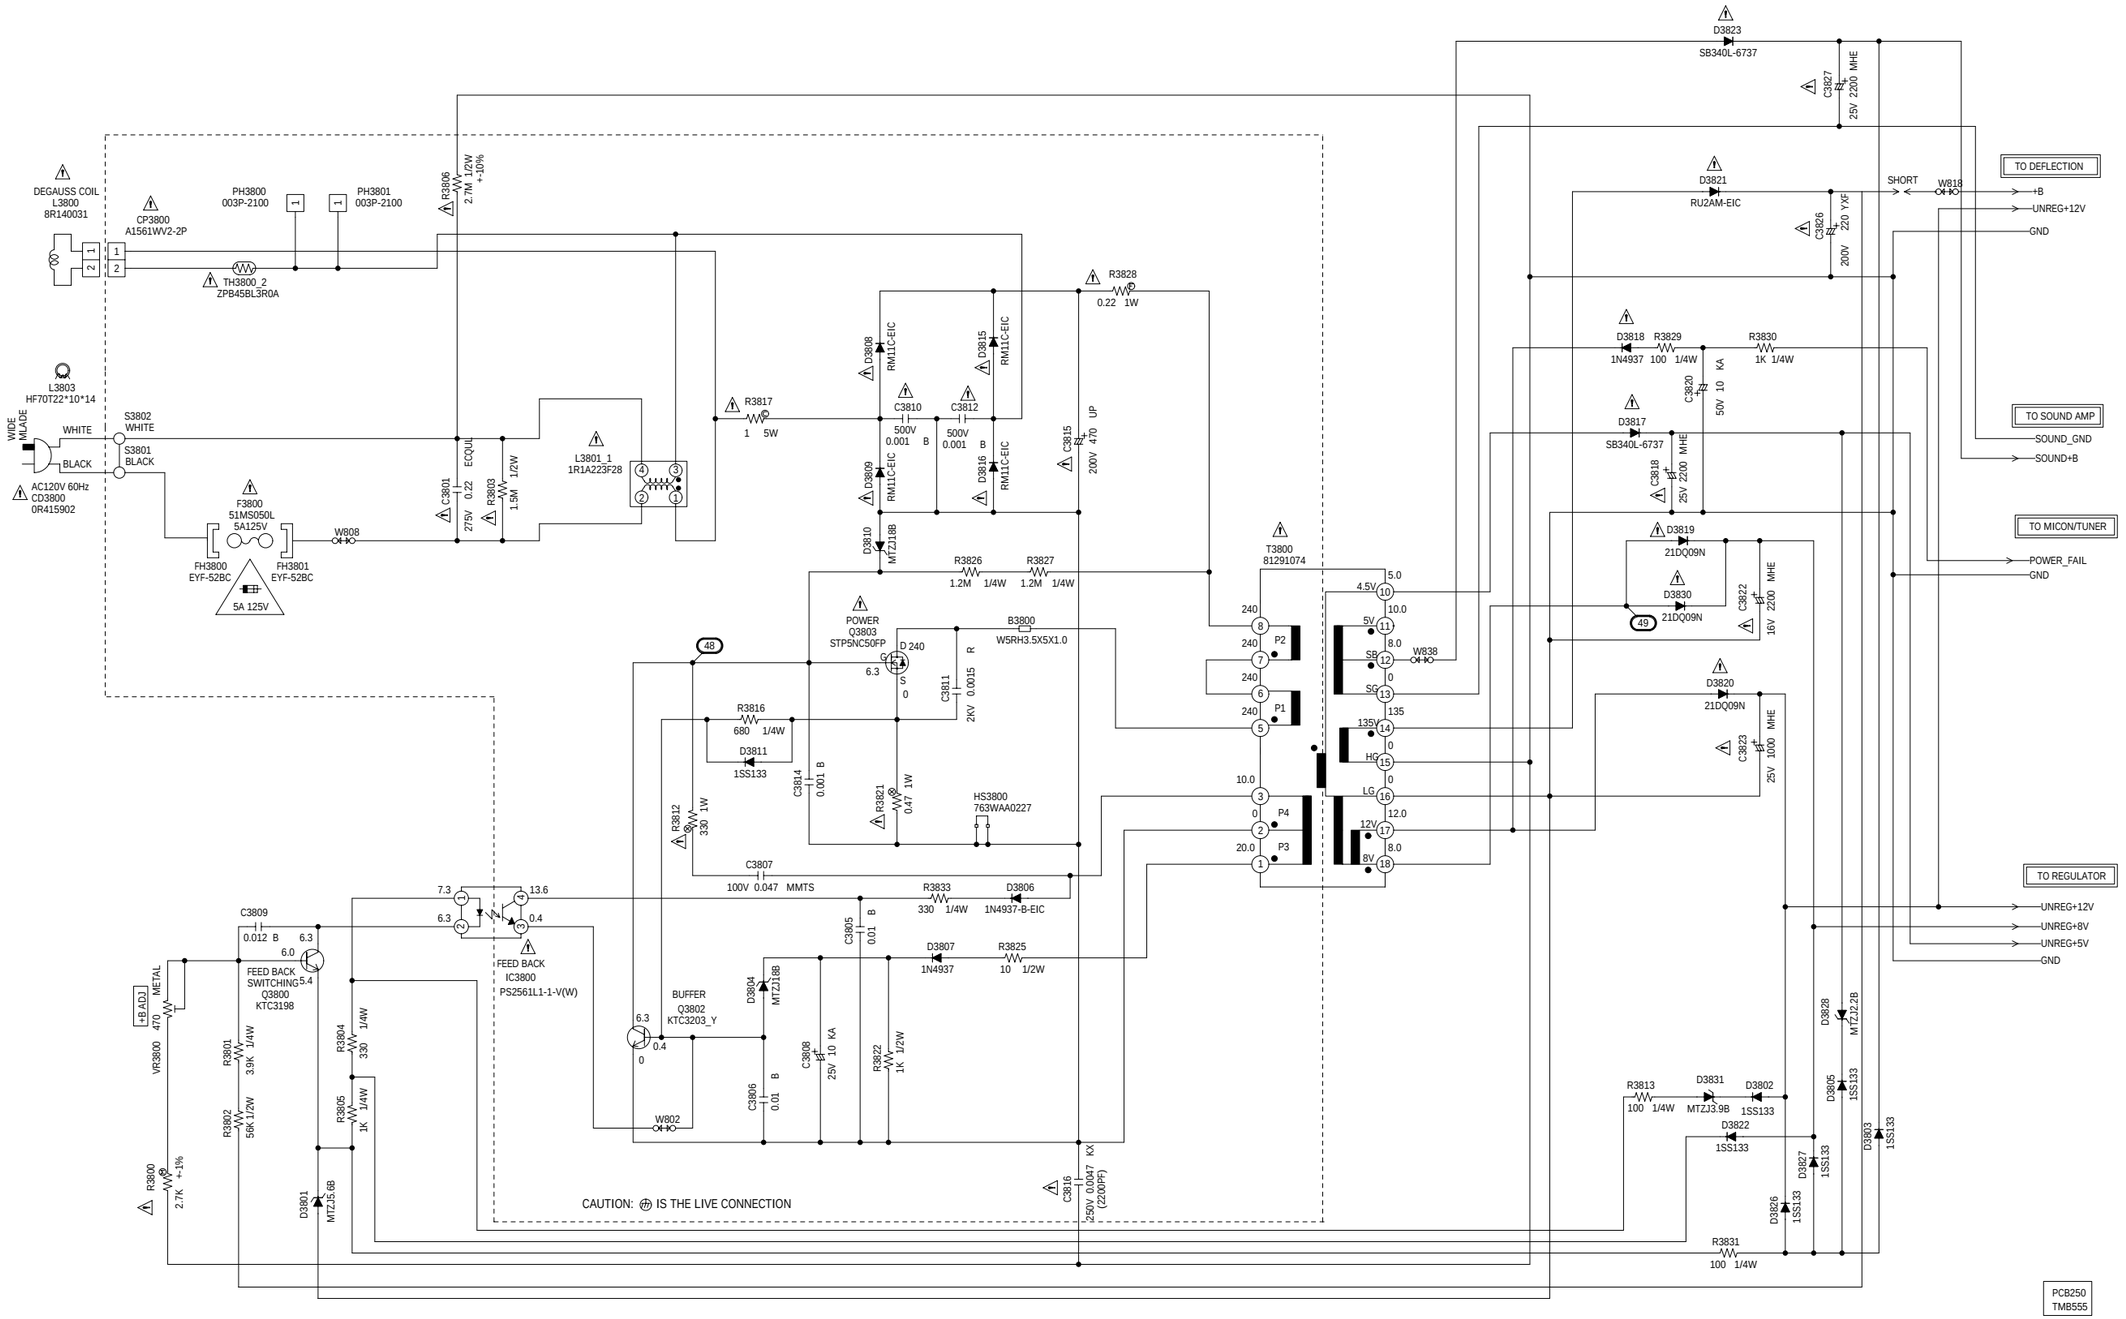

ATTENTION :POUR UNE PROTECTION CONTINUE LES RISQUES D'INCEIE N'UTOLISER QUE DES FUSIBLE DE MEME TYPE

CAUTION :FOR CONTINUED PROTECTION AGAINST FIRE HAZARD, REPLACE ONLY WITH THE SAME TYPE FUSE

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE 。

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

ATTENTION: LES PIECES REPAREES PAR UN ⚠ ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES。

CAUTION SINCE THESE PARTS MARKED BY ⚠ ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY 。

SW/RELAY/FG SCHEMATIC DIAGRAM

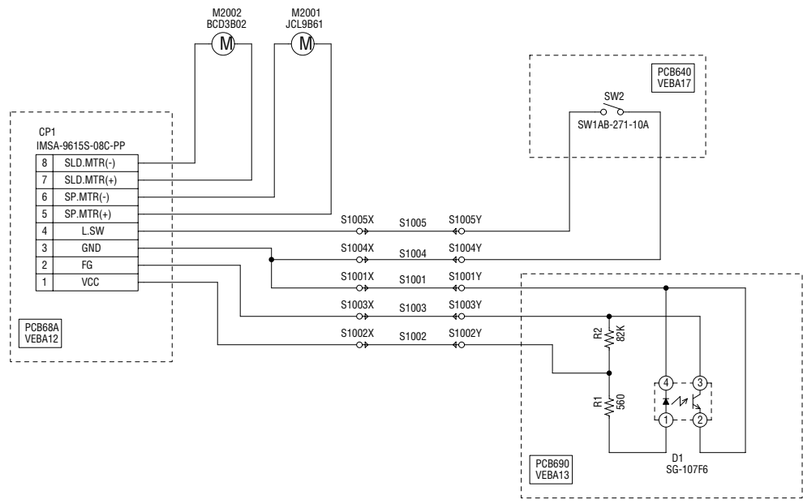

INTERCONNECTION DIAGRAM

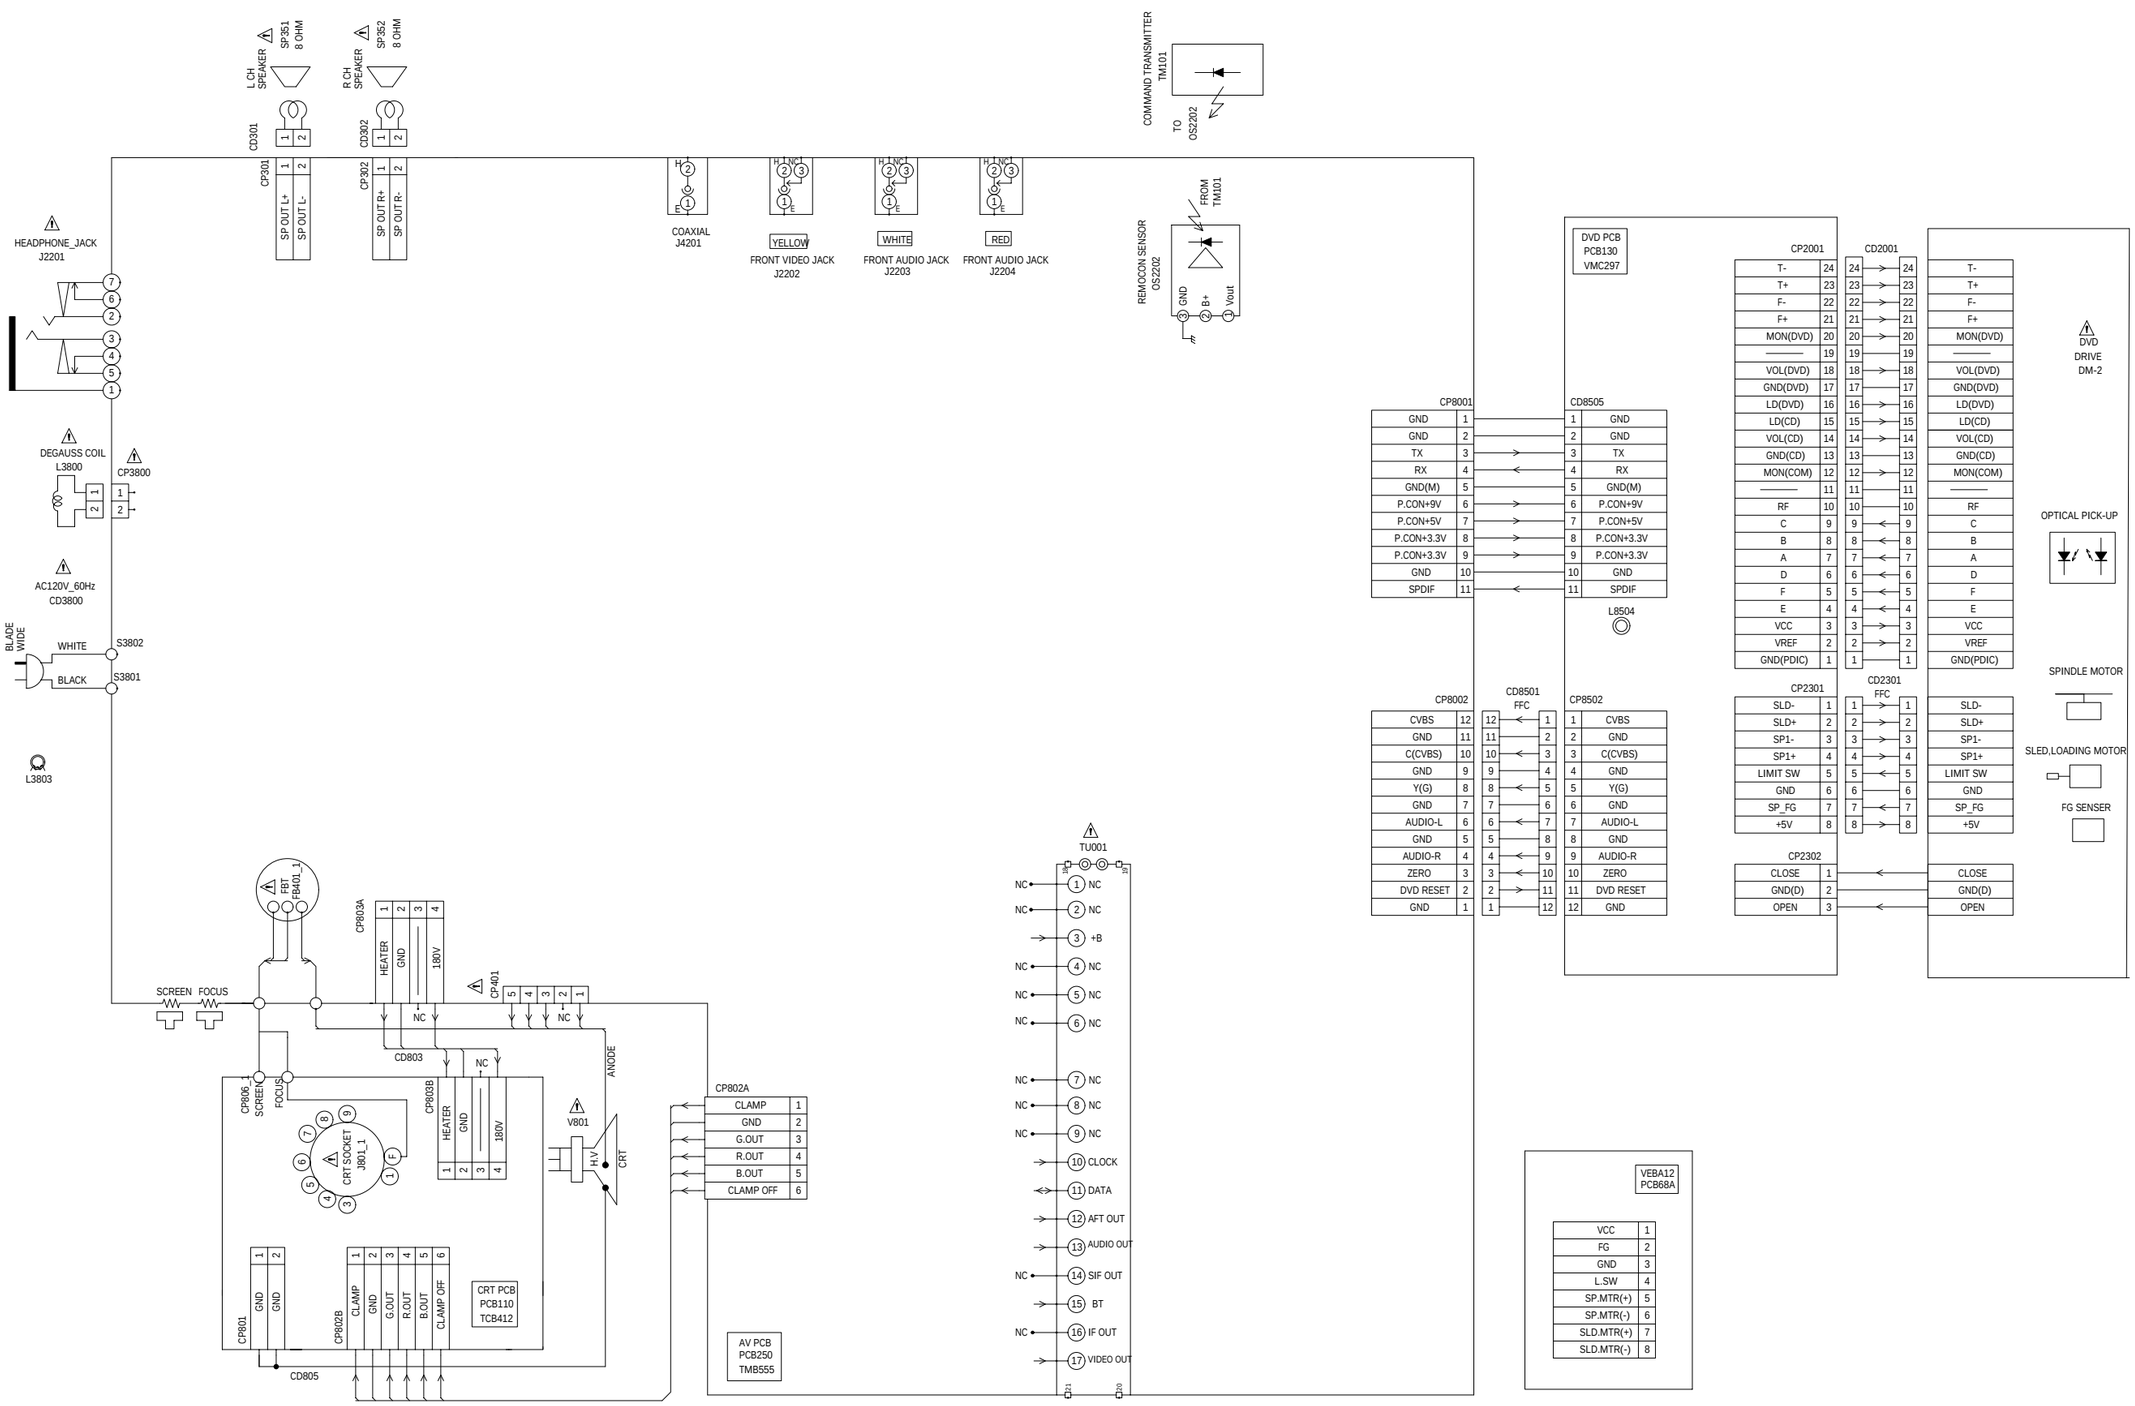

NOTE: THIS INTERCONNECTION DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE 。

ATTENTION: LES PIECES REPAREES PAR UN ⚠ ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES。

CAUTION SINCE THESE PARTS MARKED BY ⚠ ARE CRITICAL FOR SAFETY,USE ONES DESCRIBED IN PARTS LIST ONLY 。

WAVEFORMS

RF_AMP/DSP

100ns
100mV

①

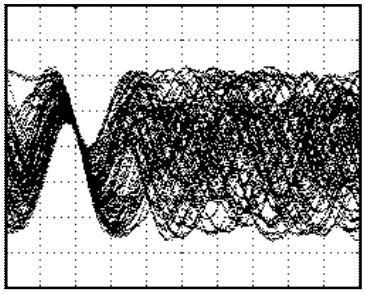

10µs
100mV

⑥

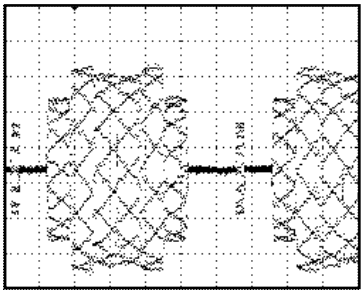

20ns
200mV

②

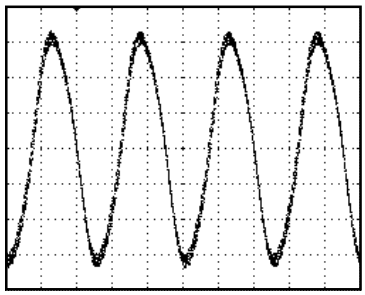

10µs
200mV

⑦

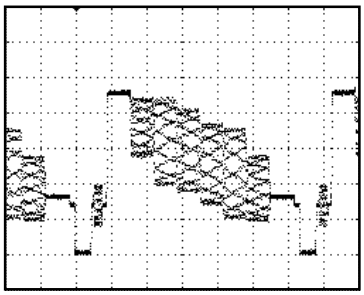

MOTOR DRIVE

2ms
1.0V

③

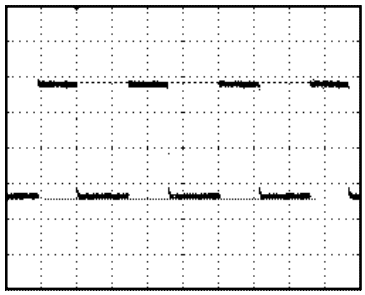

500µs
500mV

⑧

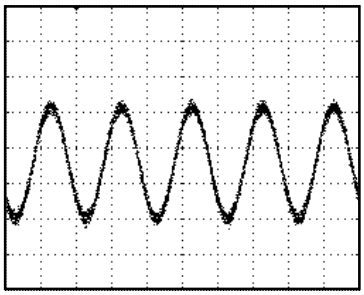

MPEG

20ns
500mV

④

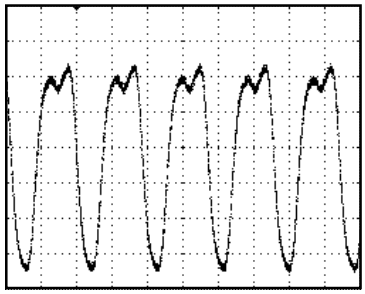

500µs
500mV

⑨

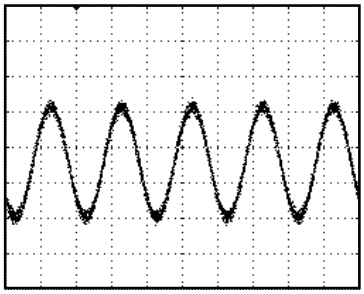

AUDIO/VIDEO

10µs
200mV

⑤

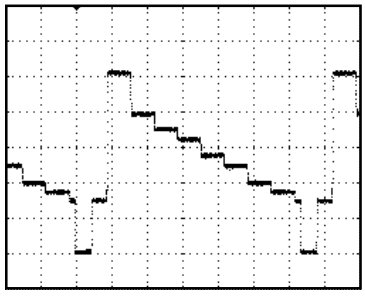

REGULATOR 2

100ns
500mV

⑩

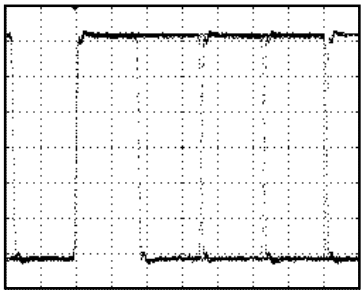

MICON/TUNER

POWER ON
0.2ms
1.0V

㉒

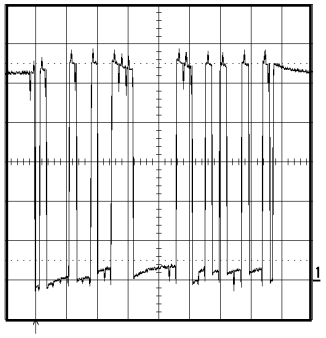

POWER ON
0.2ms
1.0V

㉓

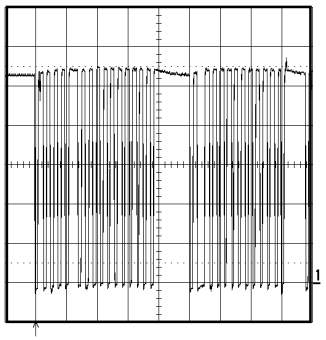

POWER ON
0.2ms
1.0V

㉔

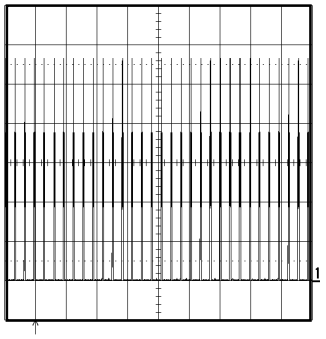

POWER ON
5ms
1.0V

㉕

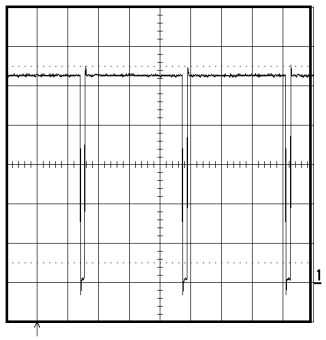

POWER ON
50µs
1.0V

㉖

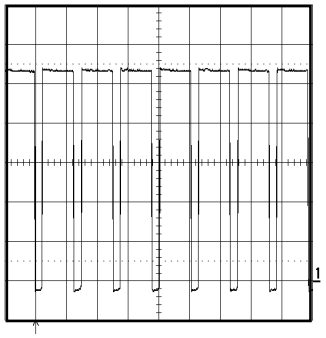

NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.

WAVEFORMS

VIF/SIF/CHROMA

POWER ON
20µs
0.5V

(27)

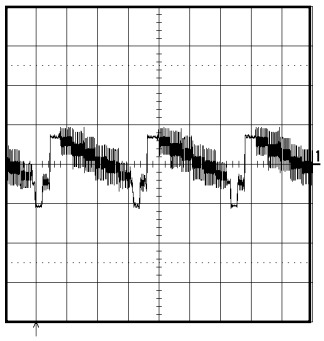

STANDBY
0.5µs
50mV

(28)

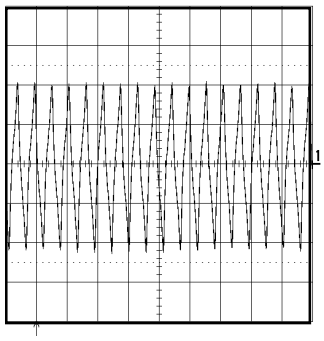

POWER ON
10µs
2.0V

(29)

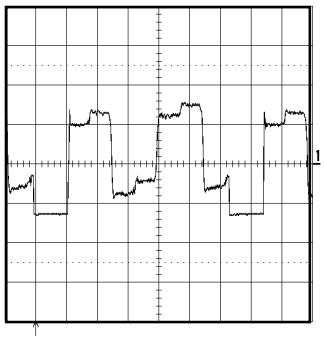

POWER ON
10µs
2.0V

(30)

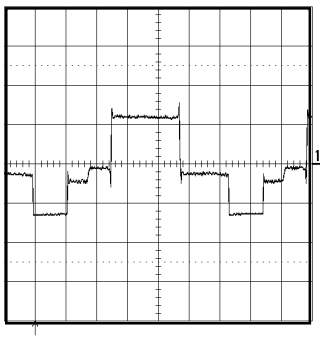

POWER ON
10µs
2.0V

(31)

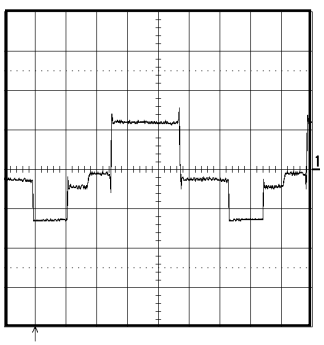

SOUND AMP

POWER ON
10ms
0.5V

(32)

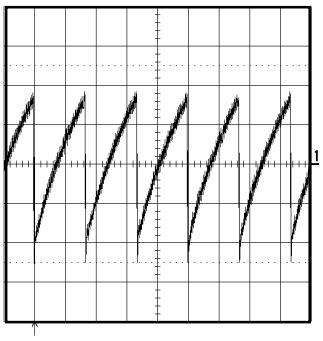

POWER ON
20µs
0.5V

(33)

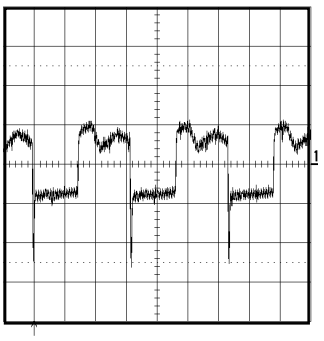

POWER ON
20µs
2.0V

(34)

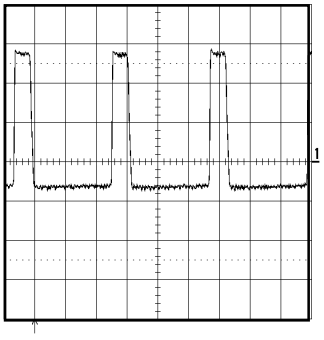

POWER ON
1ms
100mV

(35)

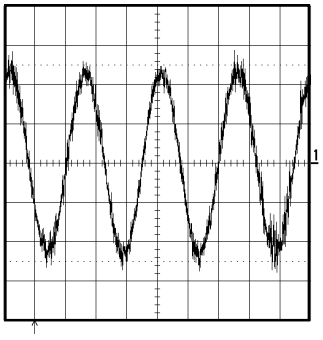

1ms
100mV

(36)

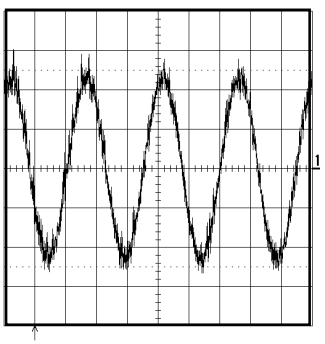

IN/OUT

DVD PLAY
0.5ms
200mV

(37)

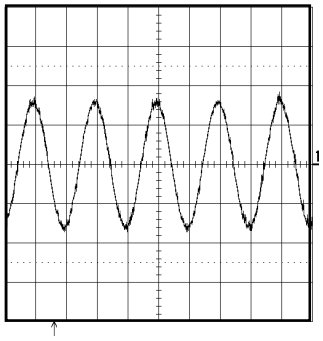

DVD PLAY
0.5ms
200mV

(38)

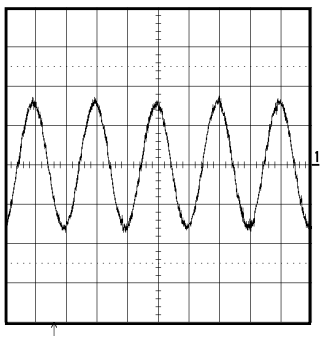

DVD PLAY
10µs
0.5V

(39)

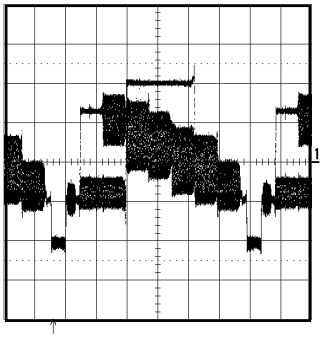

STEREO

POWER ON
1ms
50mV

(40)

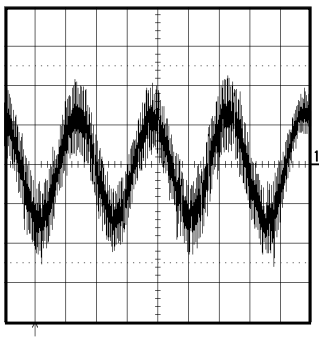

POWER ON
1ms
200mV

(41)

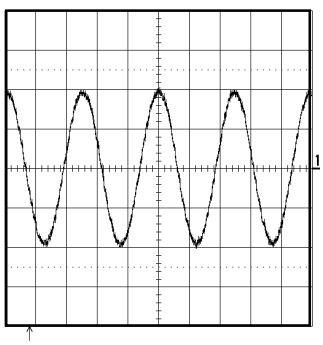

NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.

WAVEFORMS

POWER ON
1ms
200mV

(42)

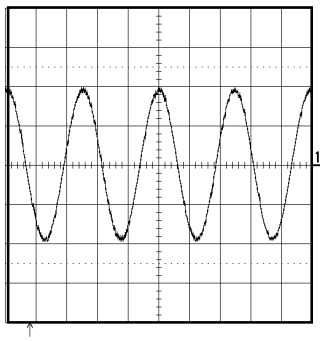

POWER ON
20µs
50V

(47)

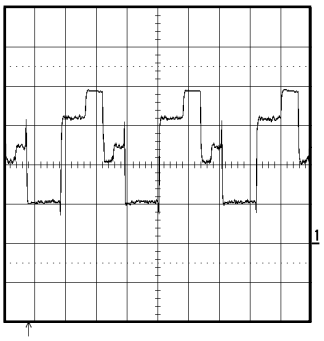

DEFLECTION

POWER ON
5ms
10.0V

(43)

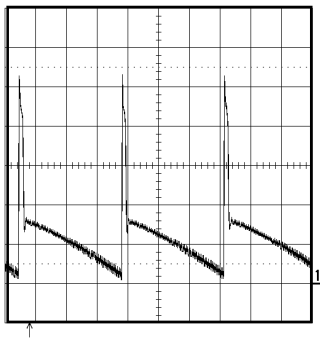

POWER ON
20µs
5.0V

(44)

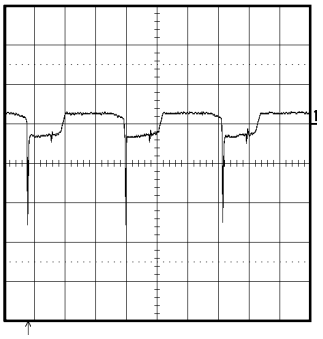

POWER

STANDBY
5µs
5.0V

(48)

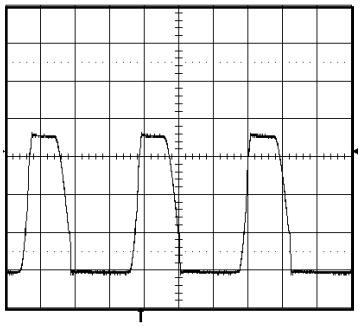

STANDBY
5µs
5.0V

(49)

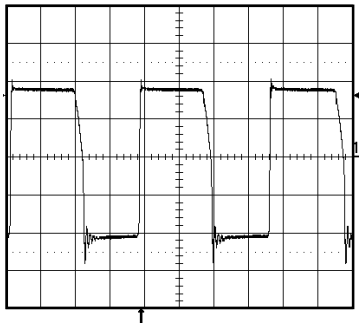

CRT

POWER ON
20µs
50V

(45)

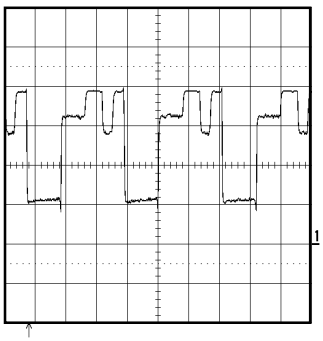

POWER ON
20µs
50V

(46)

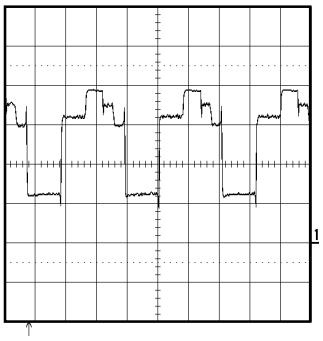

NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.

MECHANICAL EXPLODED VIEW

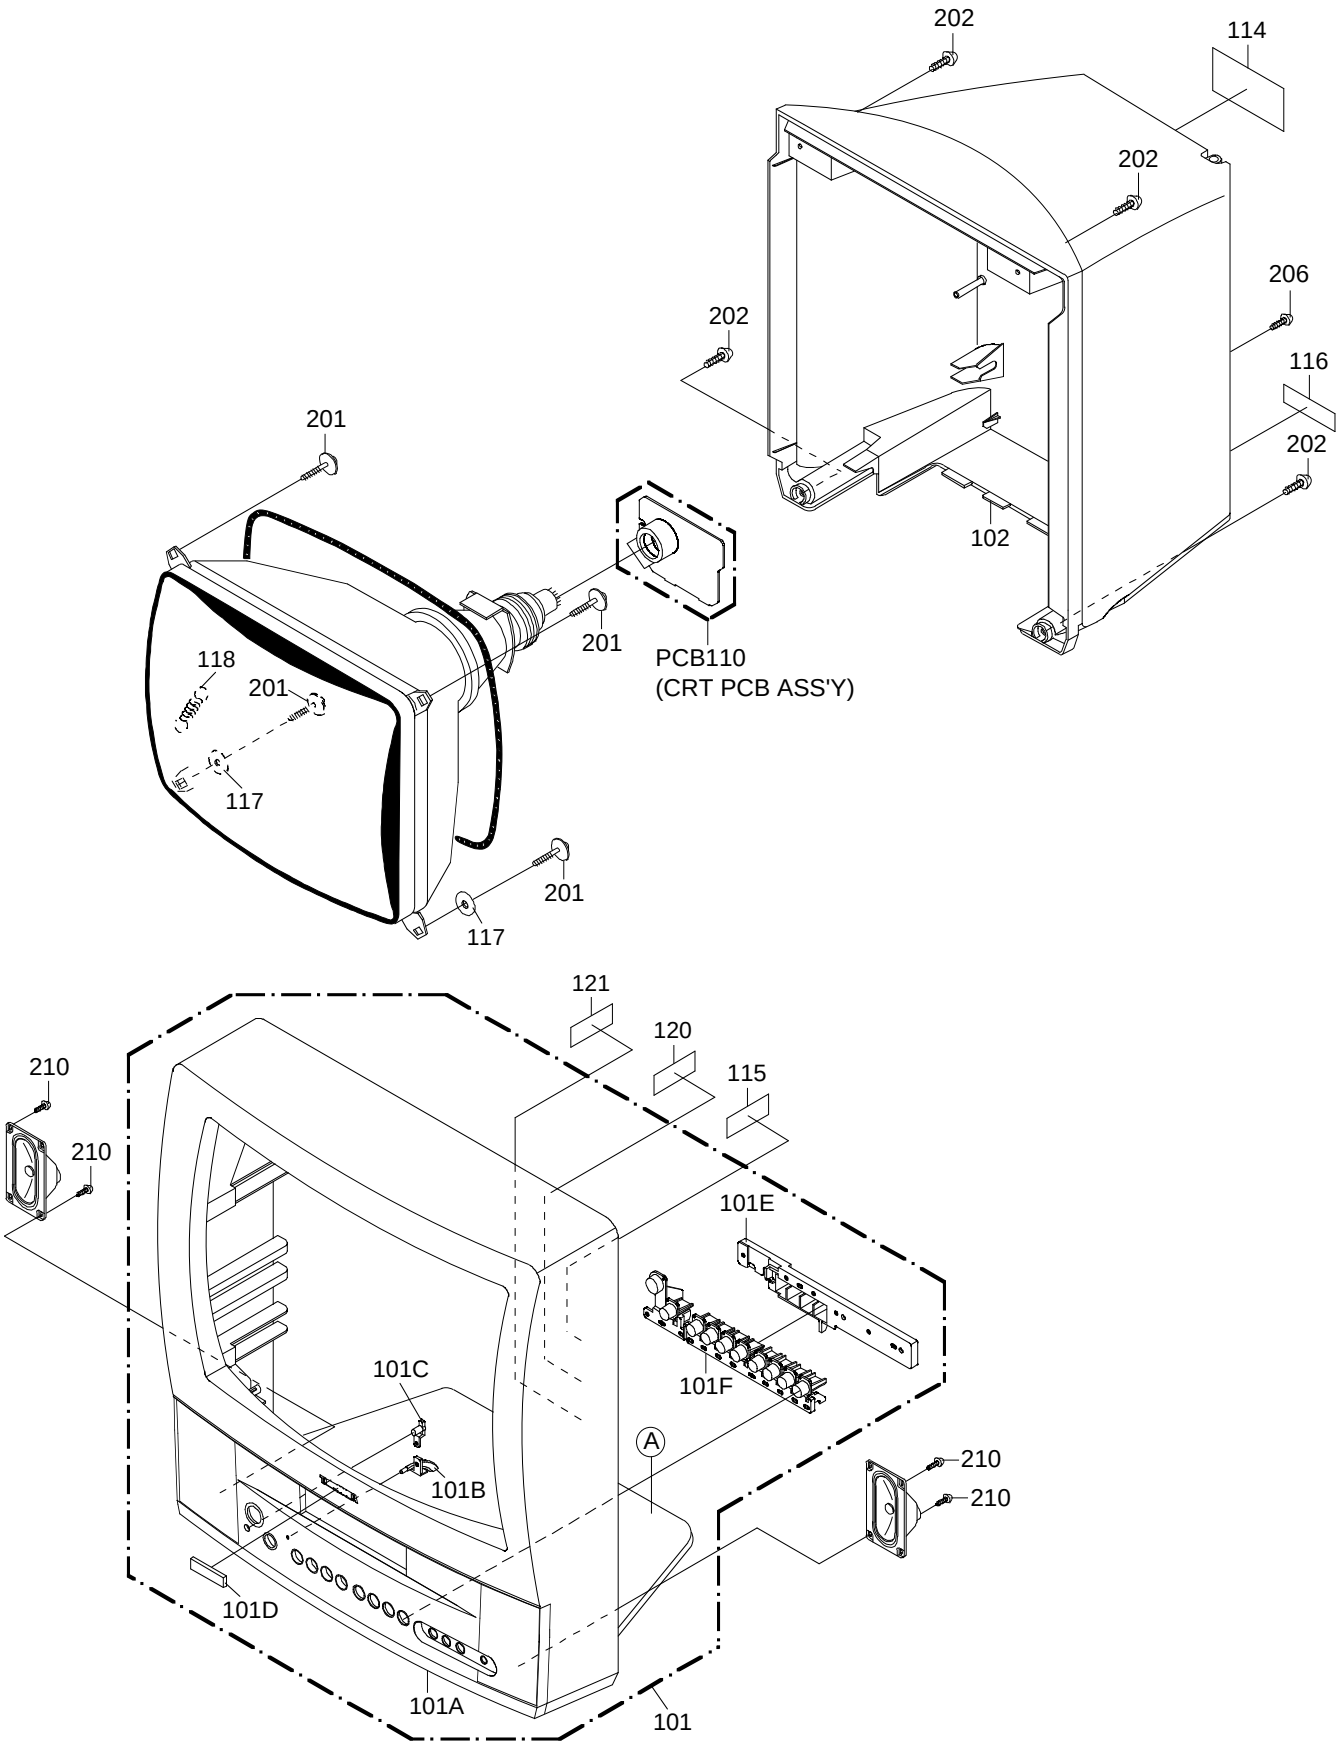

MECHANICAL EXPLODED VIEW

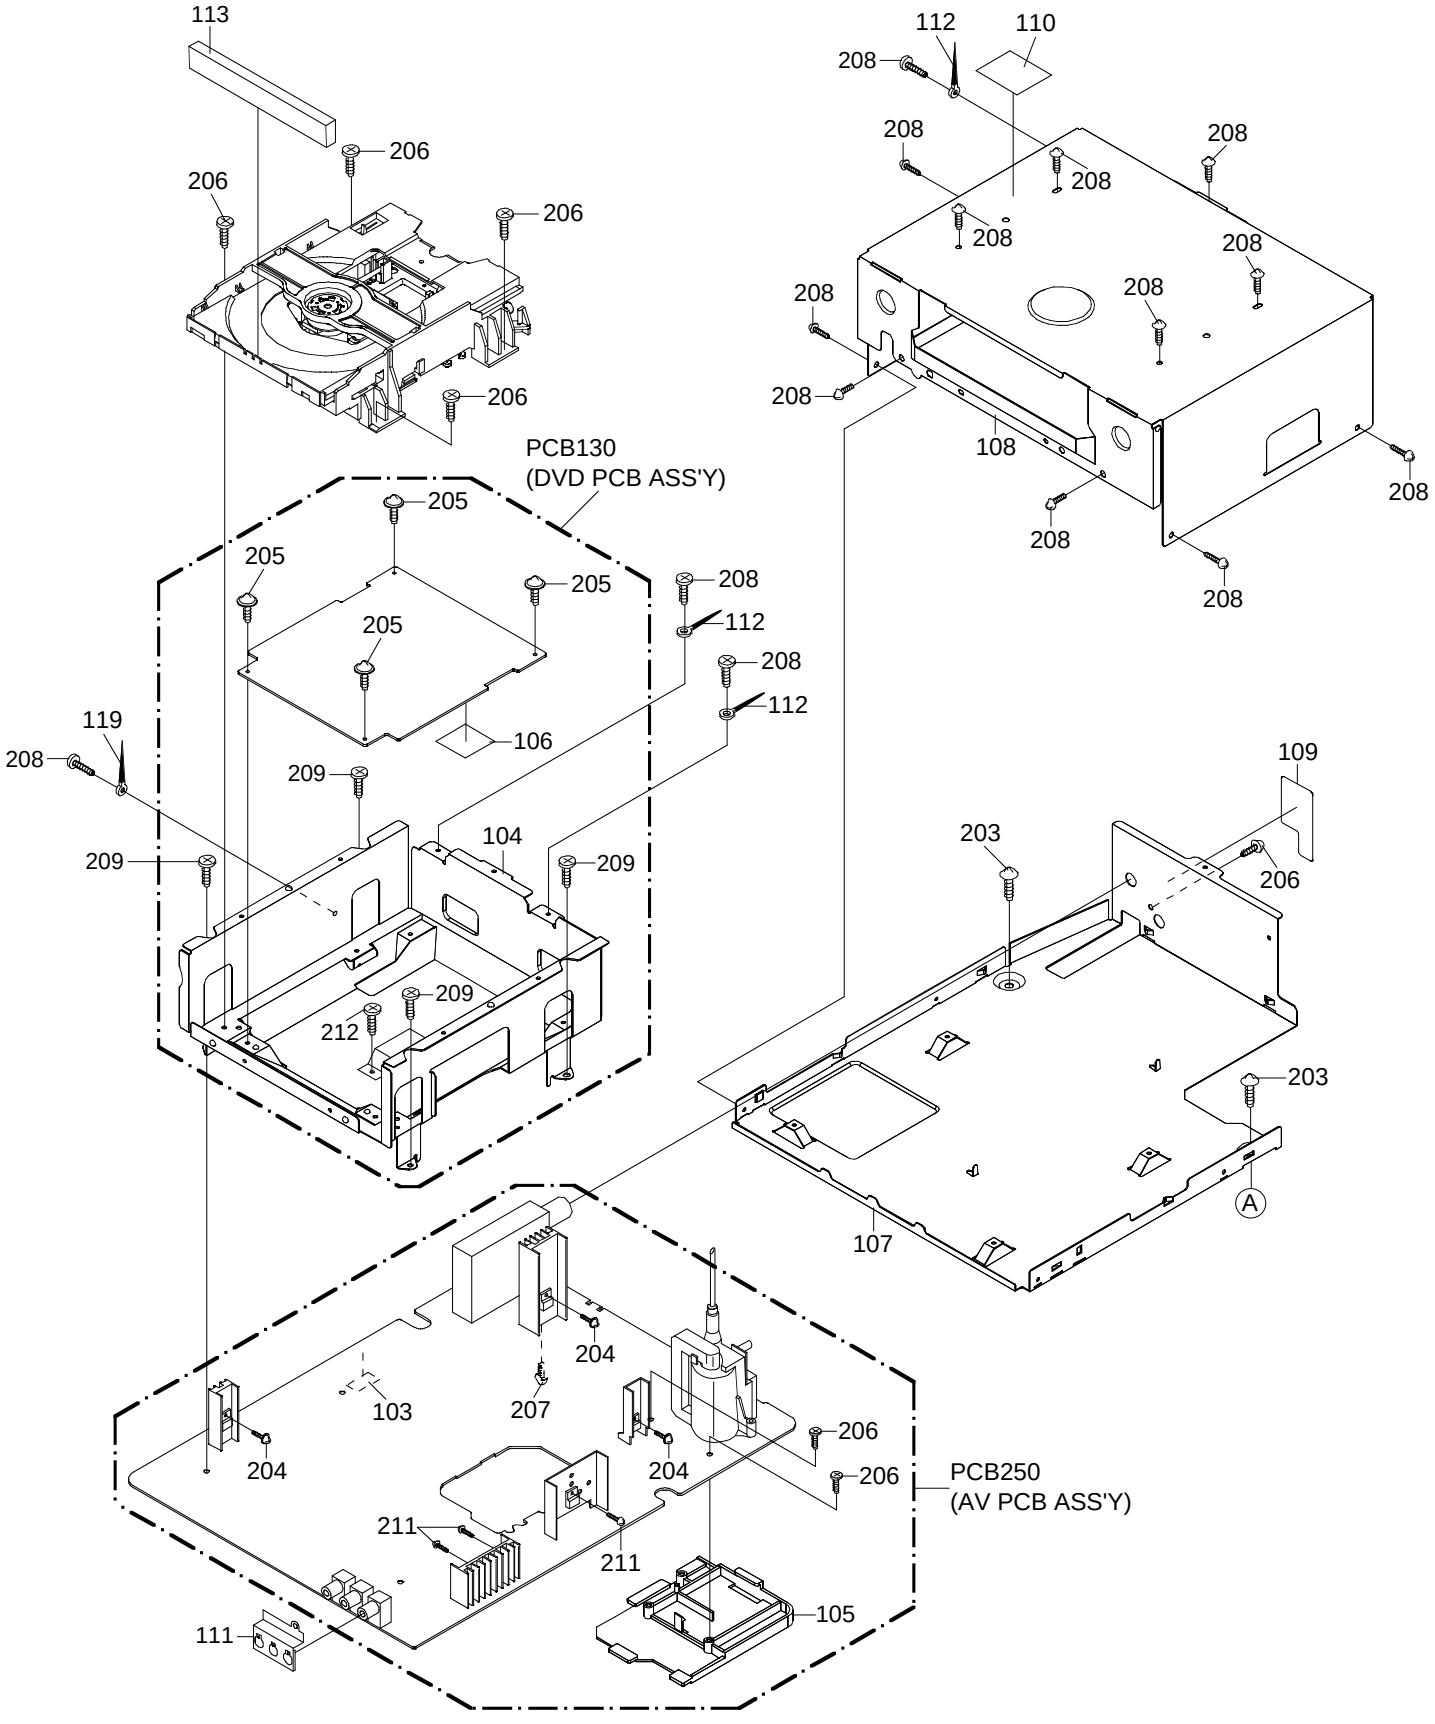

DVD DECK EXPLODED VIEW

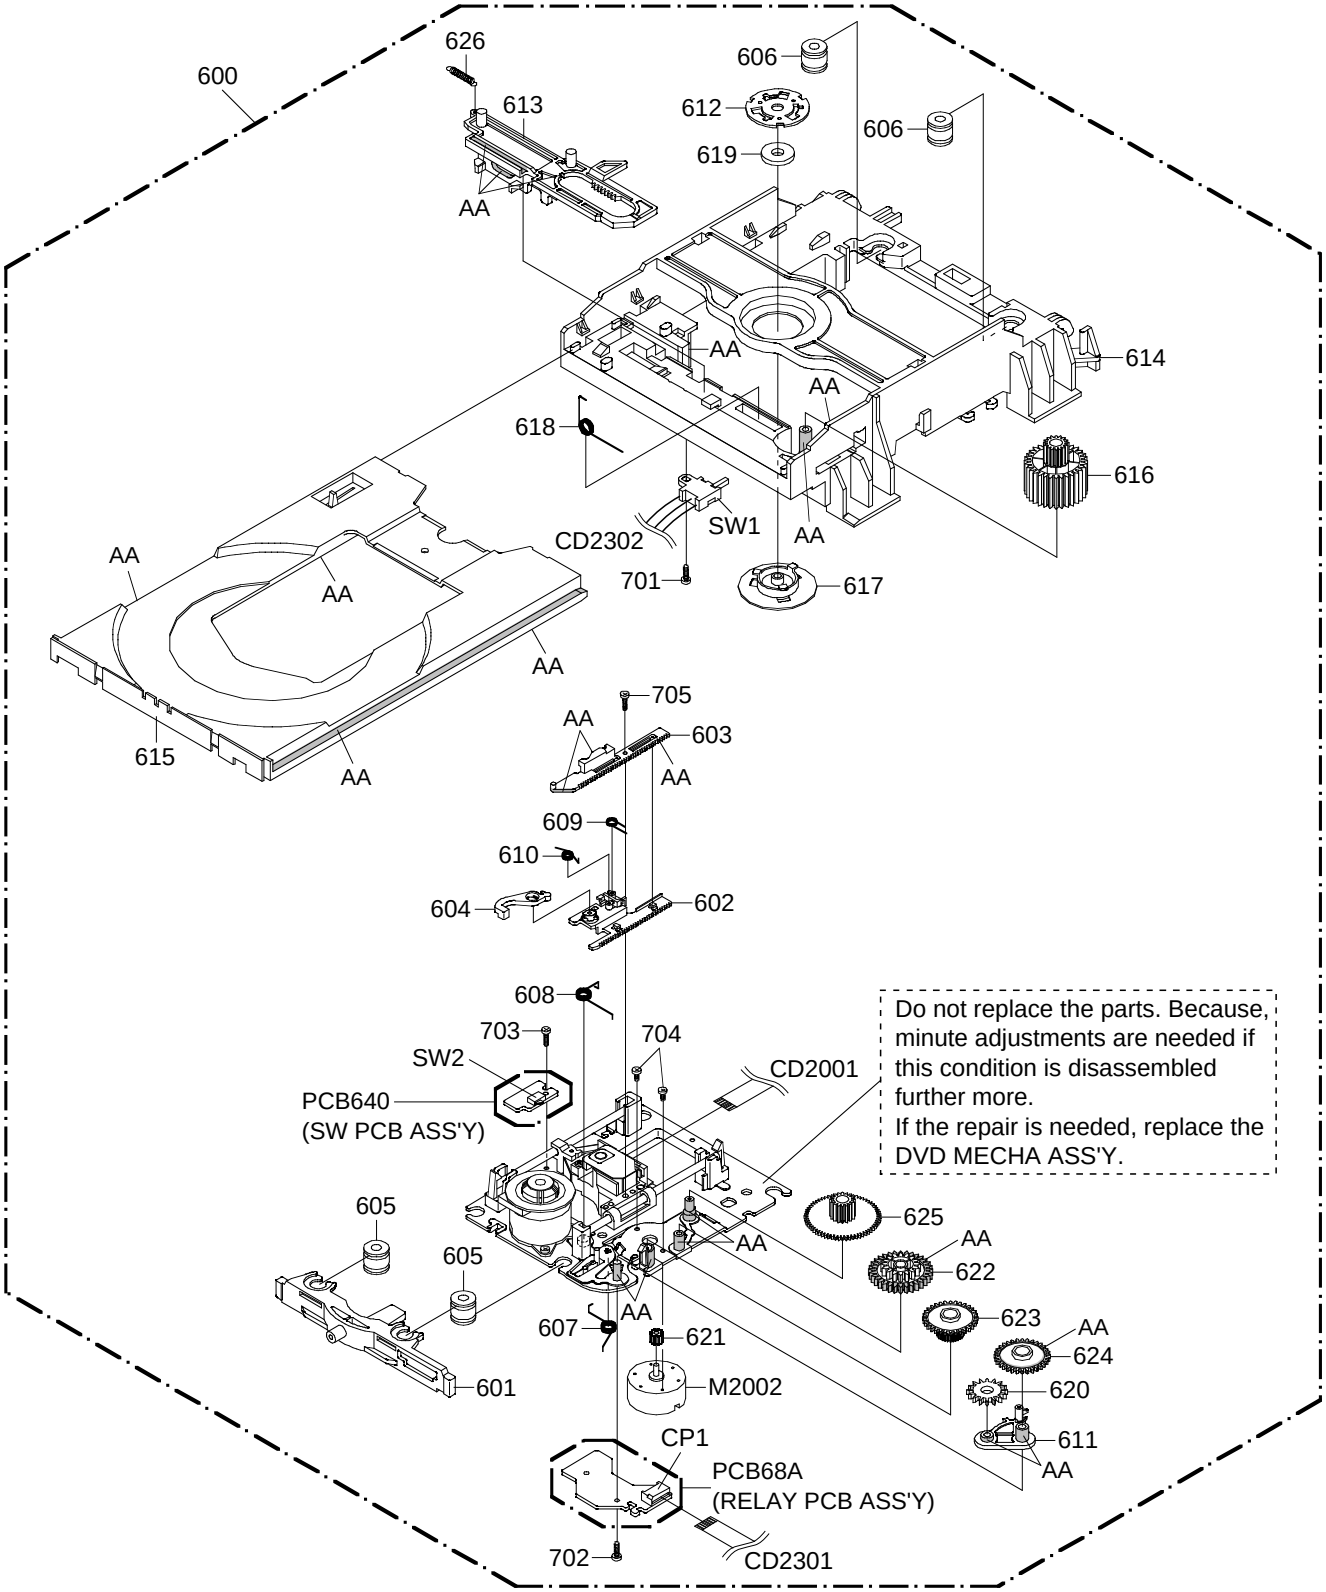

CLASS	MARK
GREASE	AA

NOTE: Applying positions AA for the grease are displayed for this section.
Check if the correct grease is applied for each position.

MECHANICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description		
101	AE000702	A5J101A720	CABINET,FRONT ASSY		
101A	AD301808	701WPJ1168	CABINET,FRONT		
101B	AD301664	713WPA0248	GLASS,LED		
101C	AD301663	713WPA0249	GUIDE,REMOCON		
101D	AD301657	723549A011	BADGE,BRAND		
101E	AD301661	735WPAA493	STOPPER,BUTTON		
101F	AD301658	735WPBA527	BUTTON,FRAME		
102	AE000703	A5J101A740	CABINET,BACK ASSY		
103	AD302081	724WNAA001	SHEET,PVC	5x10xT0.3	
104	AD301807	761WSA0100	ANGLE,DECK		or
	AE000717	761WSA0123	ANGLE,DECK		
105	BZ710699	761WPA0249	HOLDER,FBT		
106	AD302398	7232020746	SHEET,IC		
107	AD301810	702WSA0165	PLATE,BOTTOM		
108	AE000704	702WSA0190	SHIELD,TOP		
109	AD301812	7230007593	SHEET,JACK		
110	AD301688	7260000341	SHEET,CAUTION		
111	AD302077	752WSA0333	SHIELD,JACK		
112	BZ710039	8995034000	CORD CLIP UL CO.		
113	AD301813	712WPJ0793	PLATE,TRAY-FRONT		
114	AD302401	7225490118	SHEET,RATING (FOR USA)		
	AE000705	722549A206	SHEET,RATING (FOR CANADA)		
115	AD300007	7230006755	SHEET,CAUTION (FOR USA)		
	AD300132	7230006818	SHEET,CAUTION (FOR CANADA)		
116	AD301816	7260000343	SHEET,CRT NO.		
117	AD302158	800WR0A002	SHEET,CRT SUPPORT		
118	BZ710258	741WUA0001	SPRING,EARTH		
119	AD300758	899EFBA001	WIRING CLIP		
120	AE000007	7220001107	SHEET,HWC (FOR CANADA ONLY)		
121	AE000006	7220001119	SHEET,CSA WARNING (FOR CANADA ONLY)		
201	BZ710321	8121F50B84	SCREW,TAP TITE(P) FAI20 FLAT	5x28	
202	BZ710035	8117540A64	SCREW,TAPPING(B0) TRUSS	4x16	
203	BZ710320	8117540804	SCREW,TAPPING(B0) TRUSS	4x8	
204	BZ710239	8109I30A04	SCREW,TAP TITE(B) WH7	3x10	
205	BZ710562	8109I30804	SCREW,TAP TITE(B) WH7	3x8	
206	BZ710678	8109230804	SCREW,TAP TITE(B) BIND	3x8	
207	BZ710019	8109630802	SCREW,TAP TITE(B) BRAZIER	3x8	
208	BZ710408	8109630604	SCREW,TAP TITE(B) BRAZIER	3x6	
209	BZ710581	8109230704	SCREW,TAP TITE(B) R BIND	3x7	
210	BZ710030	8110630804	SCREW,TAP TITE(P) BRAZIER	3x8	
211	BZ710018	8107630804	SCREW,TAP TITE(S) BRAZIER	3x8	
212	BZ710337	8107930604	SCREW,CUP(S)	3x6	
---	AE000707	723000C232	SHEET,BAR CODE (FOR USA)		
	AE001481	723000C291	SHEET,BAR CODE (FOR CANADA)		
---	AD302402	791WHA0061	LAMIFILM BAG		
---	AD301669	792WHA0412	PACKAGE,TOP		
---	AE001366	792WHA0478	PACKAGE,BOTTOM		
---	AD301818	793WCD1463	GIFT BOX (FOR USA)		
	AE001482	793WCDB845	GIFT BOX (FOR CANADA)		
---	AE000709	A5J101T975	INSTRUCTION BOOK KIT (FOR USA)		
	AE000710	A5J103A975	INSTRUCTION BOOK KIT (FOR CANADA)		
---	AD302404	J5500817	REGISTRATION CARD		
	AE000120	J5455117	REGISTRATION CARD (FOR CANADA)		
---	AE000711	J5J10101A	INSTRUCTION BOOK (FOR USA)		
	AE000712	J5J10301A	INSTRUCTION BOOK (FOR CANADA)		
---	AE000119	J5455115	SERVICE STATION LIST (FOR CANADA ONLY)		
---	AD302406	JB5UD200	POLYBAG,INSTRUCTION(RED CAUTION)		

DVD DECK REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description		
600	AD301821	A5E601V420D	DVD MECHA ASS'Y	A5E601V420D	
601	AD301822	92P100022A	TRAVERSE HOLDER		
602	AD301823	92P100032A	RACK,FEED 1		
603	AD301824	92P100033A	RACK,FEED 2		
604	AD301825	92P100035A	LEVER,RACK FEED		
605	AD301826	92P200006A	INSULATOR(F)		
606	AD301827	92P200007A	INSULATOR(R)		
607	AD301850	92P300008A	SPRING,CHASSIS		
608	AD301849	92P300005A	SPRING,ARM IDLER		
609	AD301830	92P300006A	SPRING,RACK FEED 2		
610	AD301831	92P300007A	SPRING,RACK FEED 1		
611	AD301848	92P100031A	ARM,IDLER		
612	AD301833	92P000001A	CLAMPER PLATE		
613	AD301834	92P100019A	RACK,LOADING		
614	AD301835	92P100020A	MAIN FRAME M		
615	AD301836	92P100021A	TRAY		
616	AD301837	92P100023A	GEAR,MAIN		
617	AD301838	92P100024A	CLAMPER		
618	AD301839	92P300002A	SPRING,RACK LOADING		
619	AD301840	92P400002A	MAGNET,CLAMPER		
620	AD301847	92P100030A	GEAR,IDLER		
621	AD301842	92P100025A	GEAR,MOTOR		
622	AD301843	92P100026A	GEAR,MIDDLE 1		
623	AD301844	92P100027A	GEAR,MIDDLE 2		
624	AD301845	92P100028A	GEAR,MIDDLE 3		
625	AD301846	92P100029A	GEAR,FEED		
626	AE001179	92P300009A	SPRING,RACK L		
701	BZ710187	8110226804	SCREW,TAP TITE(P) BIND	2.6x8	
702	AD301851	8110120604	SCREW,TAP TITE(P) PAN	2x6	
703	AD301852	8107220504	SCREW,TAP TITE(S) BIND	2x5	
704	AD301853	8140117254	SCREW,PAN	M1.7x2.5 P3	
705	AD301913	8110220804	SCREW,TAP TITE(P) BIND	2x8	
CD2001	AD301855	122H0O1901	CORD JUMPER	2H0O1901	
CD2301	AD301856	122H080701	CORD JUMPER	2H080701	
CD2302	AE000148	06CH232101	CORD CONNECTOR	CH232101	or
	AD301857	06CH232003	CORD CONNECTOR	CH232003	
CP1	AD301858	069JV80180	CONNECTOR PCB SIDE	IMSA-9615S-08C-PP	
⚠ M2002	AD301861	1515S98001	FEED MOTOR	BCD3B81	
PCB640	AD301862	A5E601V640	PCB ASS'Y	VEBA17A	
PCB68A	AD301863	A5E601V680	PCB ASS'Y	VEBA12A	
SW1	AD301866	0515S32001	SWITCH	SSS-23-6	
SW2	AD301867	0500S01032	PUSH LEVER SWITCH	SW1AB-271-10A	

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.		Description
		RESISTORS		
⚠R401	AD301016	R3X28A331J	R,METAL OXIDE	330 OHM 2W
⚠R402	AD300783	R3X181221J	R,METAL OXIDE	220 OHM 1W
⚠R408	BZ210009	R3X28AR82J	R,METAL OXIDE	0.82 OHM 2W
⚠R418	BZ210053	R002T22R2J	RC	2.2 OHM 1/2W
⚠R442	AD300419	R4X5T6223F	R,METAL	22K OHM 1/6W
⚠R444	AD300036	R4X5T6562F	R,METAL	5.6K OHM 1/6W
⚠R445	AD302182	R002T4153J	RC	15K OHM 1/4W
⚠R447	BZ210021	R65582680J	R,FUSE	68 OHM 1/2W
R450	AD301761	R635815R6J	R,FUSE	5.6 OHM 1W
⚠R803	BZ210050	R3X18A123J	R,METAL OXIDE	12K OHM 2W
⚠R805	BZ210050	R3X18A123J	R,METAL OXIDE	12K OHM 2W
⚠R807	BZ210050	R3X18A123J	R,METAL OXIDE	12K OHM 2W
⚠R3803	BZ210206	R002T2155J	RC	1.5M OHM 1/2W
⚠R3806	BZ210080	R0G3K2275K	RC	2.7M OHM 1/2W
⚠R3812	BZ210217	R3X181331J	R,METAL OXIDE	330 OHM 1W
⚠R3817	BZ210188	R5Y2CD010J	R,CEMENT	1 OHM 5W
⚠R3821	AD300659	R3X181R47J	R,METAL OXIDE	0.47 OHM 1W
⚠R3828	BZ210190	R63581R22J	R,FUSE	0.22 OHM 1W
		CAPACITORS		
C313	BZ110101	E5EZF3222M	CE	2200 UF 25V
⚠C402	BZ110195	E02LU8220M	CE	22 UF 100V
⚠C403	BZ110016	E5EZT2471M	CE	470 UF 16V
⚠C407	BZ210176	E02LF3222M	CE	2200 UF 25V
C423	BZ110136	P4J7F3394J	CMPP	0.39 UF 250V PMS
⚠C428	BZ110258	P4N8FJ862H	CMPP	0.0086UF 1.25KV
C431	BZ110204	E0ELFD220M	CE	22 UF 250V
C802	AD300078	C0JBB0713K	CC	0.001 UF 2KV B
C3007	AD302087	E02L05010M	CE	1 UF 50V
⚠C3801	BZ110025	P2122B224M	CMP	0.22 UF 275V ECQUL
C3810	BZ110080	C0J0B0513K	CC	0.001 UF 500V B
C3811	BZ110191	C03L0R7E3K	CC	0.0015UF 2KV R
C3812	BZ110080	C0J0B0513K	CC	0.001 UF 500V B
⚠C3815	BZ110012	E51CGC471M	CE	470 UF 200V
⚠C3816	AD301391	CD39E0MQ3M	CC	0.0047UF 250V
C3818	BZ110101	E5EZF3222M	CE	2200 UF 25V
⚠C3820	BZ110188	E50HU5100M	CE	10 UF 50V
⚠C3822	AD300125	E5EZF2222M	CE	2200 UF 16V
⚠C3823	BZ110032	E5EZF3102M	CE	1000 UF 25V
⚠C3826	BZ110130	E62NFC221M	CE	220 UF 200V
C3827	BZ110101	E5EZF3222M	CE	2200 UF 25V
		DIODES		
D101	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D102	BZ410021	D97U05R61B	DIODE,ZENER	MTZJ5.6B T-77
D103	BZ410021	D97U05R61B	DIODE,ZENER	MTZJ5.6B T-77
D105	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D106	AD300070	D97U01201B	DIODE,ZENER	MTZJ12B T-77
D107	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D401	BZ410043	D2WT011E10	DIODE,SILICON	11E1-EIC
⚠D402	AD300731	D2WXN49370	DIODE,SILICON	1N4937
D403	BZ410019	D97U03001B	DIODE,ZENER	MTZJ30B T-77
D404	BZ410019	D97U03001B	DIODE,ZENER	MTZJ30B T-77
D405	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D406	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D408	BZ410037	D97U03301B	DIODE,ZENER	MTZJ33B T-77
D409	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D410	BZ410022	D97U06R81B	DIODE,ZENER	MTZJ6.8B T-77
D411	AD300731	D2WXN49370	DIODE,SILICON	1N4937
D413	AD300731	D2WXN49370	DIODE,SILICON	1N4937
D414	BZ410085	D2WXN40050	DIODE,SILICON	1N4005-EIC
⚠D416	BZ410020	D97U05R11B	DIODE,ZENER	MTZJ5.1B T-77
D603	BZ410085	D2WXN40050	DIODE,SILICON	1N4005-EIC
D801	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D802	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D803	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D2001	BZ410120	DDARDS1210	DIODE,SILICON	KDS121RTK
D2002	BZ410121	DDARDS1200	DIODE,SILICON	KDS120RTK
D2201	BZ410087	0021E2Q140	LED	LTL-1CHEE-002A
D3003	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D3005	BZ410085	D2WXN40050	DIODE,SILICON	1N4005-EIC
D3006	BZ410085	D2WXN40050	DIODE,SILICON	1N4005-EIC
D3007	BZ410021	D97U05R61B	DIODE,ZENER	MTZJ5.6B T-77

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description		
		DIODES			
D3008	BZ410085	D2WXN40050	DIODE,SILICON	1N4005-EIC	
D3009	BZ410064	D97U03R91B	DIODE,ZENER	MTZJ3.9B T-77	
D3801	BZ410021	D97U05R61B	DIODE,ZENER	MTZJ5.6B T-77	
D3802	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77	
D3803	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77	
D3804	AD300671	D97U01801B	DIODE,ZENER	MTZJ18B T-77	
D3805	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77	
D3806	AD301703	D2W0N49370	DIODE,SILICON	1N4937-B-EIC	
D3807	AD300731	D2WXN49370	DIODE,SILICON	1N4937	
⚠D3808	BZ410062	D2WTRM11C0	DIODE,SILICON	RM11C-EIC	
⚠D3809	BZ410062	D2WTRM11C0	DIODE,SILICON	RM11C-EIC	
D3810	AD300671	D97U01801B	DIODE,ZENER	MTZJ18B T-77	
D3811	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77	
⚠D3815	BZ410062	D2WTRM11C0	DIODE,SILICON	RM11C-EIC	
⚠D3816	BZ410062	D2WTRM11C0	DIODE,SILICON	RM11C-EIC	
⚠D3817	BZ410115	D2LKB340L0	DIODE,SCHOTTKY	SB340L-6737	
⚠D3818	AD300731	D2WXN49370	DIODE,SILICON	1N4937	
⚠D3819	BZ410010	D28T21DQN9	DIODE,SCHOTTKY	21DQ09N-TA2B1	
⚠D3820	BZ410010	D28T21DQN9	DIODE,SCHOTTKY	21DQ09N-TA2B1	
⚠D3821	BZ410080	D2WXRU2AM0	DIODE,SILICON	RU2AM-EIC	
D3822	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77	
⚠D3823	BZ410115	D2LKB340L0	DIODE,SCHOTTKY	SB340L-6737	
D3826	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77	
D3827	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77	
D3828	BZ410067	D97U02R21B	DIODE,ZENER	MTZJ2.2B T-77	
⚠D3830	BZ410010	D28T21DQN9	DIODE,SCHOTTKY	21DQ09N-TA2B1	
D3831	BZ410064	D97U03R91B	DIODE,ZENER	MTZJ3.9B T-77	
D8501	BZ410119	DDDRL41480	DIODE,SILICON	MCL4148	
D8502	BZ410119	DDDRL41480	DIODE,SILICON	MCL4148	
D8503	BZ410119	DDDRL41480	DIODE,SILICON	MCL4148	
D8504	BZ410119	DDDRL41480	DIODE,SILICON	MCL4148	
D8505	BZ410119	DDDRL41480	DIODE,SILICON	MCL4148	
D8506	BZ410119	DDDRL41480	DIODE,SILICON	MCL4148	
D8507	BZ410119	DDDRL41480	DIODE,SILICON	MCL4148	
D8508	BZ410119	DDDRL41480	DIODE,SILICON	MCL4148	
D8510	BZ410119	DDDRL41480	DIODE,SILICON	MCL4148	
		ICS			
IC101	AD301763	I55D06072A	IC	OEC6072A	
IC103	BZ611057	IC7J0311A0	IC	R3111N311A/C-TR	
IC199	AE000681	A5J101A255	IC (FOR USA)	S-24C04BDP-LA	
IC199	AE000682	A5J103A255	IC (FOR CANADA)	S-24C04BDP-LA	
⚠IC302	AD302184	I0FSP7522N	IC	AN7522N	
⚠IC401	BZ611053	I01TD55220	IC	AN5522	
IC601	AD301765	I03FC63190	IC	LA76319M-MPB-E	
IC902	AD300059	I01FF58290	IC	AN5829S	
IC2001	AD302391	I5PKL63160	IC	STM6316ATXXZ	
IC2301	BZ611126	I03F065600	IC	LA6560	
IC2303	AD301770	I07E00358F	IC	BA10358F-E2	
IC2304	AD301770	I07E00358F	IC	BA10358F-E2	
⚠IC3001	BZ611015	I1KA97805A	IC	KIA7805API	
IC3002	BZ611015	I1KA97805A	IC	KIA7805API	
IC3005	BZ611033	I1KA97809A	IC	KIA7809API	
⚠IC3800	AD301771	000220001W	PHOTO COUPLER	PS2561L1-1-V(W)	
IC4002	AD302392	I5PK055890	IC	STM5589AVA	
IC4003	AD301774	I5CF0CU040	IC	SN74AHCU04PWR	
IC4007	AE000526	IF8J064007	IC	IS42S16400-7T	
IC4012	AE000527	I5PJ060ET9	IC	M29W160ET90N6	
IC4201	BZ611074	I0QF045800	IC	NJM4580M	or
	AE001295	I0QJ045800	IC	NJM4580M(TE1)	
IC8501	BZ611130	I0GF9XZ010	IC	PQ070XZ01ZP	
IC8502	AD301777	I17F0742K0	IC	PCM1742KE/2K	
IC8504	BZ611130	I0GF9XZ010	IC	PQ070XZ01ZP	
		TRANSISTORS			
Q101	BZ510108	TAAA1504SY	TRANSISTOR,SILICON	KTA1504S_Y_RTK	
Q105	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK	
Q301	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK	
Q302	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK	
Q305	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK	
⚠Q401	BZ510004	TA3T016240	TRANSISTOR,SILICON	2SA1624-AA	
⚠Q405	BZ510097	TCAT03227Y	TRANSISTOR,SILICON	KTC3227_Y-AT	
⚠Q406	AD301779	TD3Q021400	TRANSISTOR,SILICON	TT2140LS-YBC11	

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description	
		TRANSISTORS		
Q601	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q602	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q605	BZ510090	TPAAB05001	COMPOUND TRANSISTOR	KRA102SRTK
⚠Q804	BZ510091	TCA0042170	TRANSISTOR,SILICON	KTC4217(O,Y)
⚠Q805	BZ510091	TCA0042170	TRANSISTOR,SILICON	KTC4217(O,Y)
⚠Q806	BZ510091	TCA0042170	TRANSISTOR,SILICON	KTC4217(O,Y)
Q2001	BZ510112	T67J1036K0	TRANSISTOR,SILICON	2SA1036KT146
Q2002	BZ510001	T6YJ1037K0	TRANSISTOR,SILICON	2SA1037AKT146R,S
Q2003	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q2004	BZ510113	T27T030180	FET	2SK3018
Q2005	BZ510113	T27T030180	FET	2SK3018
Q2006	BZ510112	T67J1036K0	TRANSISTOR,SILICON	2SA1036KT146
Q2007	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q2008	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q2201	BZ510067	TNAAC05002	COMPOUND TRANSISTOR	KRC103SRTK
Q2301	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q2302	BZ510108	TAAA1504SY	TRANSISTOR,SILICON	KTA1504S_Y_RTK
Q2303	BZ510001	T6YJ1037K0	TRANSISTOR,SILICON	2SA1037AKT146R,S
Q2304	BZ510071	TNAAB05003	COMPOUND TRANSISTOR	KRC102SRTK
Q2305	BZ510108	TAAA1504SY	TRANSISTOR,SILICON	KTA1504S_Y_RTK
Q3000	BZ510057	TAAT01281Y	TRANSISTOR,SILICON	KTA1281_Y
Q3001	BZ510071	TNAAB05003	COMPOUND TRANSISTOR	KRC102SRTK
⚠Q3003	AD301780	TCA0043690	TRANSISTOR,SILICON	KTC4369(O,Y)
Q3004	BZ510057	TAAT01281Y	TRANSISTOR,SILICON	KTA1281_Y
Q3005	BZ510105	TCAT03209Y	TRANSISTOR,SILICON	KTC3209_Y-AT
Q3006	BZ510070	TCAT032034	TRANSISTOR,SILICON	KTC3203_Y-AT
Q3007	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q3008	BZ510070	TCAT032034	TRANSISTOR,SILICON	KTC3203_Y-AT
Q3009	BZ510105	TCAT03209Y	TRANSISTOR,SILICON	KTC3209_Y-AT
Q3010	BZ510057	TAAT01281Y	TRANSISTOR,SILICON	KTA1281_Y
Q3800	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
Q3802	BZ510070	TCAT032034	TRANSISTOR,SILICON	KTC3203_Y-AT
⚠Q3803	BZ510093	TJXG5NC500	FET	STP5NC50FP
Q4001	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q4002	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q4003	BZ510108	TAAA1504SY	TRANSISTOR,SILICON	KTA1504S_Y_RTK
Q4201	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q4203	BZ510088	TNAAD05001	COMPOUND TRANSISTOR	KRC104SRTK
Q4209	BZ510067	TNAAC05002	COMPOUND TRANSISTOR	KRC103SRTK
Q4210	BZ510107	TPAAA05001	COMPOUND TRANSISTOR	KRA101SRTK
Q4211	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q4212	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q8501	BZ510108	TAAA1504SY	TRANSISTOR,SILICON	KTA1504S_Y_RTK
Q8502	BZ510108	TAAA1504SY	TRANSISTOR,SILICON	KTA1504S_Y_RTK
Q8503	BZ510108	TAAA1504SY	TRANSISTOR,SILICON	KTA1504S_Y_RTK
Q8505	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q8506	BZ510071	TNAAB05003	COMPOUND TRANSISTOR	KRC102SRTK
Q8507	BZ510071	TNAAB05003	COMPOUND TRANSISTOR	KRC102SRTK
Q8508	BZ510071	TNAAB05003	COMPOUND TRANSISTOR	KRC102SRTK
		COILS &TRANSFORMERS		
L001	BZ310156	021375101K	COIL	100 UH
L101	BZ310030	021LA6560K	COIL	56 UH
L401	BZ310004	021679472K	COIL	4.7 MH
L601	BZ310041	02167F101J	COIL	100 UH
L602	BZ310156	021375101K	COIL	100 UH
L801	AD301781	021673560K	COIL	56 UH
L902	BZ310041	02167F101J	COIL	100 UH
L904	BZ310041	02167F101J	COIL	100 UH
L2001	AE000529	0216S4100J	COIL	10 UH
L2002	AE000529	0216S4100J	COIL	10 UH
L2004	AE000095	02167F2R7J	COIL	2.7 UH
L3000	AD301785	02167E100K	COIL	10 UH
L3001	AD301785	02167E100K	COIL	10 UH
⚠L3800	BZ310076	028R140031	COIL,DEGAUSS	8R140031
⚠L3801	AD301786	029T000110	COIL,LINE FILTER	1R1A223F28
L3803	BZ310181	02A6B2E0A1	CORE,FERRITE	HF70T22*10*14
L4001	BZ310039	02167F220J	COIL	22 UH
L4002	BZ310039	02167F220J	COIL	22 UH
L4003	BZ310039	02167F220J	COIL	22 UH
L4004	BZ310039	02167F220J	COIL	22 UH
L4201	BZ310041	02167F101J	COIL	100 UH

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description	
		COILS &TRANSFORMERS		
L4202	BZ310041	02167F101J	COIL	100 UH
L8501	BZ310191	02167F2R2J	COIL	2.2 UH
L8502	BZ310191	02167F2R2J	COIL	2.2 UH
L8503	BZ310191	02167F2R2J	COIL	2.2 UH
L8504	BZ310118	02AHB9A972	CORE,FERRITE	W5T29X7.5X19
L8507	BZ310191	02167F2R2J	COIL	2.2 UH
L8509	BZ310191	02167F2R2J	COIL	2.2 UH
T401	BZ310157	045009003J	TRANS,HORIZONTAL DRIVE	ETH09K14BZ
⚠T3800	AD301787	0481291074	TRANSFORMER,SWITCHING	81291074
		JACKS		
⚠J801	AD301147	066F120018	SOCKET,CATHODE RAY TUBE	ISMS01S
⚠J2201	BZ614361	060J131015	HEADPHONE JACK	MSJ-2000
J2202	BZ614146	060G421016	RCA JACK	HTJ-032-05AY
J2203	BZ614147	060G421017	RCA JACK	HTJ-032-05AW
J2204	BZ614280	060G421020	RCA JACK	HTJ-032-05AR
J4201	BZ614400	060J401082	RCA JACK	MSP-251V-05PBSN
		SWITCHES		
SW2213	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2214	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2215	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2216	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2217	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2218	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2219	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2220	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2221	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2223	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
		VARIABLE RESISTORS		
VR401	BZ210255	V1K62H3BT8	VOLUME,SEMI FIXED	NVG6THTB222
VR3800	BZ210265	V1K63Q2BTE	VOLUME,SEMI FIXED	NVG6TLTAB471
		P.C.BOARD ASSEMBLIES		
PCB110	AE000683	A5J101A110	PCB ASS'Y	TCB412A
PCB130	AE000684	A5J101A130	PCB ASS'Y	VMC297A
PCB250	AE000685	A5J101A250	PCB ASS'Y (FOR USA)	TMB555A
PCB250	AE000686	A5J103A250	PCB ASS'Y (FOR CANADA)	TMB555A
		MISCELLANEOUS		
B301	BZ310129	024HT03564	CORE,BEADS	W4BRH3.5X6X1.0
B401	BZ310121	024HT03553	CORE,BEADS	W5RH3.5X5X1.0
B2001	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04
B2002	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04
B2003	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04
B2004	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04
B2005	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04
B2301	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04
B3800	BZ310121	024HT03553	CORE,BEADS	W5RH3.5X5X1.0
B4002	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04
B4004	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04
B4201	BZ310121	024HT03553	CORE,BEADS	W5RH3.5X5X1.0
B8501	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04
B8502	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04
B8503	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04
B8505	BZ310122	024HT03563	CORE,BEADS	W4BRH3.5X6X1.0X2
BL001	BZ310014	023C00022A	COIL,BALUN	HPN-01
BT001	AE000012	1412004008	BATTERY,MANGAN	R03(AB)E_2P_G
BT002	AE000012	1412004008	BATTERY,MANGAN	R03(AB)E_2P_G
CD301	BZ614324	06CU12414A	CORD,CONNECTOR	CU12414A
CD302	BZ614324	06CU12414A	CORD,CONNECTOR	CU12414A
CD802	BZ614404	WDL6032038	FLAT CABLE AWM2468 A	WG26 6C BLACK 320MM
CD803	BZ614447	WBL6022038	FLAT CABLE AWM2468 A	WG26 4C BLACK 220MM
CD805	BZ614175	06CU82039A	CORD,CONNECTOR	SM1098-009-1A
CP101	BZ614458	069S290629	CONNECTOR PCB SIDE	A2001WV2-9P
CP301	BZ614268	069W120029	CONNECTOR PCB SIDE	TID-X02P-M1
CP302	BZ614268	069W120029	CONNECTOR PCB SIDE	TID-X02P-M1
CP401	BZ614303	069S450089	CONNECTOR PCB SIDE	A1561WV2-A5P
CP801	BZ614269	069S320010	CONNECTOR PCB SIDE	A2361WV2-2P
⚠CD3800	AD301791	120R415902	CORD,AC BUSH	0R415902
CD8501	AD301792	122H0C1001	CORD,JUMPER	2H0C1001
CD8505	BZ614299	06CU2B2001	CORD,CONNECTOR	CU2B2001
CP2001	AD302396	069JYOT099	CONNECTOR PCB SIDE	IMSA-9631S-24Y901
CP2301	AD301858	069JV80180	CONNECTOR PCB SIDE	IMSA-9615S-08C-PP
CP2302	AD301795	069S230639	CONNECTOR PCB SIDE	A2001WR2-3P

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description	
		MISCELLANEOUS		
⚠CP3800	AD300687	069S420110	CONNECTOR PCB SIDE	A1561WV2-2P
CP8001	BZ614214	069S2B0629	CONNECTOR PCB SIDE	A2001WV2-11P
CP8002	AD301797	069J7C0029	CONNECTOR PCB SIDE	IMSA-9604S-12Z14
CP802A	BZ614333	067U006049	WIRE HOLDER	B2013H02-6P
CP802B	BZ614333	067U006049	WIRE HOLDER	B2013H02-6P
CP803A	BZ614334	067U004029	WIRE HOLDER	B2013H02-4P
CP803B	BZ614334	067U004029	WIRE HOLDER	B2013H02-4P
CP8502	AD301798	069J7C0019	CONNECTOR PCB SIDE	IMSA-9604S-12Z13
CUS011	BZ710149	800WFAA008	CUSHION C	
EL001	BZ614044	124120301A	EYE LET	XRY20X30BD
EL002	BZ614043	124116281A	EYE LET	XRY16X28BD
F3800	BZ614504	081PC05005	FUSE	51MS050L
⚠FB401	AD301650	043214037F	TRANSFORMER,FLYBACK	FNI-14B001
FH3800	BZ614005	06710T0006	HOLDER,FUSE	EYF-52BC
FH3801	BZ614005	06710T0006	HOLDER,FUSE	EYF-52BC
OS2202	BZ614199	077Q004017	REMOTE RECEIVER	PIC-37243SR
PH3800	BZ614444	069D01001A	CONNECTOR PCB SIDE	003P-2100
PH3801	BZ614444	069D01001A	CONNECTOR PCB SIDE	003P-2100
⚠SP351	BZ614200	070C533019	SPEAKER	SG04D11BNA
⚠SP352	BZ614200	070C533019	SPEAKER	SG04D11BNA
TM101	AD301799	076D0GD010	TRANSMITTER	TOT201N09160
⚠TU001	AE000273	0163300005	RF UNIT	115-V-K015AR_B
⚠TH3800	BZ410079	DF5EL3R0A0	DEGAUSS ELEMENT	ZPB45BL3R0A
⚠V801	AD301801	098Q1404D1	CRT W/DY	A34AGT13X98(DL)
X101	BZ613019	1002T01606	CERAMIC OSCILLATOR	CSTLS16M0X53-A0
X601	AD302003	100CT3R505	CRYSTAL	HC-49/C
X2001	AD301802	100BT02003	CRYSTAL	HC-49U/S
X4001	AD301803	100BT02701	CRYSTAL	HC-49U/S

RESISTOR

RC..... CARBON RESISTOR

CAPACITORS

CC..... CERAMIC CAPACITOR
CE..... ALUMI ELECTROLYTIC CAPACITOR
CP..... POLYESTER CAPACITOR
CPP..... POLYPROPYLENE CAPACITOR
CPL..... PLASTIC CAPACITOR
CMP..... METAL POLYESTER CAPACITOR
CMPL..... METAL PLASTIC CAPACITOR
CMPP..... METAL POLYPROPYLENE CAPACITOR

TOSHIBA CORPORATION
1-1, SHIBAURA 1-CHOME, MINATO-KU, TOKYO 105-8001, JAPAN